



Advent Air TROUBLE SHOOTING GUIDE

1. Unit does not run: no fan or compressor

- a. Is circuit breaker in RV tripped?
- b. Is circuit breaker at power source tripped?
- c. Is Main power cord plugged in
- d. Make sure wire harness to upper unit is plugged in and locked proper

2. Fan operates, compressor won't come on

- a. Check thermostat settings
- b. Check incoming voltage

3. Fan operates; compressor tries to start cycles off, hums

- a. Check incoming voltage while compressor is trying to run
- b. Check for loose connections

4. Fan runs; compressor runs for a short period and cycles off

- a. Check voltage
- b. Are there additional extension cords being used?
- c. If extension cord is used, is it proper gage wire

5. Compressor runs; no fan; (cool or Heat mode)

- a. Remove outer shroud and see if fan motor will spin freely

6. Inside coil freezes up

- a. Inspect return filter and clean if necessary
- b. Check for recirculation of discharge air

7. Poor heating or cooling with reduced air flow

- a. Inspect return air filter, clean if necessary
- b. Make sure air divider between return and supply has not come loose
- c. On a ducted system, inspect duct runs with flashlight and mirror for collapsed or a blocked duct run

Troubleshooting Guide – Page 2

8. Poor cooling

- a. Inspect return air filter and evaporator coil, clean if needed
- b. Remove outer shroud and inspect condenser coil for debris on inside of coil

9. Excessive vibration with fan running

- a. Remove outer shroud and inspect fan blades for mud dauber or missing blade

10. Water leaks into RV when unit is off

- a. Inspect roof gasket thru return air vent for leak
- b. Check torque on mounting bolts
- c. Inspect roof for low spot at 14 X 14 opening

11. Water leaks into RV while unit is running

- a. Remove outer shroud and inspect condensation drain pan for restriction
- b. Remove return air filter and inspect evaporator for ice buildup
- c. Inspect freeze control on ducted unit for proper location in coil

12 Thermostat has no display on ducted units

- a. Check 12 volt fuses for blown fuse
- b. Check 12 volt wiring for loose connection at relay kit and to thermostat



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.