

CLIMATE CONTROL

Get the app



Download the iN-Command® app to turn your mobile device into the definitive RV Controller.



Introduction

iN-Command® allows control of up to 4 Climate Control zones and for the scheduling of Climate Control functions to be active.

From the Climate Control page, you can control the Heating, Ventilation, and Air Conditioning functions of your RV.

You can access the Climate Control page by pressing on Climate on the Home Page of the mobile app and DC.





Vent Fans / AC Fans

The **VENT FANS** for each zone can be opened, closed, and change fan speed.

Fan Only Mode

To have just the AC fan operating in a zone, select the desired Zone, then press **MODE BUTTON** to switch to fan mode.

Press the **FAN BUTTON** to switch between Low and High fan speeds.

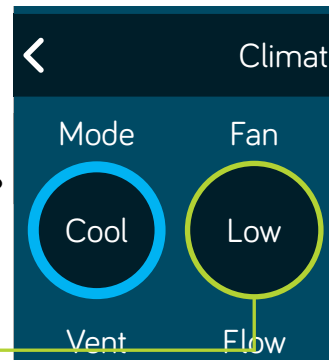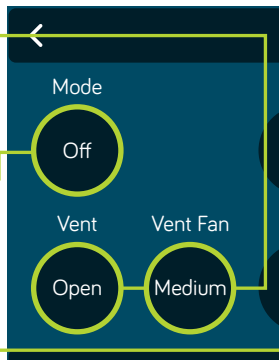

Dometic vent fans do not have an "off while open" function. Vent fans turn on at high when vents first open, regardless of settings.


RVP vent fans will operate while vents are closed.

AC Cooling


Select the desired zone. Press the **MODE BUTTON** to switch to "Cool" mode.

Use the **SET UP** and **SET DOWN** buttons to set the desired temperature for the zone.

Press the **FAN BUTTON** to switch between Low, High, and Auto fan speeds.

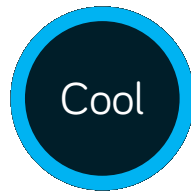

The vent fan will automatically close when the AC first turns on.

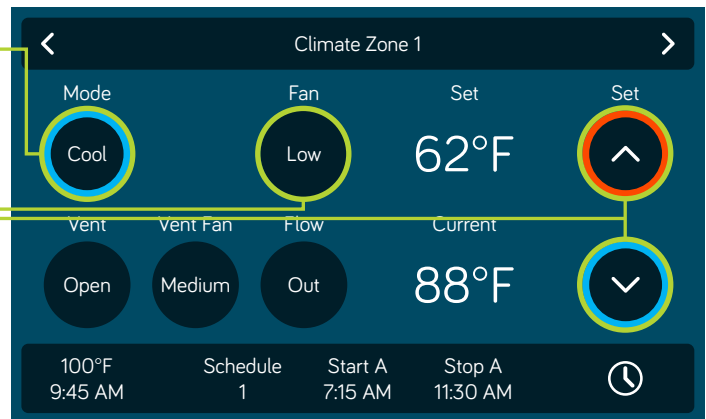

Heating

Select the desired zone. Press the **MODE BUTTON** to switch to "Heat" mode.

Press the **SOURCE** button to select between Gas and Electric.

(Available heat sources will depend on floor plan)


Press the **FAN BUTTON** to switch between Off, Low, High, and Auto.

("Off" is not available while using Electric heat source)



Dometic AC fans, while in heat mode, turn off when set to "Auto" speed. When the fan speed is set to "Off", the AC fans run at low speed.

When gas heat is selected in one zone, all zones will be heated.

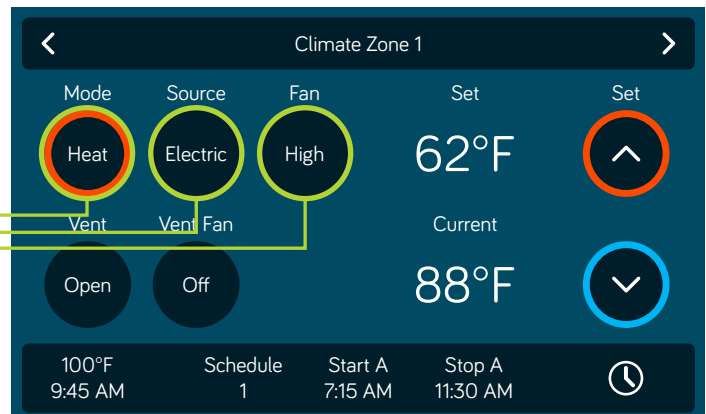


Auto Mode will automatically switch between Cool and Heat modes to reach the desired set temperature. (Heat Mode is only available in zones with Heat Mode selected on Floor Plan. Not all Floor Plans support Heat Mode. In a zone that supports both gas and electric heat sources, electric will run first – if the desired temperature cannot be met with electric, gas will then activate.)

Select the desired Zone. Press the **MODE BUTTON** to switch to "Auto" mode.


Use the **SET UP** and **SET DOWN** buttons to set the temperature for the zone.

Press the **FAN BUTTON** to switch between Off, Low, High, and Auto.

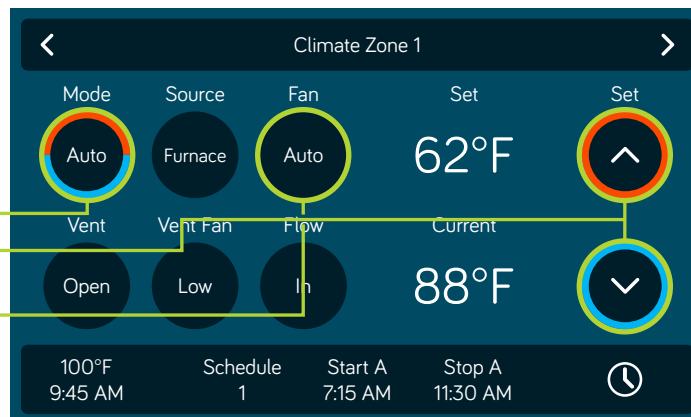


The Schedule function allows you to set a temperature and choose start and stop times for when you want the Climate Control function to operate.

- 1.) Press the **CLOCK** icon on the Climate Control Home Page to enter the Schedule page.

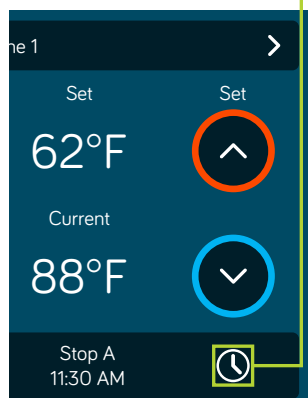

Climate Control Home Page


- 2.) Use the **SET UP / SET DOWN** arrows to set the desired temperature.

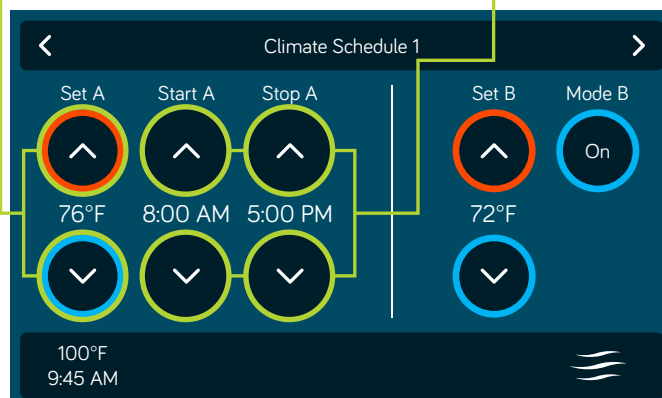

Schedule Settings

- 3.) Use the **START / STOP** arrows to set the time frame that you want the Climate Control function to operate.

- 4.) Choose "Schedule 1" or "Schedule 2" on the Climate Zone Home Page.

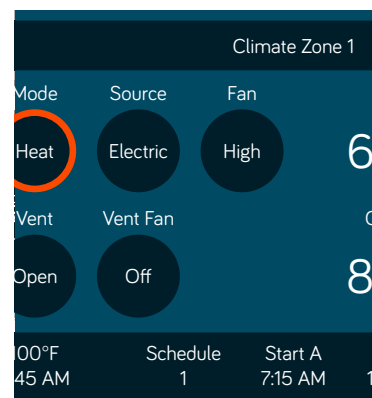

Climate Control Home Page

For owner's manual and software updates please visit <https://www.in-command.net/control-systems>.

For further assistance, please call 877-845-8750.

Scan for
Owner's Manual
and other resources



Patent # (D776,068)
Patent # (D762,644)



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.