



Lubrication Instructions

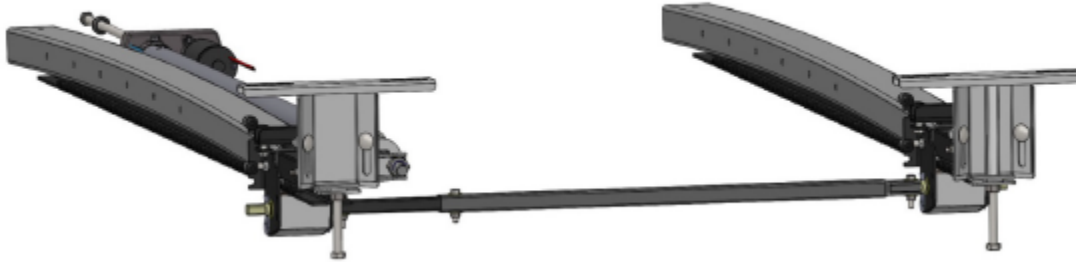

1. Fully extend the slide-out room.
2. Wipe the TOP of the slide-out arms free of any dirt or debris.
3. Apply the lube directly to the top of the slide-out arms. We recommend using a wax based, self-cleaning, lubrication, such as [DuPont Chain-Saver Wax-Based Chain lube](#).
4. Cycle the room one complete time while spraying the lubrication on/into the top nylon wear block as needed. (Photos on pages 2 & 3).
5. Complete step #4 as needed until the slide-out is operating smooth and quietly. In certain circumstances 24-hour dry time may be required to eliminate excessive noise and/or vibration.

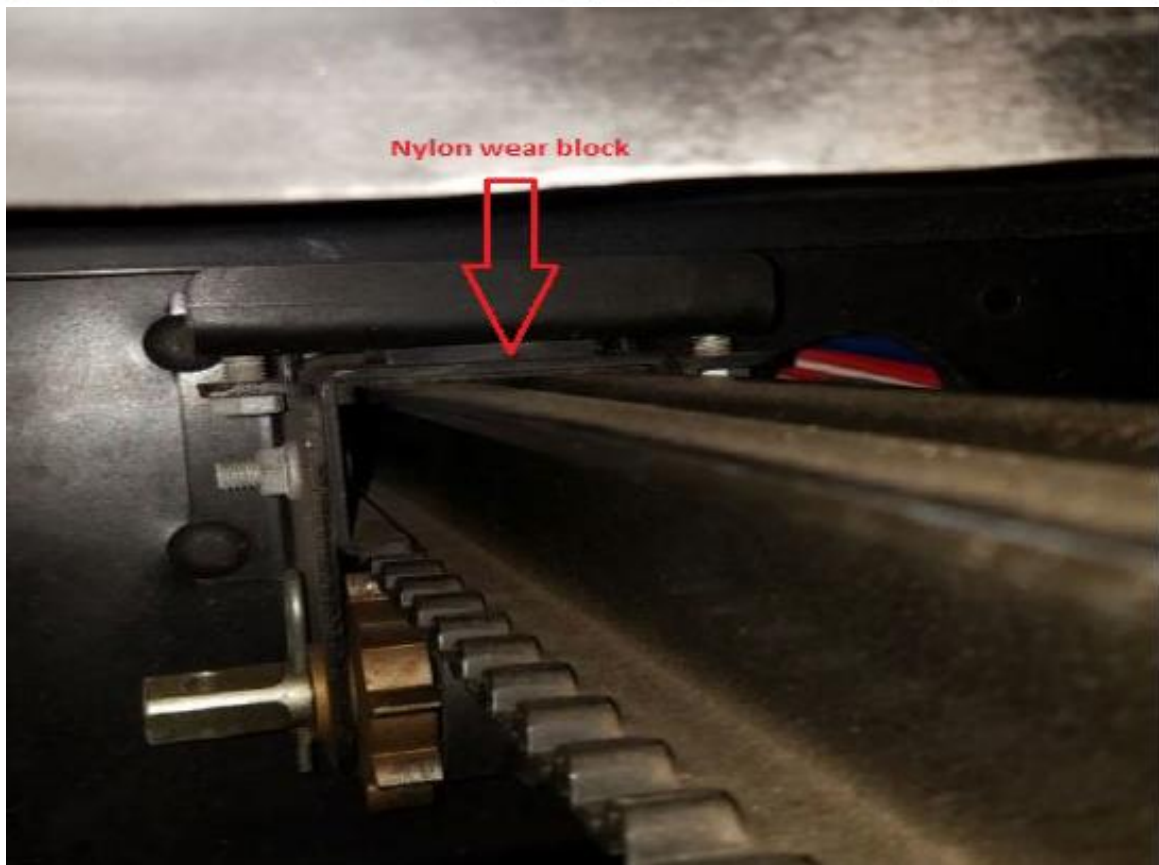



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.