




powered by  **BM PRO**

HELP GUIDE


ANDROID - APP PINNING



CONTROLLER

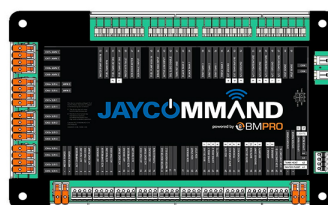

NODE

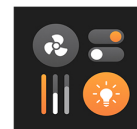

APP



SWITCH

SYSTEM COMPONENTS


PINNING MODE SPECIFIC:

- User can disable Pinning mode
- Home and Overview buttons are showing but are single purpose.
 - Home button press shows a message toast info on how to disable pinning mode.
 - Overview held down in combination with Back button disables pinning mode.
- When pinning mode is disabled it works as normal:
 - Home and Overview buttons work as usual
 - User can leave the app and access settings, play store and all the rest...
 - The only difference is that the user will not be able to uninstall the app directly (since it is the "device admin"). To uninstall the app, user would have to go to Settings → Security → unable up from being the administrator → Uninstall


HOW TO PIN (MANUALLY)

Proposed solution will be auto pinned on Controller boot-up


How to Pin an app

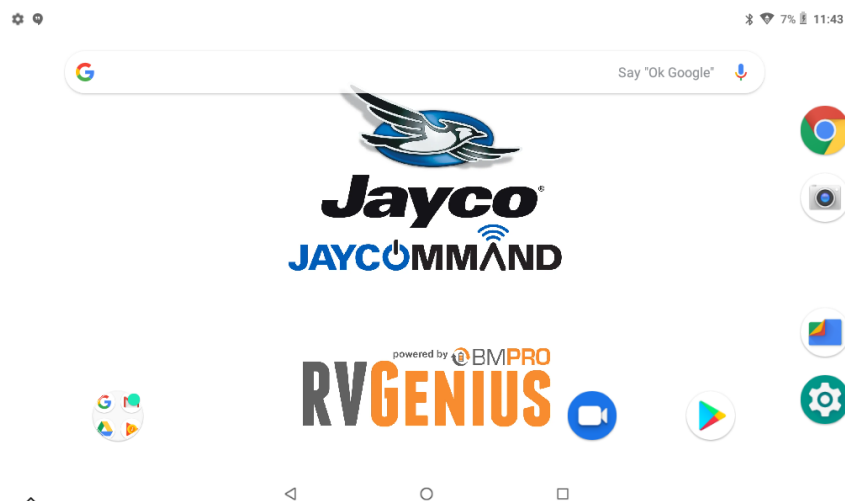


Click on settings

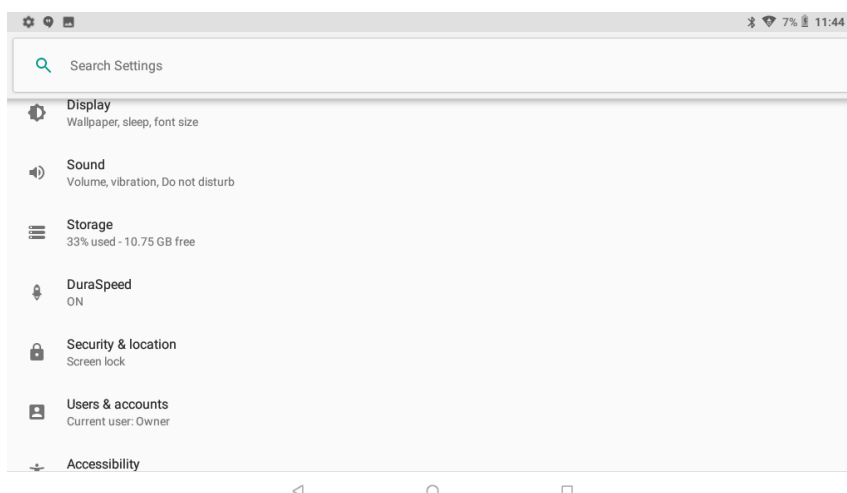

Scroll and click on Security & locations

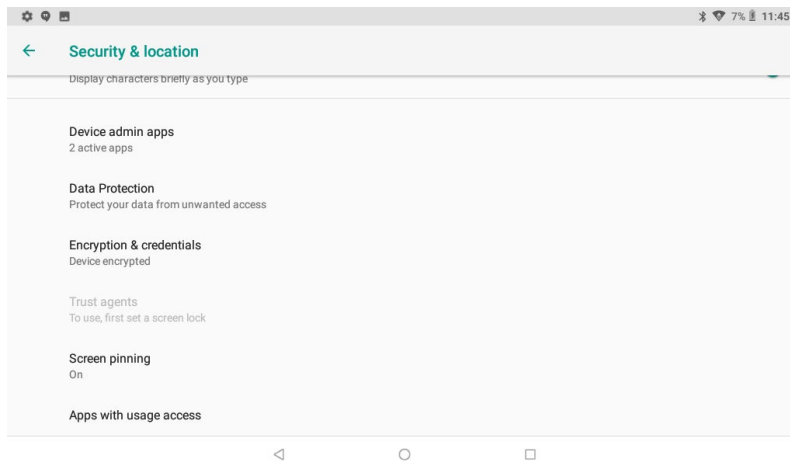

Scroll and click on Screen pinning

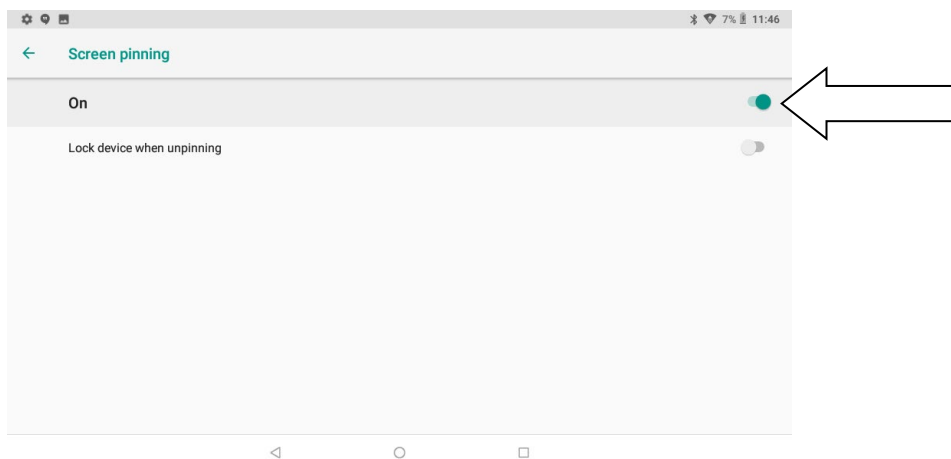


Click ON

Not recommended to put Password because


- Forget the password
- The screen will go to sleep if password is not entered until the screen is woken up by a paper clip or by using the OF function. And enter password to enter tablet

NOW you can choose to put a password to prevent if someone tries to exit pinning, its your choice.


If you want password then turn on "Lock device when unpinning"

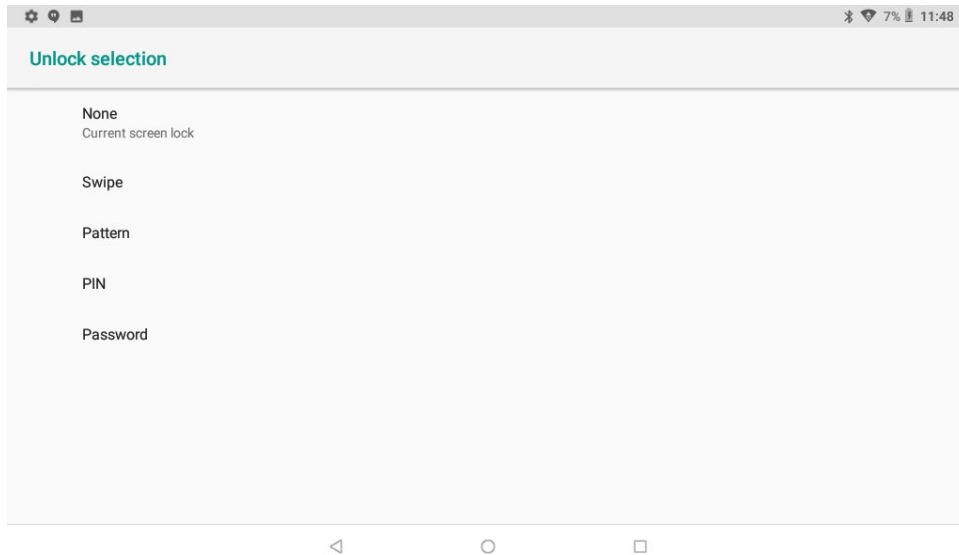


This will present you with the password options – recommended to choose pin

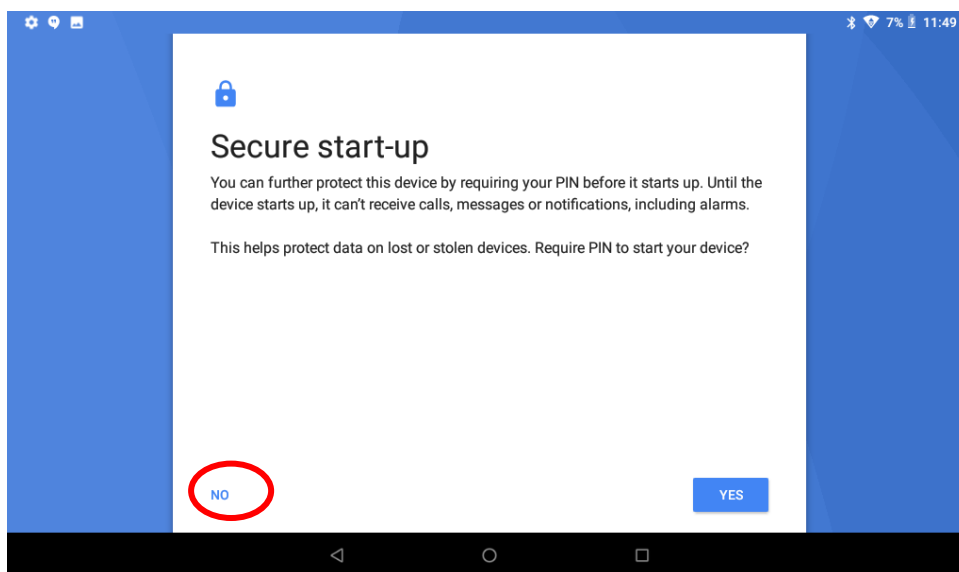

Click No for Secure start up – this is the password before all the OS boots.

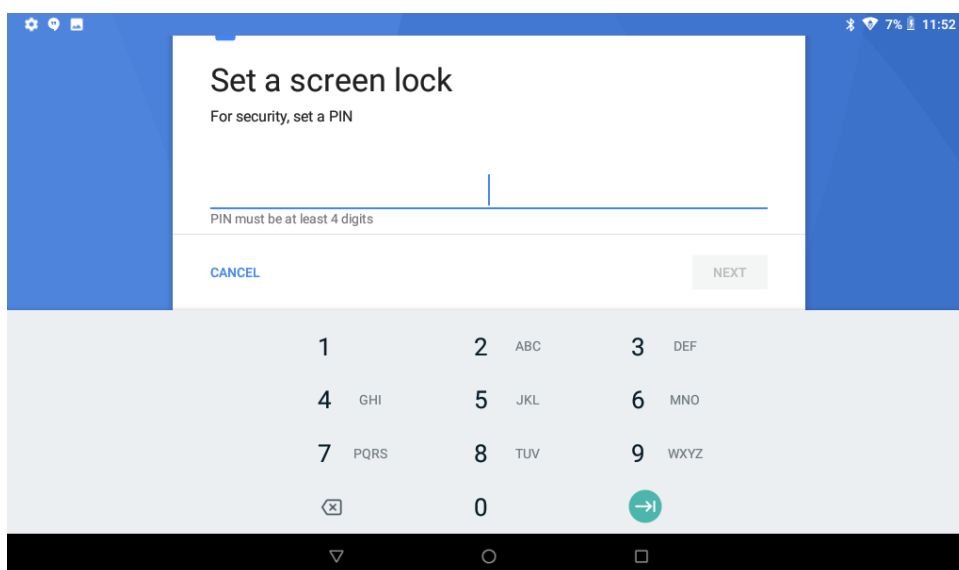


Keep this password simple as if you for get this then the only way out is factoryreset

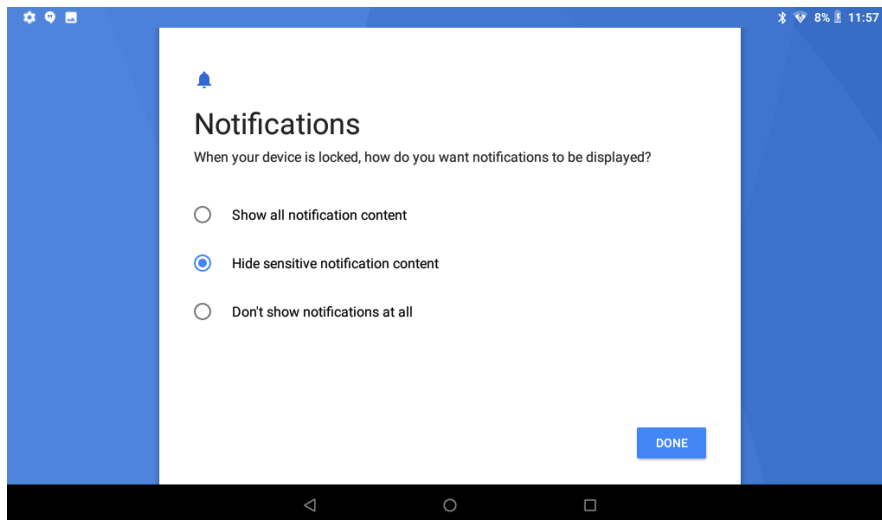


Choose Hide sensitive notification content and click Done.


To pin an app- First launch the app

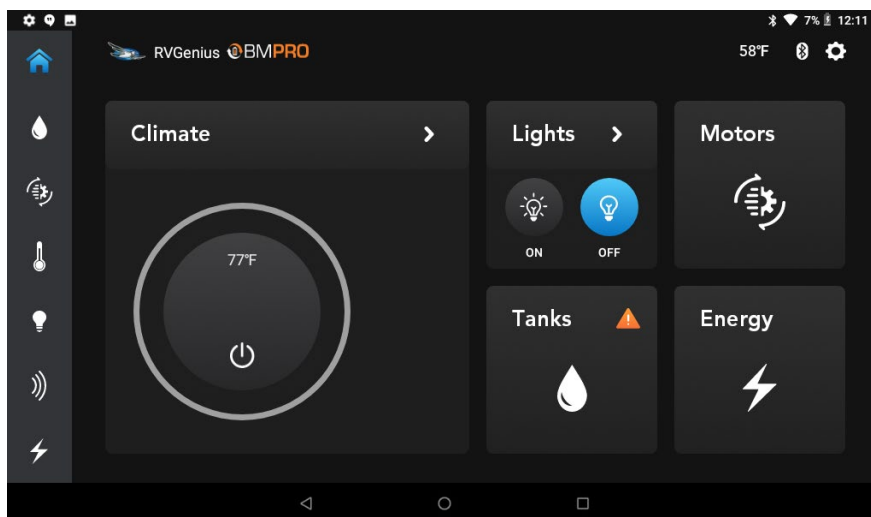

Then click on the Square to put the app in the back ground

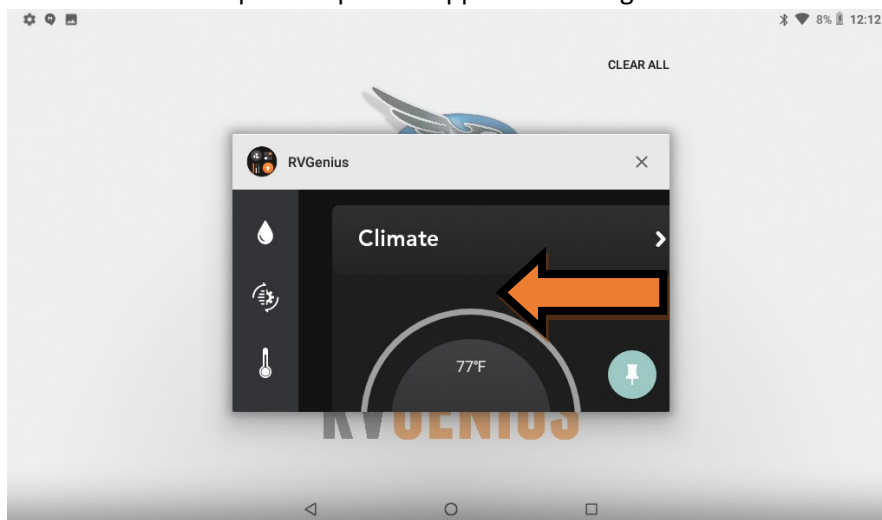


Then click on the Pin icon

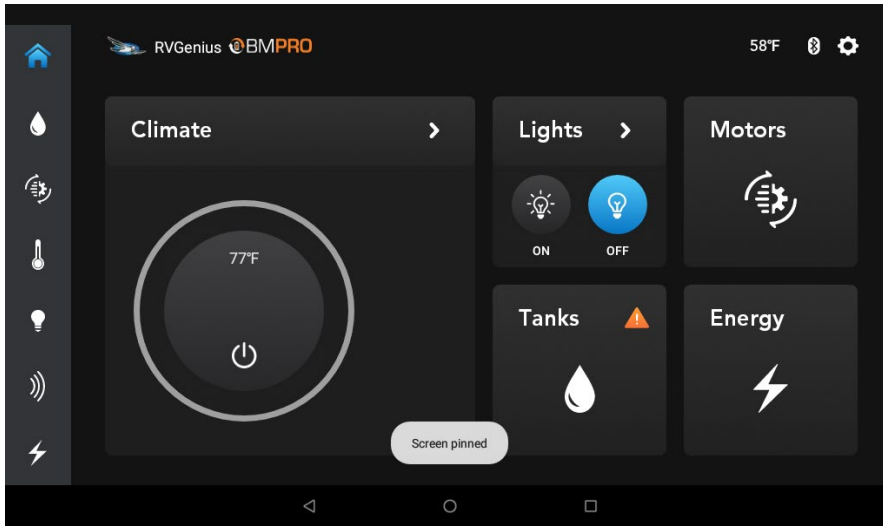

Now the screen is pinned

To exit pinning click on the triangle and square at the same time

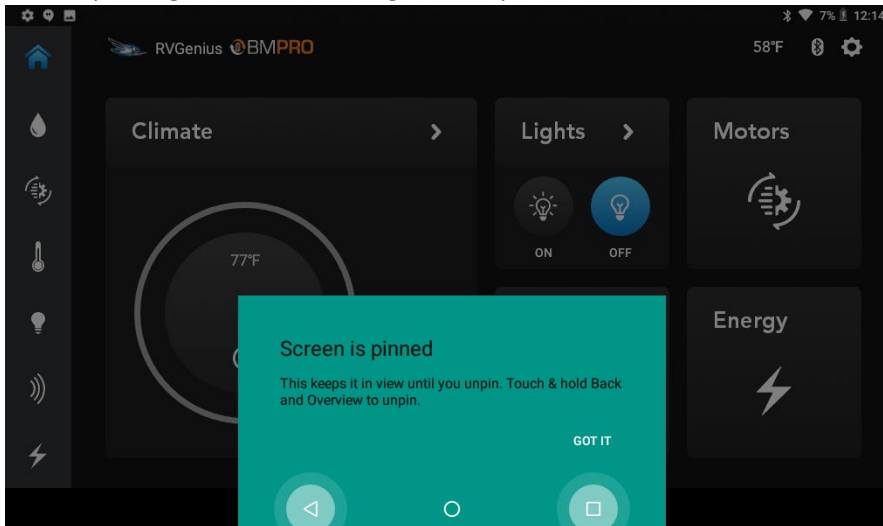

If pinning is exited, then the soft button as now active and the app has to be re-pinned again.

If a password is setup then a password is to be entered to enter the tablet again.

Remember if password is chosen the screen will go to sleep if password is not entered until the screen is woken up by a paper clip or by using the OF function. And enter password



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.