

- 1) Disconnect the RED & BLU wires of the PTC from the run capacitor. Completely remove the PTC if desired.
- 2) Remove from the run capacitor C terminal the RED wire leading to the compressor run (R) winding.
- 3) Splice the BROWN wire from the EasyStart to this RED wire leading to the compressor run (R) winding.
- 4) Crimp on a female faston terminal to the EasyStart ORANGE wire and connect it to the H terminal on the run capacitor.
- 5) Crimp on a female faston terminal to the EasyStart WHITE wire and connect it to the C terminal on the run capacitor.
- 6) Connect the EasyStart BLACK wire to terminal 1 of the overload protector device. If overload is not used, connect the EasyStart BLACK wire to the compressor common (C) winding.
- 7) Mount the EasyStart in a location that will not be exposed to rain or to hot air exhausting from the condenser coil.
- 8) Start the EasyStart at least 5 times on utility power first, then you can freely go back and forth between utility & generator power.

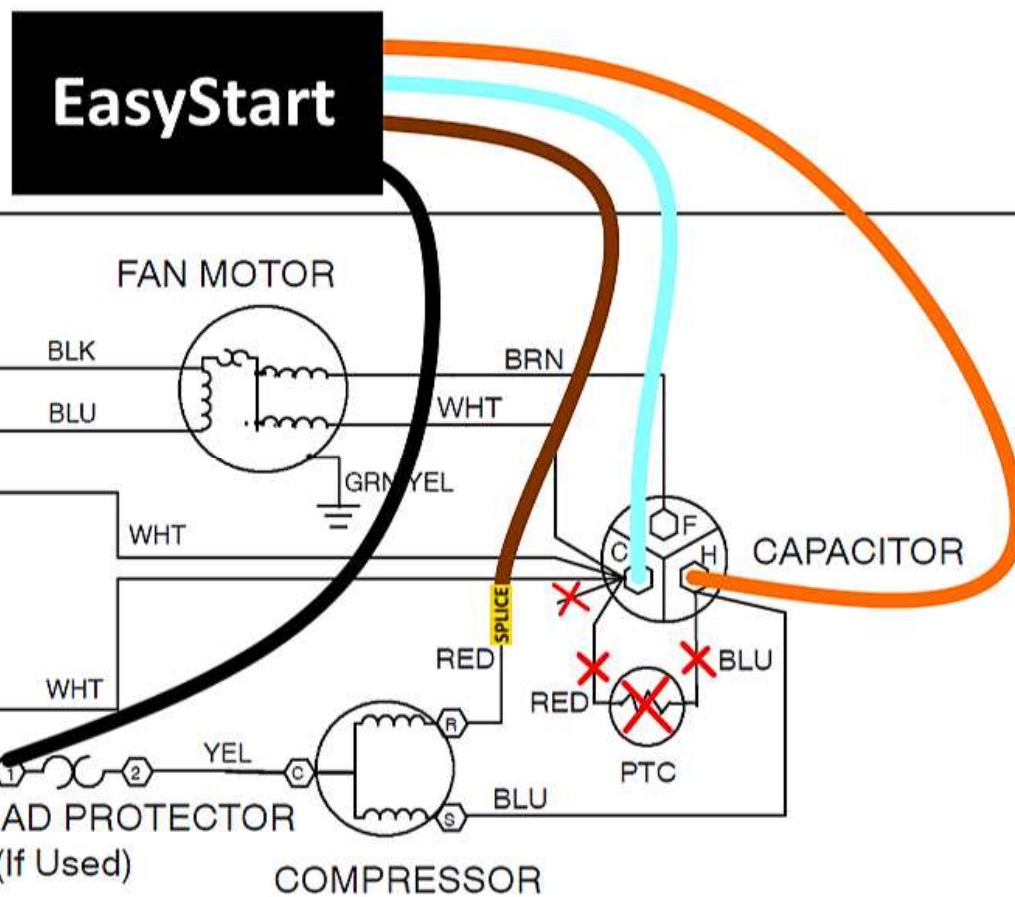


Figure 4-1 Upper Unit Schematic - Standard & HC



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.