
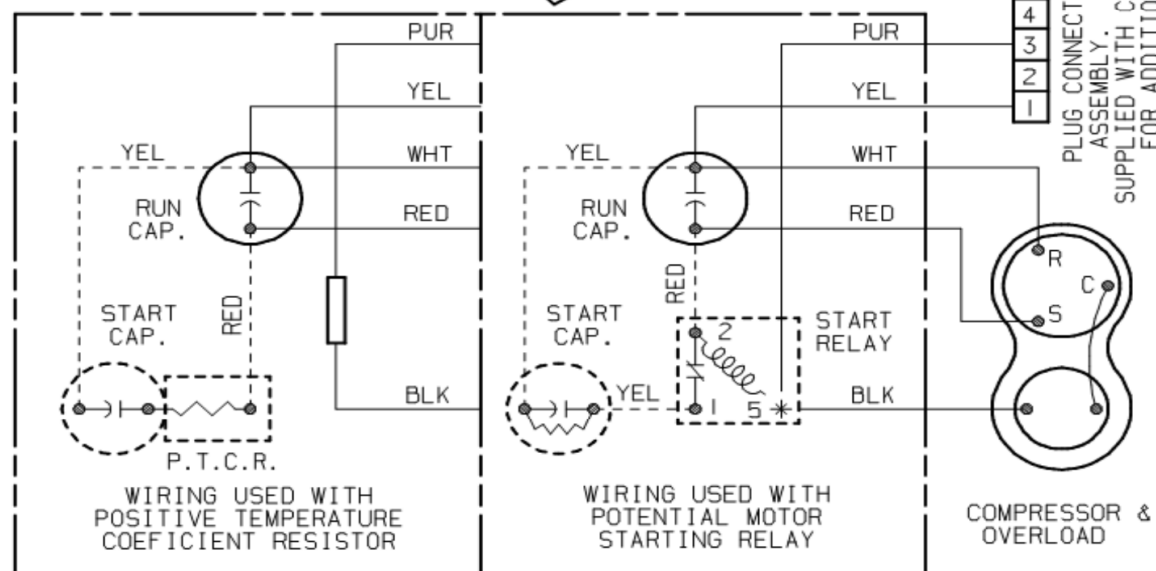
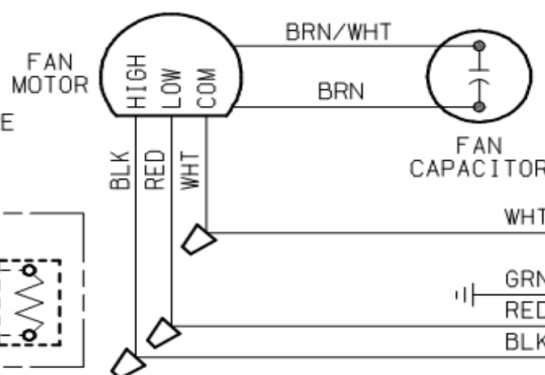


----- OPTIONAL START COMPONENTS AND WIRING.

* PURPLE AND BLACK WIRES ARE SPLICED TOGETHER WHEN NO START RELAY IS USED.

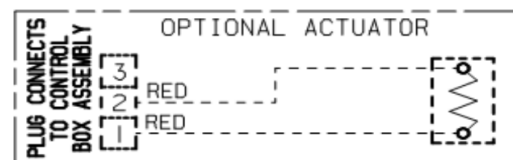

DANGER! SHOCK HAZARD! AVIS!

DISCONNECT POWER SUPPLY
BEFORE SERVICING ANY
ELECTRICAL COMPONENT.

DEBRANCHES LES FILS ELECTRIQUES
AVANT L'ENTRETIEN ET LE DE TOUT
COMPARTIMENT OU ORANGE
ELECTRIQUES.

1976D136



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.