

OHM Values for FREEZE SWITCH and ROOM SENSORS

<u>CENTIGRADE</u>	<u>FARENHEIT</u>	<u>OHMS X 10,000</u>
13	55.4	1.7254
14	57.2	1.6462
15	59.0	1.5711
16	60.8	1.4998
17	62.6	1.4322
18	64.6	1.368
19	66.2	1.3071
20	68.0	1.2492
21	69.8	1.1942
22	71.6	1.1419
23	73.4	1.0922
24	75.2	1.0459
25	77.0	1.0
26	78.8	0.95722
27	80.6	0.9165
28	82.4	0.87774
29	84.2	0.84083
30	86.0	0.80568
31	87.8	0.77218
32	89.6	0.74026
33	91.4	0.70983
34	93.2	0.68082
35	95.0	0.6531
36	96.8	0.62675
37	98.6	0.60155
38	100.4	0.57751

OHM Values for HEAT ELEMENTS

<u>VOLTAGE</u>	<u>OHMS X 1</u>
120VAC	9
240VAC	30

Slow - Time Delay (T/s)

Green Flash Rapid - X-Mtd. or NO A/C



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.