

INSTALLATION MANUAL

99291

Level of Difficulty

Easy

Parts List

Item	Qty	Description
1	1	*RockerBall™ (part #40247)
2	1	Anti-swivel base
3	1	Lock washer
4	1	Hex nut
5	1	Display base, bottom
6	1	Display base, top (labeled)
7	2	Carriage bolt
8	2	Flat washer
9	2	Nylock nut
10	1	Adhesive velcro
11	4	Adhesive foam bumper
12	1	Display header card

*RockerBall™ (part #40247) not included

Tools Required

Ratchet	Socket, 7/16"
Wrench, 7/16"	--

Step 1

Using the supplied velcro (#10), attach the header card (#12) to the labeled base (#6).

Step 2

Slide the anti-swivel base (#2) onto the shank of the RockerBall™ (#1). Insert the ball and anti-swivel base assembly into the labeled base (#6). Secure with the supplied lock washer (#3) and hex nut (#4).

Step 3

Apply the foam bumpers (#11) to the bottom corners of the bottom display base (#5).

Step 4

Attach the labeled base (#6) to the bottom display base (#5) with the supplied carriage bolts (#7), flat washers (#8) and nuts (#9). Tighten all hardware with a ratchet to complete your RockerBall™ display assembly.

Assembly



NOTICE

RockerBall™ part #40247 is required to insert in the display.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.