



Selecting System Options


If you've been advised to perform a system update (typically by using a USB flash drive) or replace a system component (such as a touchscreen or DC panel), special attention will need to be given to your coach's currently selected System Options.

System options are set at the factory and have been somewhat hidden in an effort to keep the coach's unique setup configuration unchanged. It is possible that these options will change once an update has been completed, so correctly returning to the original factory setup is important to keep the system functioning correctly.

1 From the Settings page, press and hold the Floorplan display for 5 seconds until the Warning screen appears. Tap Proceed to navigate to the Additional Options screen.

2 Write down your Floorplan and currently Selected Options. Return to this screen after performing the update to make any necessary changes. Tap Confirm to Save and Exit.

Note: System programming is coach specific. Using any Hardware/Software in an unauthorized coach will result in additional charges if a correction is required.

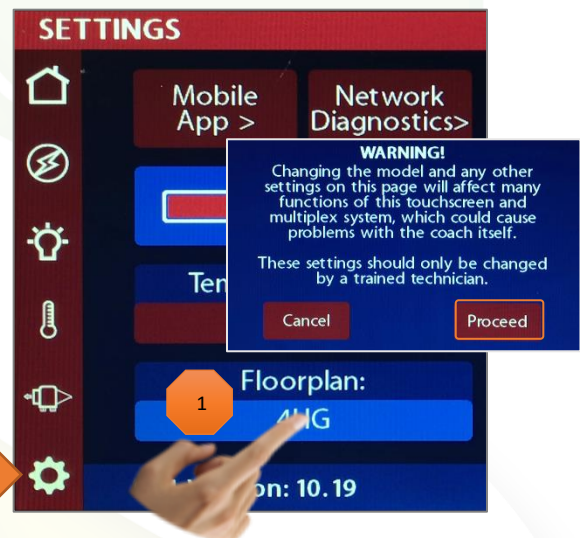

Follow the link or scan the QR Code to watch a short video of the process:
<https://youtu.be/DrGDURbjyME>.



Firefly Integrations Technical Support

(574) 825-4600 Support@Fireflyint.com



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.