

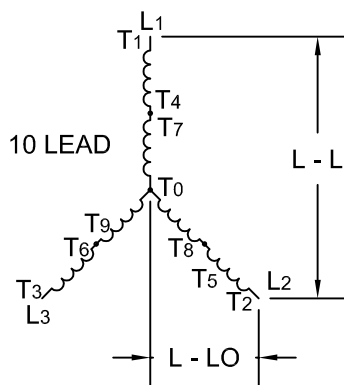
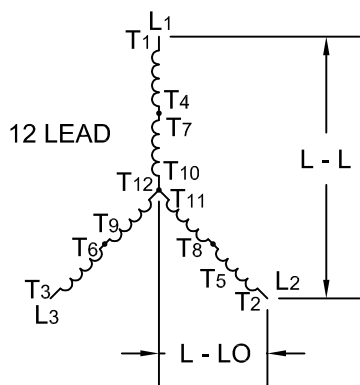


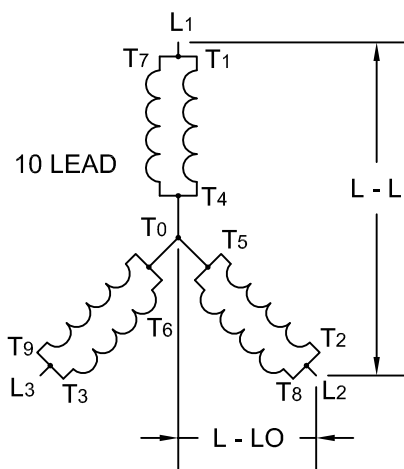



SERIES HIGH WYE

Hz	L - L	L - LO
60	380	219
	416	240
	440	254
	460	266
	480	277
50	380	219
	400	231
	415	240
	440	254

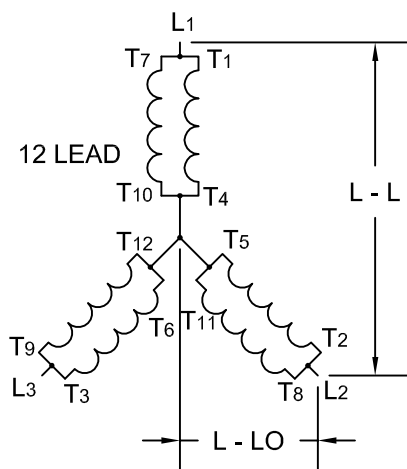

PARALLEL LOW WYE

Hz	L - L	L - LO
60	190	110
	208	120
	220	127
	230	133
	240	139
50	190	110
	200	115
	208	120
	220	127

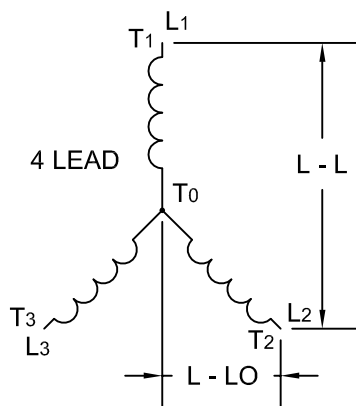
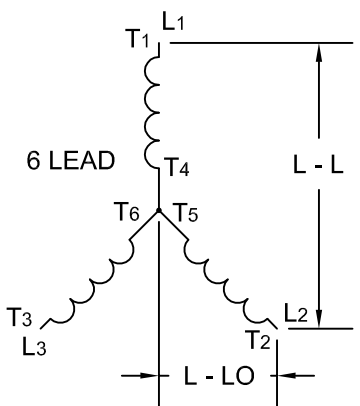


WYE

Hz	L - L	L - LO
60	380	219
	480	277
	600	346
	2400	1386
	3300	1905
	4160	2402
	6600	3811
50	13800	7967
	380	219
	400	231
	415	240
	3300	1905
	6600	3811
	11000	6351

SERIES HIGH DELTA

Hz	L - L	L - LO
60	240	120
	277	139
50	200	100
	220	110
	240	120

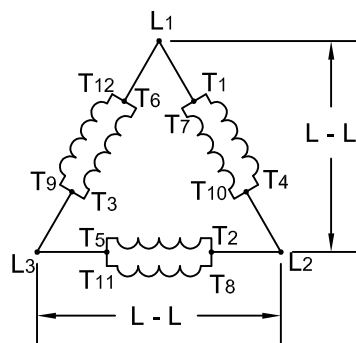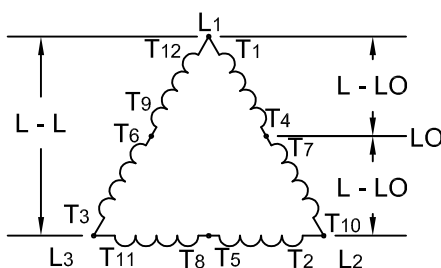


PARALLEL LOW DELTA

Hz	L - L
60	110
	120
50	100
	110



FLIGHT SYSTEMS INC.
505 FISHING CREEK RD.
LEWISBERRY, PA 17339
www.flightsystems.com

DELTA

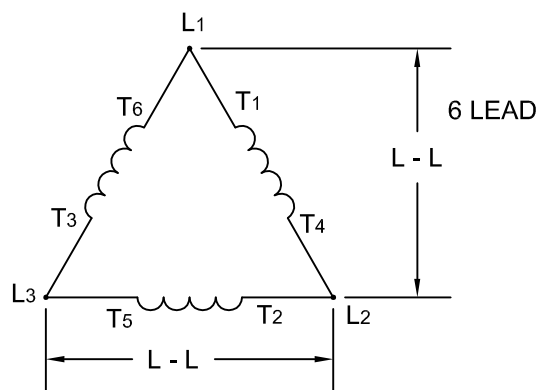

Hz

L - L


60

480
2402
7967

50

380
1905
6351

*DOUBLE DELTA

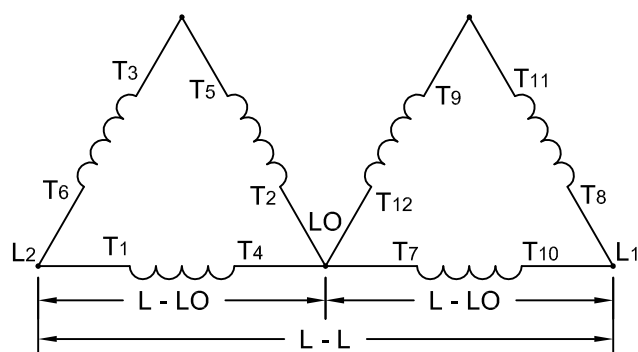

Hz

L - L

L - LO

60

200
220
240


100
110
120

50

220

110

*PARALLEL LOW ZIG ZAG

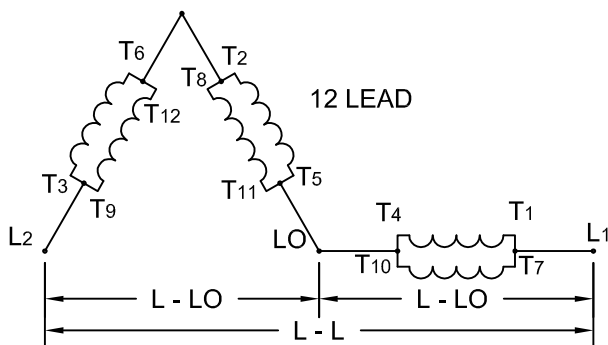

Hz

L - L

L - LO

60

200
220
240


100
110
120

50

220

110

*SERIES HIGH ZIG ZAG

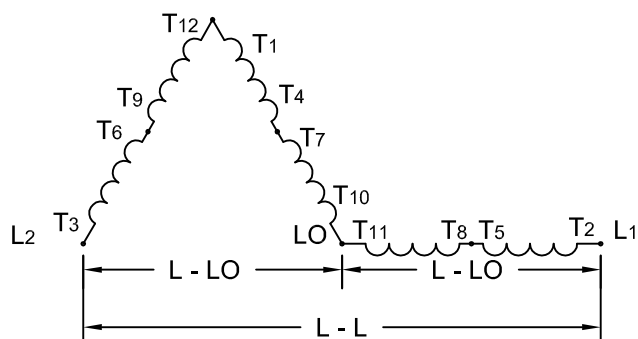

Hz

L - L

L - LO

60

480

240

*NOTE: SINGLE PHASE KW/KVA RATINGS ARE APPROXIMATELY EQUAL TO 50% OF THE GENERATOR'S THREE PHASE RATINGS.



FLIGHT SYSTEMS INC.
505 FISHING CREEK RD.
LEWISBERRY, PA 17339
www.flightsystems.com



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.