

FURRION

0.9 cu. ft. MICROWAVE OVEN

User Manual

Model: FMSN09-BL / FMSM09-BL
FMSN09-MG / FMSM09-MG
FMSML09-BL / FMSML09-MG



* Picture shown here is for reference only.



<https://furrion.com/pages/downloads-appliances>

- * To view the multi-language user manual, please access the link or scan the QR code.
- * Pour obtenir le manuel d'utilisateur multilingue, accédez au lien ou scannez le QR code.
- * Para ver el manual de usuario en otros idiomas, acceda al siguiente enlace o escanee el código QR.

Welcome

Thank you for purchasing this Furrion® product. Before operating your new product, please read these instructions carefully. This user manual contains information for safe use, installation and maintenance of the product.

Please keep this user manual in a safe place for future reference. This will ensure safe use and reduce the risk of injury. Be sure to pass on this manual to new owners of this product.

The manufacturer does not accept responsibility for any damages due to not observing these instructions.

Table of Contents

Welcome 1

Table of Contents 2

Important Safety Instructions 3

 General Safety Instructions..... 3

 Grounding Instructions..... 5

 California Residents Only..... 6

Product Features 7

Function Overview 8

 Control Panel 8

Installation..... 9

 What’s in the Box..... 9

 Before Installation..... 9

 Microwave Oven Installation..... 10

 Electrical Connection 12

Quick Cook Settings 13

Operation 14

Cooking Techniques 16

 Utensils Guide 17

Cleaning and Care..... 18

Troubleshooting..... 19

Technical Specification..... 19

Important Safety Instructions

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

1. Do not attempt to operate this oven with the door-open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
2. Do not place any object between the oven front face and the door or allow dirt or cleaner residue to accumulate on sealing surfaces.
3. Do not operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the:
 - a. Door (bent),
 - b. Hinges and latches (broken or loosened),
 - c. Door seals and sealing surfaces.
4. The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

Connect only to properly grounded outlet. See "GROUNDING INSTRUCTIONS" section.

4. Install or locate this appliance only in accordance with the provided installation instructions.
5. Do not operate the oven when empty.
6. Some products such as whole eggs and sealed containers - for example, closed glass jars - are able to explode and should not be heated in this oven.
7. Use this appliance only for its intended use as described in this manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook, or dry food. It is not designed for industrial or laboratory use.
8. As with any appliance, close supervision is necessary when used by children.
9. To reduce the risk of fire in the oven cavity:
 - a. Do not overcook food. Carefully attend appliance when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
 - b. Remove wire twist-ties from paper or plastic bags before placing into oven.
 - c. If anything inside the oven ignites, do not open the oven door. Turn off the oven and disconnect the power from the outlet or at the fuse/circuit breaker panel.
 - d. Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils or food in the cavity when not in use.

General Safety Instructions

When using electrical appliances, basic safety precautions should be followed, including the following:

WARNING - To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy:

1. Read all instructions before using the appliance.
2. Read and follow the specific "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY".
3. This appliance must be grounded.

Important Safety Instructions

10. Liquids, such as water, coffee, or tea can be heated up beyond its boiling point, while without appearing to boil. It is due to surface tension of the liquid. Visible bubbling or boiling when the container is removed from the microwave oven is not always present. **THIS COULD RESULT IN VERY HOT LIQUIDS SUDDENLY BOILING OVER WHEN A SPOON OR OTHER UTENSIL IS INSERTED INTO THE LIQUID.** To reduce the risk of injury to person:
 - a. Do not overheat the liquid.
 - b. Stir the liquid both before and halfway through heating it.
 - c. Do not use straight-sided containers with narrow necks.
 - d. After heating, allow the container to stand in the microwave oven for a short time before taking out the container.
 - e. Use extreme care when inserting a spoon or other utensil into the container.
11. Do not heat oil or fat for deep-frying. It is difficult to control the temperature of oil in microwave oven.
12. Pierce foods with heavy skins such as potatoes, whole squash, apples and chestnuts before cooking.
13. The contents of feeding bottles and baby jars should be stirred or shaken and the temperature should be checked before serving in order to avoid burns.
14. Cooking utensils may become hot because of heat transferred from the heated food. Potholders may be needed to handle the utensil.
15. Do not cover or block any openings on the appliance.
16. Do not store or use this appliance outdoors. Do not use this product near water, for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar locations.
17. Do not operate this appliance if it has a damaged cord or a plug, if it is not working properly or if it has been damaged or dropped.
18. Do not immerse cord or plug in water. Keep cord away from heated surface. Do not let cord hang over edge of table or counter.
19. Use only thermometers, which are specifically designed for use in microwave ovens.
20. Do not operate any heating or cooking appliance beneath this appliance.
21. Make sure the glass tray and roller rings are in place when you operate the oven.
22. This appliance should be serviced only by qualified service personnel, contact nearest authorized service facility for examination, repair, or adjustment.
23. While cleaning the oven surface with the door closed, use only mild, nonabrasive soaps or detergents applied with a sponge or soft cloth.

Important Safety Instructions

24. This appliance can radiate radio frequency energy, if it is not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this appliance does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
 - Increase the separation between this appliance and receiver.
 - Connect this appliance into an outlet on a circuit different from the receiver is connected.
 - Consult the dealer or an experienced technician for help.

CAUTION

- **NOTICE: PACEMAKERS**
Most pacemakers are shielded from interference from electronic products, including microwaves. However, patients with pacemakers may wish to consult their physicians if they have concerns.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

Grounding Instructions

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces risk of electric shock by providing an escape wire for the electric current.

WARNING - Improper use of the grounding plug can result in a risk of electric shock.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded, and either:

- 1) If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade grounding plug and a 3-slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord shall be equal to or greater than the electrical rating of the appliance, or
- 2) Do not use an extension cord. If the power supply cord is too short, have a qualified electrician or serviceman install an outlet near the appliance.

Electrical Requirements

The electrical requirements are a 120 volt, 60 Hz, AC only, 15 amp or 20 amp dedicated circuit. It is recommended that a separate circuit serving only the oven be provided. The oven is equipped with a 3-prong grounding plug. It must be plugged into a wall receptacle that is properly installed and grounded.

Important Safety Instructions

Power Supply Cord

1. A short power supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. Longer cord sets or extension cords are available and may be used if care is exercised in their use.
3. If long cord or extension cord is used:
 - a) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - b) The extension cord must be a grounding-type 3-wire cord, and the longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over unintentionally.

NOTES:

- If you have any questions about the grounding or electrical instructions, consult a qualified electrician or service person.
- Neither manufacturer nor the dealer can accept any liability for damage to the oven or personal injury resulting from failure to observe the electrical connection procedures.

Radio or TV Interference

Should there be any interference caused by the microwave oven to your radio or TV, check that the microwave oven is on a different circuit, relocate the radio or TV as far away from the oven as feasible or check position and signal of receiving antenna.


California Residents Only

CAUTION

Cancer and Reproductive
Harm – www.P65Warnings.ca.gov

SAVE THESE INSTRUCTIONS

Product Features

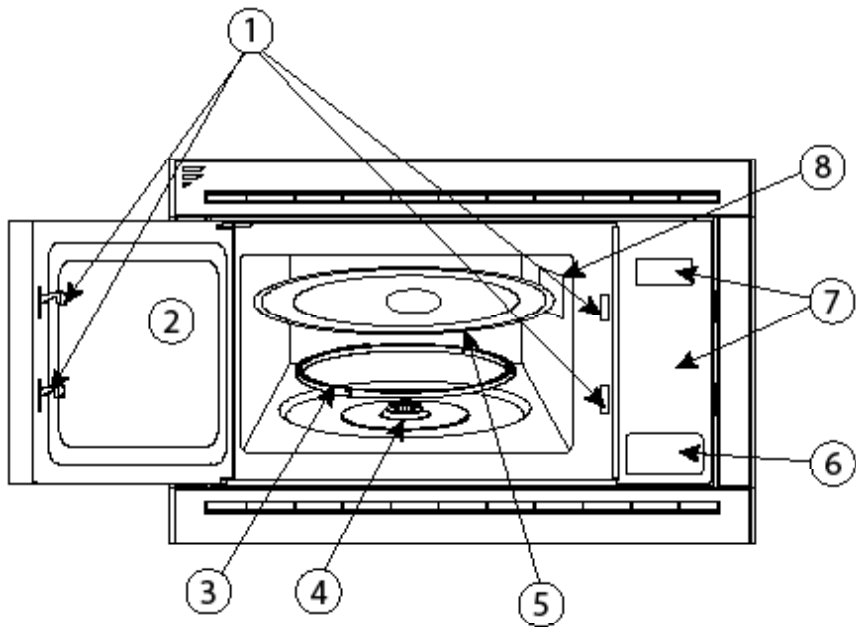


Item	Description
①	Door Safety Lock System
②	Oven Window
③	Roller Ring
④	Shaft

Item	Description
⑤	Glass Tray
⑥	Door Release Button
⑦	Control Panel
⑧	Wave Guide (Please do not remove the mica plate covering the wave guide)

Function Overview

Control Panel

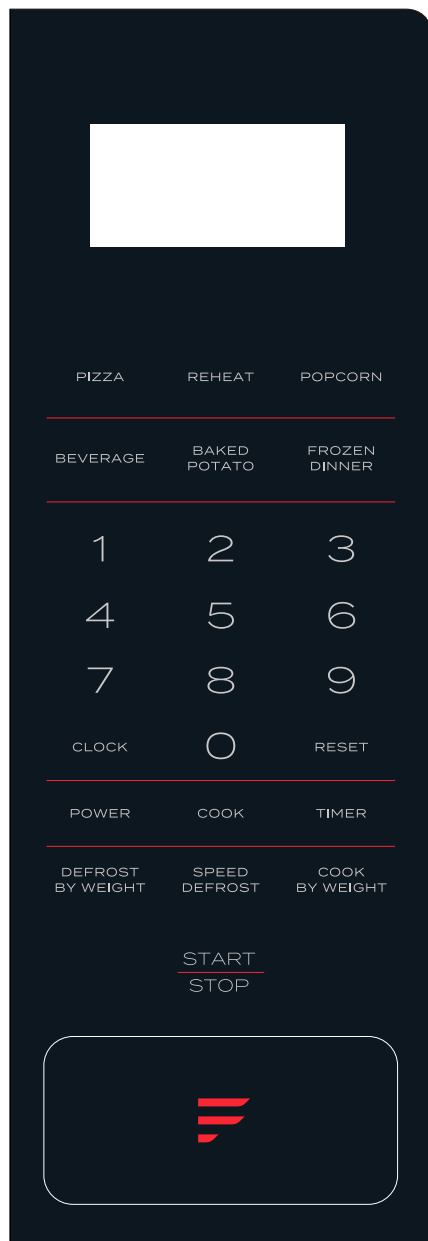

DISPLAY

Cooking time, power, indicators and present time are displayed.

QUICK COOK BUTTONS

Instant settings to cook popular foods

NUMBER PADS (0-9)

Touch to set time or weight

CLOCK

Use to set the time of day.

RESET

Use to clear all previous settings or set the child lock.

POWER

Use to set power level or to check power level during cooking.

COOK

Use for multi-stage cooking. It enables cooking at multiple power and time settings automatically.

TIMER

Timer functions independently, even while a cooking program is in process.

DEFROST BY WEIGHT

Programmed defrosting based on the weight of the foods to be defrosted.

SPEED DEFROST

SPEED DEFROST based on the time you entered.

COOK BY WEIGHT

Programmed cooking based on the weight of the foods to be cooked.

START/STOP

Touch to start or stop cooking.

Installation

What's in the Box

Make sure all the following items are included in the packaging. If any item is damaged or missing, contact your dealer.

- Microwave Oven Body x 1
- Glass Tray x 1
- Glass Tray Roller Ring x 2
- User Manual
- Warranty Manual
- Trim Kit *(See Trim Kit Instruction manual for included items.

For FMSM09-BL, FMSM09-MG, FMSML09-BL, FMSML09-MG ONLY.)

- **One-Piece Trim Kit:**

- FMSML09-BL-TK
- FMSML09-SS-TK

- **Standard Trim Kit:**

- FMSM09-BL-TK
- FMSM09-SS-TK

Before Installation

1. Make sure that all the packing materials are removed from the oven cavity.
2. Check the oven for any damage, such as misaligned or bent door, damaged door seals and sealing surface, broken or loose door hinges and latches and dents inside the cavity or on the door. If there is any damage, do not operate the oven and contact qualified service personnel.
3. This microwave oven must be placed on a flat, stable surface to hold its weight and the heaviest food likely to be cooked in the oven.
4. Do not place the oven where heat, moisture, or high humidity are generated, or near combustible materials.
5. The oven must have sufficient airflow. Do not cover or block any openings on the oven. Do not remove feet on which oven stands.
6. Do not operate the oven without glass tray, roller support, and shaft in their proper positions.
7. Make sure that the power supply cord is good in condition and does not run under the oven or over any hot or sharp surface.
8. The socket must be accessible so that it can be easily unplugged in an emergency.

Installation

Microwave Oven Installation

Cabinet Preparation

1. Select a suitable place that is not susceptible to moisture.
2. Mark and cutout an opening in the cabinet according to the dimensions outlined in the table. (Fig. 1)

NOTE: If a range hood is installed under the microwave oven, 1 inch minimum clearance must be reserved from the bottom of the microwave oven to the top of the range hood refer to dimension E.

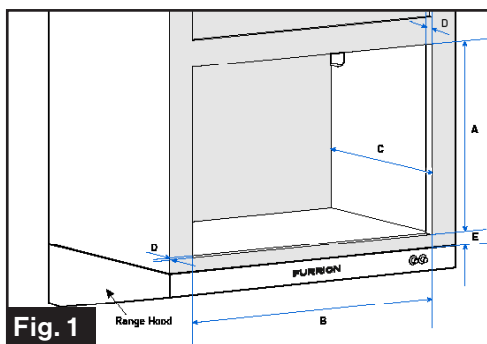


Fig. 1

Dimensions				
A	B	C	D	E
13 $\frac{3}{8}$ " (339.7mm) Min. to 13 $\frac{7}{8}$ " (352.4mm) Max.	19 $\frac{1}{16}$ " (506.4mm) Min. to 20 $\frac{1}{4}$ " (514.3mm) Max.	13 $\frac{5}{16}$ " (354mm) Min.	$\frac{1}{2}$ " (12.7mm) Min.	1" (25.4mm) Min.

Trim Kit Installation

Two trim kit types are available for FMSN09-BL / FMSN09-MG.

- **One-Piece Trim Kit:** FMSML09-SS-TK, FMSML09-BL-TK
- **Standard Trim Kit:** FMSM09-SS-TK, FMSM09-BL-TK.

One-Piece Trim Kit Installation

1. Take out the microwave oven and the component(s) from box and put on a flat surface. (Fig. 2)

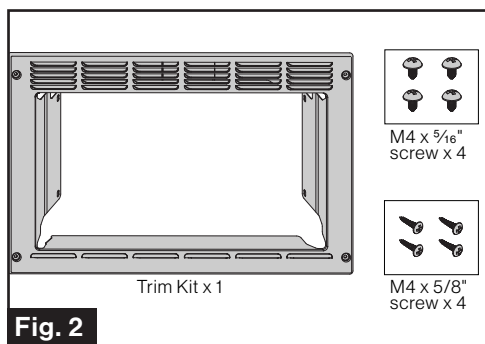


Fig. 2

2. Attach the trim kit onto the oven. (Fig. 3)


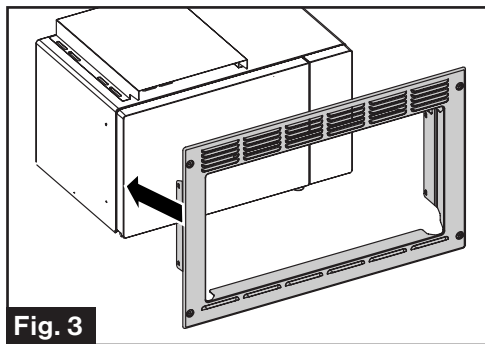



Fig. 3

Installation


3. Attach the trim kit onto the microwave oven with 4pcs M4 x $\frac{5}{16}$ " screws. (Fig. 4)

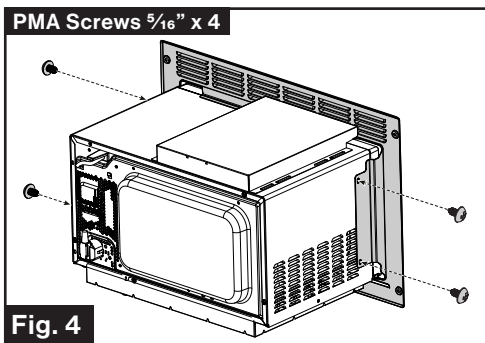

4. Slide the microwave oven into the cabinet opening. (Fig. 5)

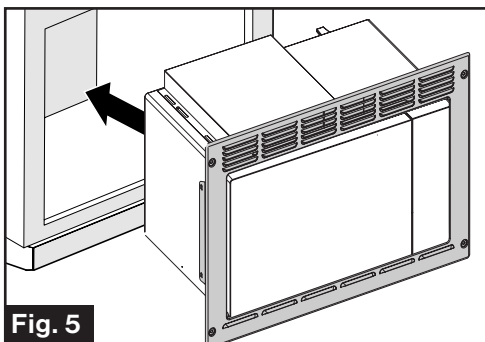


5. Attach the microwave oven to the cabinet with 4pcs M4 x $\frac{5}{8}$ " screws. (Fig. 6)

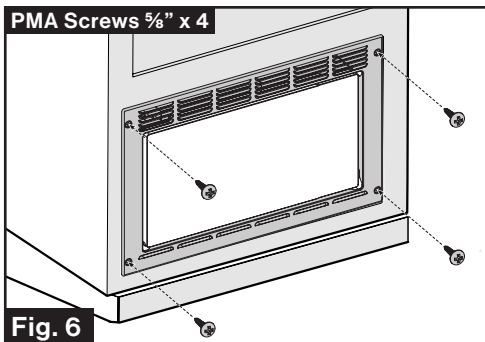


Standard Trim Kit Installation


1. Take out the microwave oven and the component(s) from box and put on a flat surface. (Fig. 7)

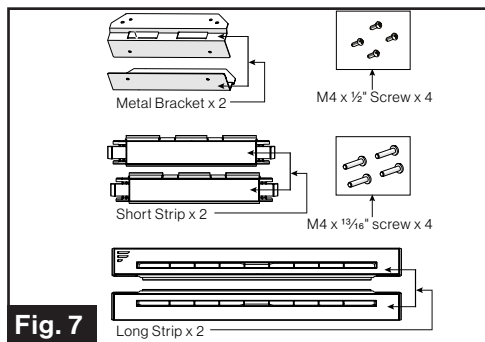

2. Attach the left and right metal brackets to the microwave oven and attach with 4pcs M4 screw x $\frac{1}{2}$ " provided. (Fig. 8)

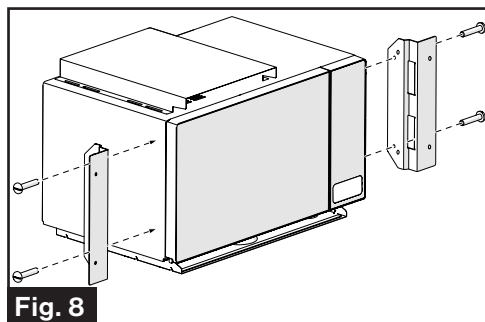


3. Slide the microwave oven into the cabinet opening. (Fig. 9)

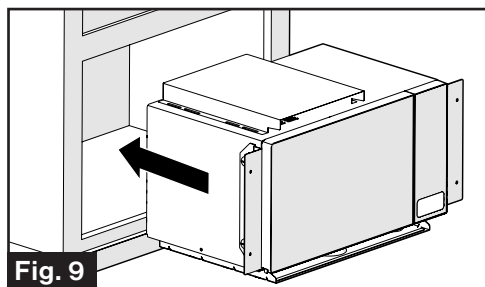


Installation


4. Attach the microwave into the cabinet with 4pcs M4 screw x $\frac{13}{16}$ " provided. (Fig. 10)

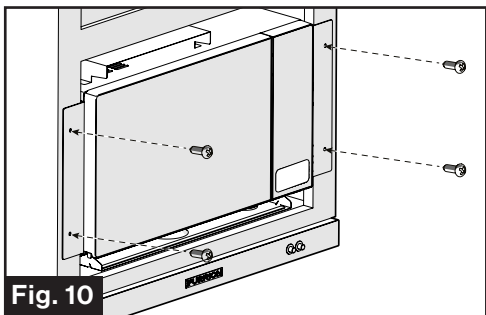

6. Install the assembled trim kit over the microwave oven and push until it snaps into place. (Fig. 12 and Fig. 13)

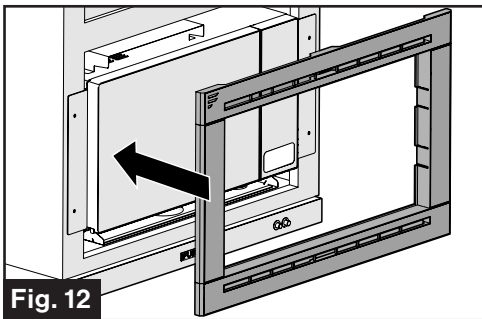

5. Assemble the trim kit as shown in (Fig. 11).
NOTE: DO NOT assemble reversed.

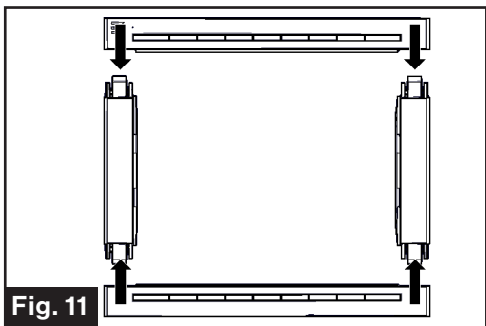

Electrical Connection

Connect the microwave oven to a 120 volt, 60 Hz, AC only, 15 amp or 20 amp dedicated circuit. It is recommended that an individual circuit serving only the microwave oven be provided.

Quick Cook Settings

The Quick Cook settings (Popcorn, Baked Potato, Pizza, Beverage, Frozen Dinner, Reheat) allow you to cook or reheat food automatically without selecting power level and time.

POPCORN

For Popcorn bag - 3.5 oz.

1. Touch POPCORN once.
2. Touch START/STOP.

To modify the preset Popcorn cook time:

1. Touch POPCORN twice. ENTER TIME appears in display.
2. Touch number pads to enter desired cooking time. Touch START/STOP.

BAKED POTATO

For potatoes (4 ~6 oz. per entries):

1. Touch BAKED POTATO once.
2. Enter number of potatoes (1-4) by touch number pads.
3. Touch START/STOP.

For potatoes (8-10oz. per entries):

1. Touch BAKED POTATO twice.
2. Enter number of potatoes (1-4) by touch number pads.
3. Touch START/STOP.

PIZZA

For reheating pizza slice:

1. Touch PIZZA once.
2. Touch START/STOP.

For heating whole frozen pizza:

1. Touch PIZZA twice.
2. Touch START/STOP.

BEVERAGE

For small cups (5-7 oz.)

1. Touch BEVERAGE once.
2. Enter number of cups (1-4) by touch number pads.
3. Touch START/STOP.

For large cups (9-11 oz.)

1. Touch BEVERAGE twice.
2. Enter number of cups (1-4) by touch number pads.
3. Touch START/STOP.

FROZEN DINNER

For Frozen Dinners (7-9oz):

1. Touch FROZEN DINNER once.
2. Enter number of Frozen Dinners (1-2) by touch pads.
3. Touch START/STOP pad.

For Frozen Dinners (10-12oz):

1. Touch FROZEN DINNER twice.
2. Enter number of Frozen Dinners (1-2) by touch number pads.
3. Touch START/STOP.

REHEAT

1. Touch REHEAT pad.
2. Touch START/STOP.

NOTE: This setting lets you reheat a plate of chilled leftovers with good results.

Operation

BEEP SOUND

When a key is touched correctly, a beep sound will be heard. At the end of any complete program, the oven will beep twice with END showing on screen. Press any pad or open oven door will clear it.

PAUSE/CANCEL COOKING

During cooking, press START/STOP pad once will pause cooking. Cooking will resume for pressing START/STOP again or press RESET to cancel the cooking.

CLOCK SETTING

1. Touch CLOCK pad.
2. Enter the Time by touch number pads.
3. Touch CLOCK pad again.

NOTE: This is a 12 hour clock. When the oven is first plugged in or power resumes, the display will show ENTER CLOCK TIME. If you prefer not to have the clock displayed, touch RESET.

SETTING THE OVEN TIMER

1. Touch TIMER.
2. Set the Timer by touch number pads.
3. Touch START/STOP.

NOTE: The maximum countdown time you can set is 99 minutes and 99 seconds.

SETTING A COOKING PROGRAM

A. One-stage cooking

1. Use the touch number pads to set a cooking time. You can set a cooking time from one second to 99 minutes and 99 seconds.
2. If you want to set a power level other than 100%, touch POWER, and then use the touch number pads to enter

the power level. During cooking you can check the power level by touching POWER pad.

3. Touch START/STOP to start cooking.

Use digit to set a cooking power level:

Number Pad	Cooking Power
1,0	100%
9	90%
8	80%
7	70%
6	60%
5	50%
4	40%
3	30%
2	20%
1	10%
0	0%

B. Two-stage cooking

Some cooking requires different stages of cooking at different temperatures.

1. SET STAGE 1: Follow steps 1 and 2 in "One-stage cooking". Do not touch START/STOP.
2. SET STAGE 2: Touch COOK then enter proper cooking time and (lower) power level. (Most 2-stage recipes use lower power for second stage.)
3. Touch START/STOP.

SPEED DEFROST

1. Touch SPEED DEFROST.
2. Enter desired defrosting time by touch number pads. The longest defrosting time is 99 minutes and 99 seconds.
3. Touch START/STOP.

Operation

NOTES:

- When 50% of the defrost cycle has completed, the system will suspend and sound to remind users to turn food over, after that, press START/STOP to resubmit.
- After setting SPEED DEFROST, oven can be programmed to automatically switch to one or two-stage cooking.
 - For speed defrost and one stage cooking, follow steps above. Before touching START/STOP, touch COOK, enter time and power level and then touch START/STOP.
 - For speed defrost and two stage cooking, follow steps above. Before touching START/STOP, touch COOK, enter two-stage cooking programs and then touch START/STOP to start.

COOK BY WEIGHT

- Touch COOK BY WEIGHT.
- Enter selected food code (1-3) by touch number pads.
- Enter food weight.
- Touch START/STOP.

Weight Code Description

CODE	TYPE	MAX WEIGHT
1	Beef	5 lb. 16 oz
2	Mutton	5 lb. 16 oz
3	Pork	4 lb. 0 oz

NOTES:

- Meat must be defrosted at refrigerated temperature.
- Weight must be in pounds and ounces.
- Ounce weights less than 10 must be preceded by a 0. If label gives weight in pounds only, change the fraction of a pound to ounces using the following chart.

Converting Fractions of a Pound to Ounces

Fractions of a pound	Ounces
Less than .03	0
.03 to .09	1
.10 to .15	2
.16 to .21	3
.22 to .27	4
.28 to .34	5
.35 to .40	6
.41 to .46	7
.47 to .53	8
.54 to .59	9
.60 to .65	10
.66 to .71	11
.72 to .78	12
.79 to .84	13
.85 to .90	14
.91 to .97	15
above .97	go to next even

- During cooking, the system will pause automatically and sound to remind users to turn food over, after that touch START/STOP to resume cooking.

DEFROST BY WEIGHT

- Touch DEFROST BY WEIGHT pad.
- Enter food weight by touch number pads.
- Touch START/STOP pad.

NOTES:

- The maximum weight is 5 lb. 16 oz.
- Weight must be in pounds and ounces. Ounce weights less than 10

Operation

must be preceded by a 0. If label gives weight in pounds only, change the fraction of a pound to ounces using the chart given above.

- During defrosting, the system will sound to remind users to turn meat over.

SETTING CHILD LOCK

The child lock prevents unsupervised operation by children. Set the function in standby mode.

To set: In standby mode, press and hold RESET for 3 seconds. LOCK is indicated on the display.

To cancel: press and hold RESET for 3 seconds. LOCK indication disappears.

KEY ADHESION PROTECTION

In any mode, if the membrane switch closed for 60 seconds, the system will stop to cook immediately, the oven will return to waiting mode. Beep will sound and "FAIL" will display in the screen. The beep will sound every one minute until trouble shooting, press RESET pad to return waiting mode.

Cooking Techniques

Your microwave makes cooking easier than conventional cooking, provided you keep these considerations in mind:

STIRRING

Stir foods such as casseroles and vegetables while cooking to distribute heat evenly. Food at the outside of the dish absorbs more energy and heats more quickly, so stir from the outside to the center. The oven will turn off when you open the door to stir your food.

ARRANGEMENT

Arrange unevenly shaped foods, such as chicken pieces or chops, with the thicker, meatier parts toward the outside of the turntable where they receive more microwave energy. To prevent

overcooking, place delicate areas, such as asparagus tips, toward the center of the turntable.

SHIELDING

Shield food with narrow strips of aluminum foil to prevent overcooking. Areas that need shielding include poultry wing tips, the ends of poultry legs, and corners of square baking dishes. Use only small amounts of aluminum foil. Larger amounts can damage your oven.

TURNING

Turn foods over midway through cooking to expose all parts to microwave energy. This is especially important with large foods such as roasts.

Cooking Techniques

STANDING

Foods cooked in the microwave build up internal heat and continue to cook for a few minutes after heating stops. Let foods stand to complete cooking, especially foods such as cakes and whole vegetables. Roasts need this time to complete cooking in the center without overcooking the outer areas. All liquids, such as soup or hot chocolate, should be shaken or stirred when cooking is complete. Let liquids stand a moment before serving. When heating baby food, stir well at removal and test the temperature before serving.

ADDING MOISTURE

Microwave energy is attracted to water molecules. Food that is uneven in moisture content should be covered or allowed to stand so that the heat disperses evenly. Add a small amount of water to dry food to help it cook.

Utensils Guide

This section lists which utensils can be used in the microwave, which ones have limited use for short periods, and which ones should not be used in the microwave.

RECOMMENDED

Microwave browning dish — Use to brown the exterior of small items such as steaks, chops, or pancakes. Follow the directions provided with your browning dish.

Microwaveable plastic wrap — Use to retain steam. Leave a small opening for some steam to escape and avoid placing

it directly on the food.

Paper towels and napkins — Use for short-term heating and covering; these absorb excess moisture and prevent spattering. Do not use recycled paper towels, which may contain metal and could ignite.

Glass and glass-ceramic bowls and dishes — Use for heating or cooking. Paper plates and cups — Use for short-term heating at low temperatures. Do not use recycled paper, which may contain metal and could ignite.

Wax paper — Use as a cover to prevent spattering.

Thermometers — Use only those labeled “Microwave Safe” and follow all directions. Check the food in several places. Conventional thermometers may be used on microwave food once the food has been removed from the oven.

LIMITED USE

Aluminum foil — Use narrow strips of foil to prevent overcooking of exposed areas. Using too much foil can damage your oven, so be careful. You should keep distance of 1 inch (25.4mm) between aluminum foil and cavity.

Ceramic, porcelain, and stoneware — Use these if they are labeled “Microwave Safe”. If they are not labeled, test them to make sure they can be used safely.

Plastic — Use only if labeled “Microwave Safe”. Other plastics can melt.

Not Recommended

Glass jars and bottles — Regular glass is too thin to be used in a microwave. It can shatter and cause damage and injury.

Cooking Techniques

Paper bags — These are a fire hazard, except for popcorn bags that are designed for microwave use.

Styrofoam plates and cups — These can melt and leave an unhealthy residue on food.

Plastic storage and food containers — Containers such as margarine tubs can melt in the microwave.

Metal utensils — These can damage your oven. Remove all metal before cooking.

NOTE: Should you wish to check if a dish is safe for microwaving, place the empty dish in the oven and microwave on HIGH for 30 seconds. A dish which becomes very hot should not be used.

Cleaning and Care

1. Turn off the oven and remove the power plug from the wall socket before cleaning.
2. Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergent may be used if the oven gets very dirty. Avoid the use of spray and other harsh cleaners as they may stain, streak or dull the door surface.
3. The outside surfaces should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
4. Wipe the window on both sides with a damp cloth to remove any spills or splatters.
5. Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.
6. If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity conditions. In such case, it is normal.
7. It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm sudsy water or in a dishwasher.
8. The roller ring and oven floor should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven with mild detergent. The roller ring may be washed in mild sudsy water or dishwasher. When removing the roller ring from cavity floor for cleaning, be sure to replace in the proper position.
9. Remove odors from your oven by combining a cup of water with the juice and skin of one lemon in a deep microwaveable bowl, microwave for 5 minutes. Wipe thoroughly and dry with a soft cloth.
10. When it becomes necessary to replace the oven light, please consult a dealer to have it replaced.

Cleaning and Care

11. The oven should be cleaned regularly and any food deposits removed. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
12. Please do not dispose this appliance into the domestic rubbish bin; it should be disposed to the particular disposal center provided by the municipalities.

Troubleshooting

IF THE OVEN FAILS TO OPERATE:

1. Check to ensure that the oven is plugged in securely. If it is not, remove the plug from the outlet, wait 10 seconds, and plug it in again securely.
2. Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the outlet with another appliance.
3. Check to ensure that the control panel is programmed correctly and the timer is set.
4. Check to ensure that the door is securely closed engaging the door safety lock system. Otherwise, the microwave energy will not flow into the oven.

IF NONE OF THE ABOVE RECTIFIES THE SITUATION, THEN CONTACT A QUALIFIED TECHNICIAN. DO NOT TRY TO ADJUST OR REPAIR THE OVEN YOURSELF.

Technical Specification

Technical Specification	
Rated Input Power	120V/60Hz, 1350W (MICROWAVE)
Rated Output Power (Microwave)	900 W
Product Dimensions (W×H×D)	19 ¹ / ₁₆ x 13 ⁵ / ₈ x 13 ¹⁵ / ₁₆ inches
Oven Capacity	0.9 cu. ft.
Turntable Diameter	Ø10.6" / Glass
Net Weight	Approx. 31.5 lbs.



The contents of this manual are proprietary and copyright protected by Lippert. Lippert prohibits the copying or dissemination of portions of this manual unless prior written consent for an authorized Lippert representation has been provided. Any unauthorized use shall void any applicable warranty. The information contained in this manual is subject to change without notice and at the sole discretion of Lippert. Revised editions are available for free download from lippert.com.

Please recycle all obsolete materials.

For all concerns or questions, please contact Lippert
PhL 432-LIPPERT (432-547-7378) | Web: lippert.com | E-mail: customerservice@lci1.com



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.