

110V SMART RV TV

MODEL: FDHS24D3A/ FDHS321DA/ FDHS39T5A/ FDFS43T5A/
FDUS50F2A/FDUS55F9A

LIPPERT NO.: 2022111214/ 2022111215/ 2022111216/ 2022111217/
2022111218

QUICK START GUIDE




* Product picture for reference only



This quick start guide will help you install and use the device properly. For further support and to download the complete user manual please visit www.furrion.com/support.


WHAT’S IN THE BOX

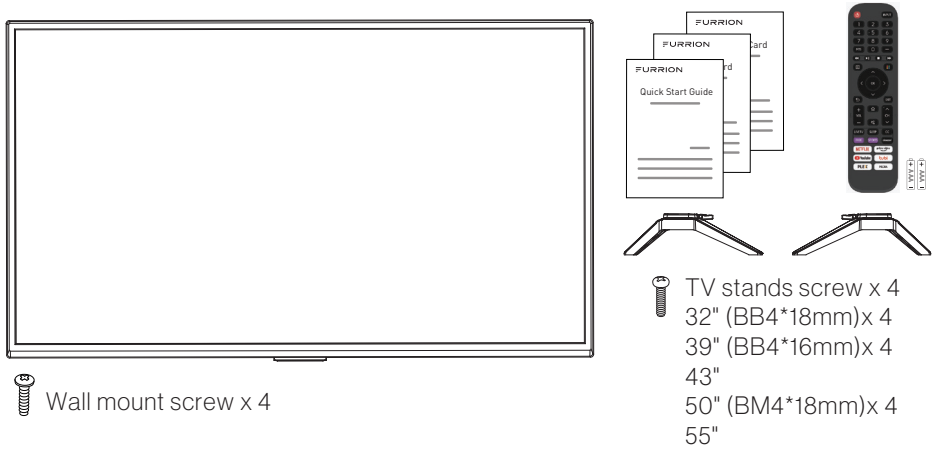


CONNECT

WARNING: Do not connect the power source before making connections. Open the cable access door to connect the cables.

NOTE: All external devices and cables shown in the diagram are for reference only and not included in the package.

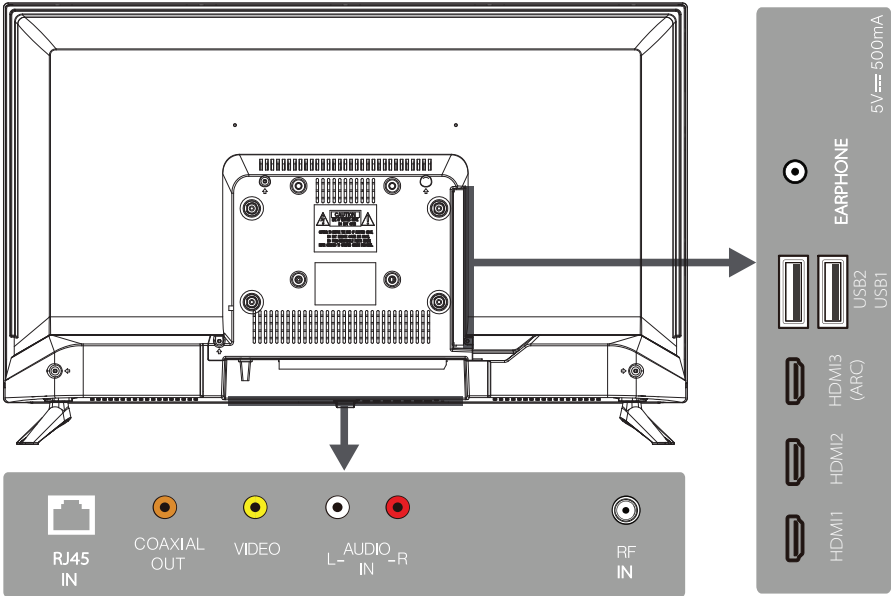


TV Connect Guide

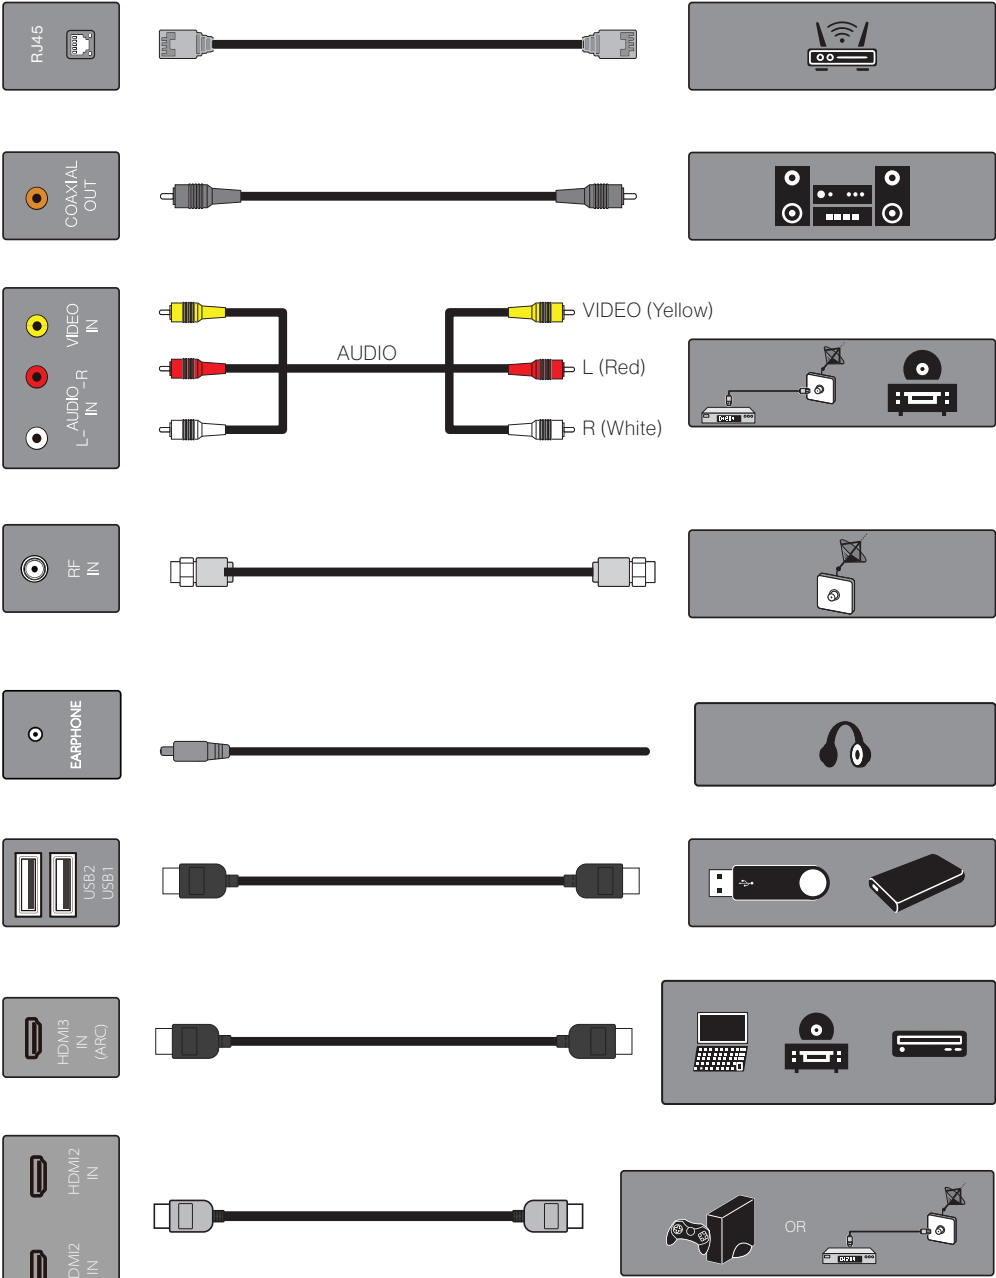

INSTALL

A. Use the supplied TV stands

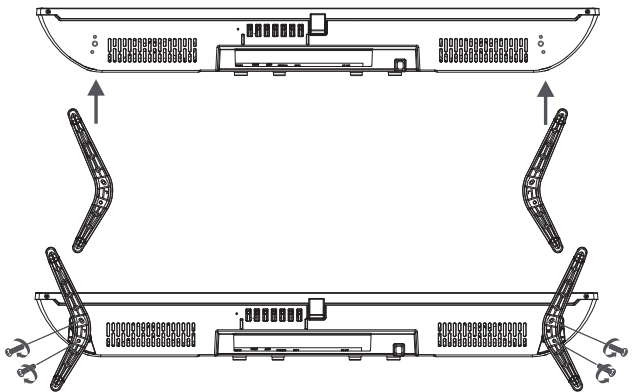


B. Wall Mount


Follow the installation guide supplied with the Wall-Mount Bracket when installing the TV.
Choose an appropriate location and refer to VESA pattern for mounting.

VESA MOUNTING PATTERN				
Size (Inch)	Width (mm)	Height (mm)	Screw Size	Screw Quantity (pcs)
24"	100	100	PM6*12mm	
32"	100	100		4
39"	200	100		
43"	200	100		
50"	200	200		

CONNECT POWER

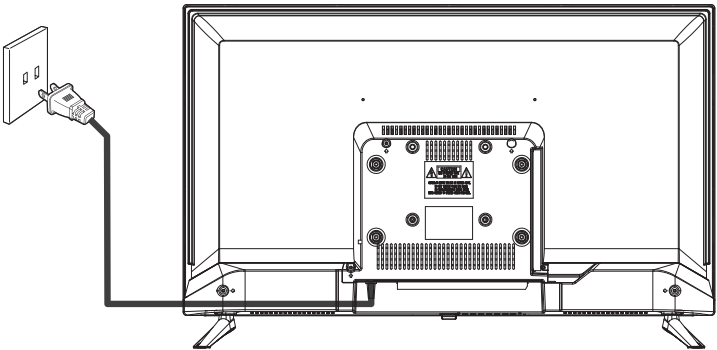


INSTALL REMOTE CONTROL BATTERY

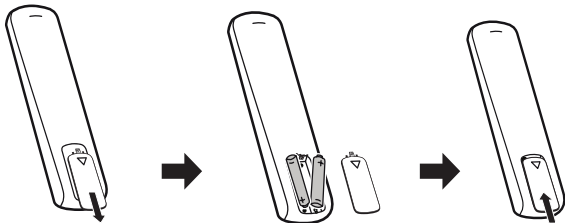


INITIAL SETUP


Press to power on and follow the on-screen instructions to finish initial setup.
Press or button to select one Language and choose TV Mode.

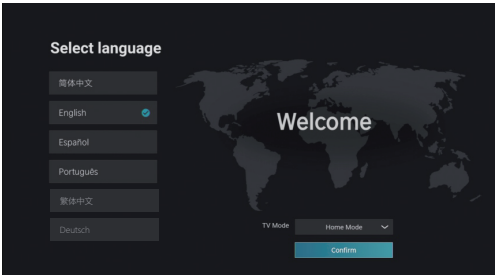


Press or button to select one Internet, then press **Confirm** to the next step.

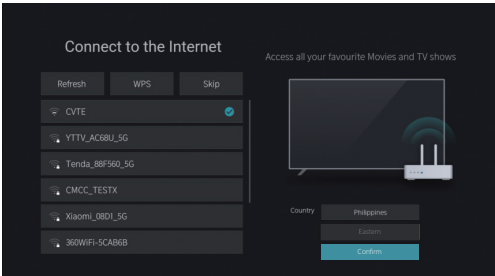


Press or button to select **Accept all**, and press **OK** button to the next step.

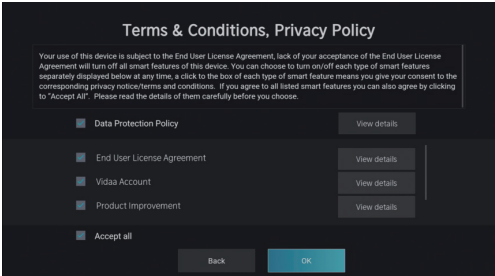


Sign in your VIDAA account.
If no account has been created, create an account and then sign in.

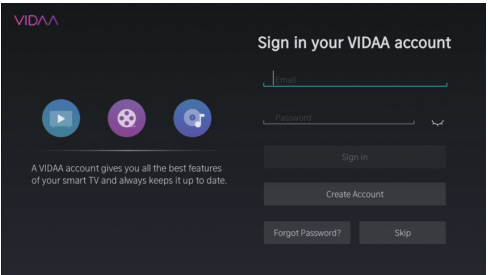

Select the **NETFLIX** or **Enjoy the Smart TV**.

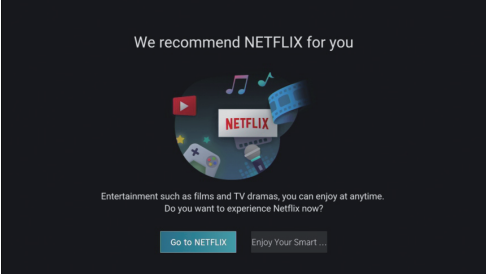

Press or button to select the **Set top box** or **Antenna/Cable**.

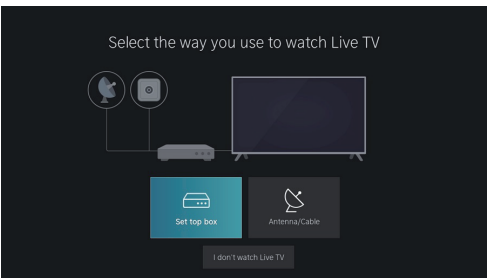

The contents of this manual are proprietary and copyright protected by Lippert. Lippert prohibits the copying or dissemination of portions of this manual unless prior written consent for an authorized Lippert representation has been provided. Any unauthorized use shall void any applicable warranty. The information contained in this manual is subject to change without notice and at the sole discretion of Lippert. Revised editions are available for free download from lippert.com.

Please recycle all obsolete materials.

For all concerns or questions, please contact Lippert
PhL 432-LIPPERT (432-547-7378) | Web: lippert.com | E-mail: customerservice@lci1.com



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.