



FURRION

Furrion Ltd. (Furrion) is a wholly owned subsidiary of Lippert Components, Inc. (Lippert)

Furrion Innovation Center & Institute of Technology

- 22244 Innovation Drive, Elkhart, IN 46514-5514, USA
- Toll free: 1-800-789-3341
- Email: support@furrion.com

©2007-2023 Furrion Ltd. Furrion® and the Furrion logo are trademarks licensed for use by Furrion Ltd. and registered in the U.S. and other countries.

For Patent Info: www.Lippert.com/patentsFurrion.com




The contents of this manual are proprietary and copyright protected by Lippert. Lippert prohibits the copying or dissemination of portions of this manual unless prior written consent from an authorized Lippert representative has been provided. Any unauthorized use shall void any applicable warranty. The information contained in this manual is subject to change without notice and at the sole discretion of Lippert. Revised editions are available for free download from lippert.com.

Please recycle all obsolete materials.


For all concerns or questions, please contact Lippert.
Ph:432-LIPPERT (432-547-7378) | Web: lippert.com | Email: customerservice@ci1.com

CCD-0007726 | REV DATE: 6-28-23


2. Mount on wall

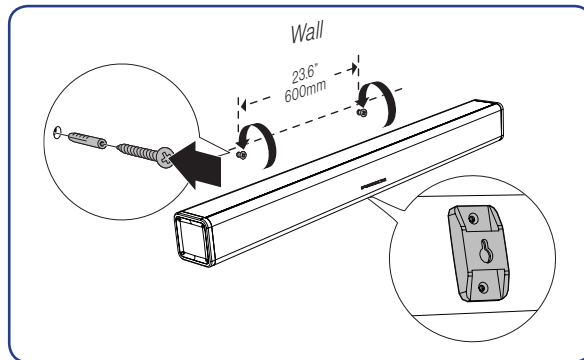

CONNECT POWER

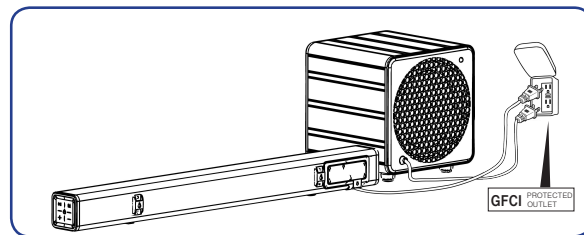


INSTALL REMOTE CONTROL BATTERY

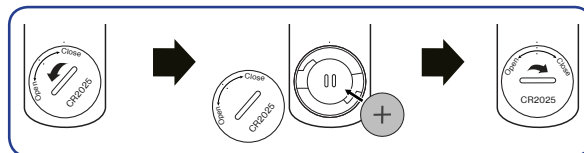

BASIC OPERATION

Soundbar Buttons

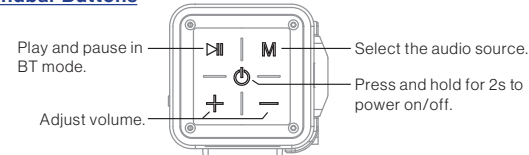

Soundbar Remote Control Operation

Remote Control Button	Function
	Power on/off.
	Short press to switch the source mode to Bluetooth; Press and hold it for 3s to unpair and launch pairing again. (BT Name: Furrion SB 2.1)
Source	Select the audio source (OPT, HDMI, AUX, BLUE).
	Mute or un-mute the audio output.
	Skip to the previous track in BT mode.
	Start or pause playback in BT mode.
	Skip to the next track in BT mode.
	Adjust volume.
BASS/TREBLE ▲ / ▼	Adjust the EQ balance of treble and bass

Tip: See the complete user manual online for detailed functional explanation.

TV Remote Control Operation

When the Soundbar is connected to the TV via HDMI and the soundbar in HDMI mode the TV remote may be used to control the soundbar. TV remotes differ based on brand and model, but general functionality is based on buttons found on most remotes.

- Power Button - Wakes soundbar when pressed to turn TV on. When pressed to turn TV off, soundbar will automatically sleep.
- Volume UP/DOWN - Adjusts the soundbar volume.
- Mute - Mutes or unmutes the audio output.

FURRION

130W Aurora 2.1 Outdoor Sound System



Quick Start Guide

Lippert Number: 2022323660

Model: FSBNN30MX



<https://support.ci1.com/stereo-subwoofers-soundbars>


* To view the multi-language user manual, please access the link or scan the QR code.

* Pour obtenir le manuel d'utilisateur multilingue, accédez au lien ou scannez le QR code.

* Para ver el manual de usuario en otros idiomas, acceda al siguiente enlace o escanee el código QR.

This quick start guide will help you install and use the device properly.
For further support and to download the complete user manual please visit <https://support.lci1.com/stereo-subwoofers-soundbars>.

WHAT'S IN THE BOX

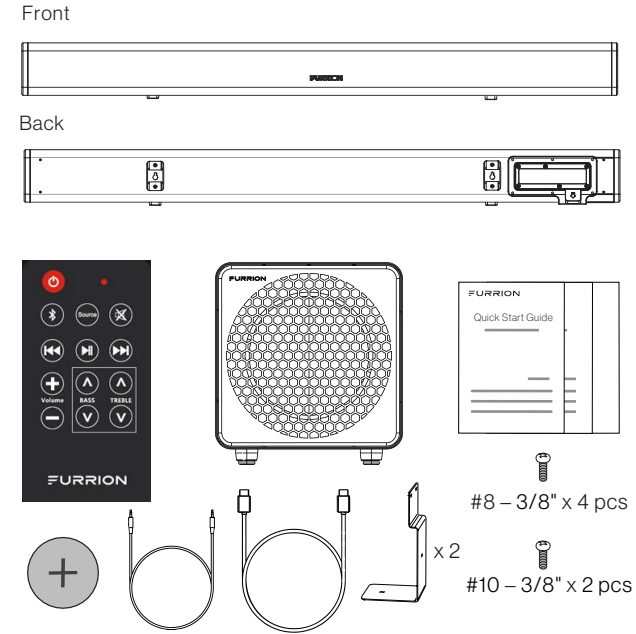


CONNECT

- Open the protective cover on the back of the soundbar by removing the screws. Then connect the cables.

Note: Some external devices shown in the diagram are for reference only and not included in the package.

1. Connect Soundbar with TV

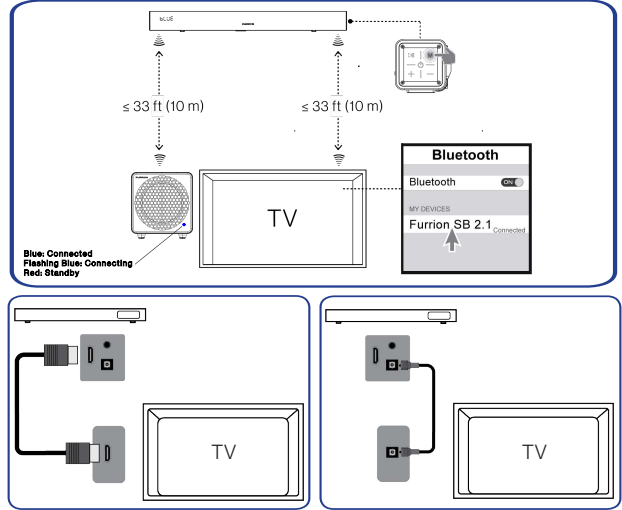


2. Connect Soundbar with Subwoofer

- Power on the soundbar by plugging it in and pressing the power button on the soundbar or on the remote.
- Power on the Subwoofer by plugging it in.
- Subwoofer will auto connect to the soundbar. Indicator Light on the Subwoofer will illuminate solid BLUE.

Note: If Indicator Light continues to flash BLUE after 30 seconds or is solid RED, see user manual for pairing.

3. Connect Soundbar with other devices

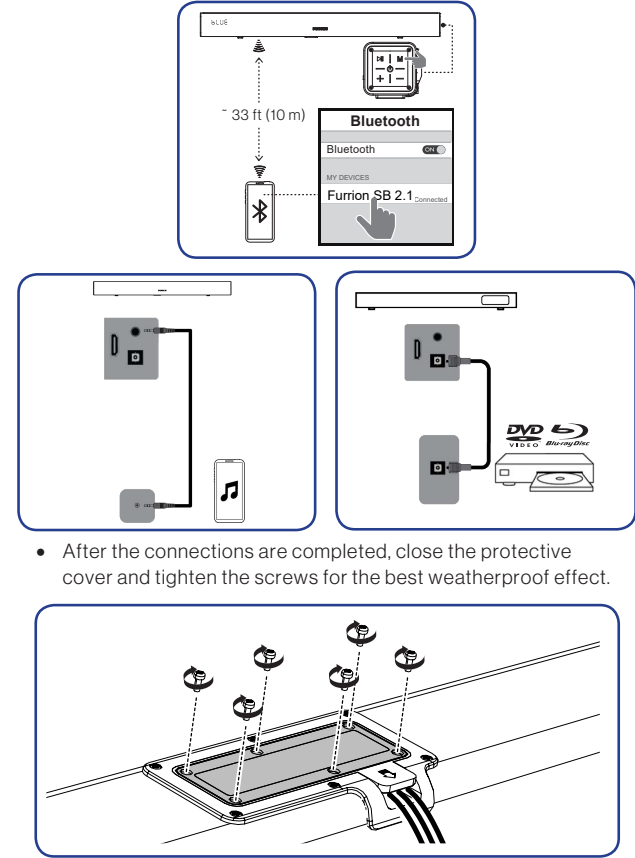


- After the connections are completed, close the protective cover and tighten the screws for the best weatherproof effect.

INSTALL

IMPORTANT: Before final installation, power on the Soundbar and Subwoofer to make sure they operate properly.

1. Install Soundbar to the compatible Furriion Aurora™ TV

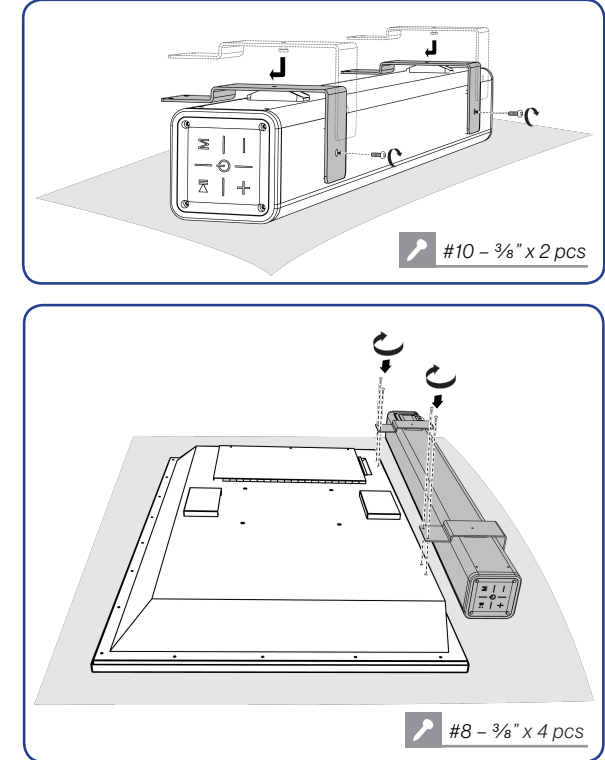



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.