


FURRION

2.4 GPM Tankless Gas Water Heater Door

Installation Guide

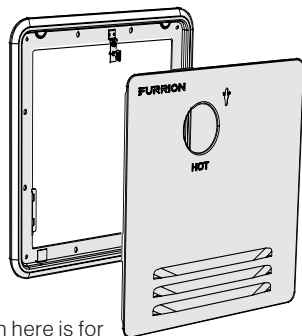

* Picture shown here is for reference only.

Model: FWH09EA-PS / FWH09EA-BL
FWH46EA-PS / FWH46EA-BL
FWH41EA-PS / FWH41EA-BL

WHAT'S IN THE BOX

 
⚠ WARNING

Suffocation Hazard

- Dispose packaging material or keep from reach of small children.

Failure to follow instruction could lead to serious injury or death.

Remove product from packaging and make sure you have the following list of items included. If any item is damaged or missing, contact your dealer.

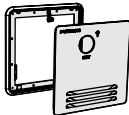Part	Description	Quantity
	Door Assembly (Assembly of door cover and door trim)	1
	Installation Guide	1

PREPARE CUTOUT OPENING

New Installation

1. Create a cutout with the following dimensions A and B of Fig. 1.

NOTE: The opening for the water heater should be right angle corners.

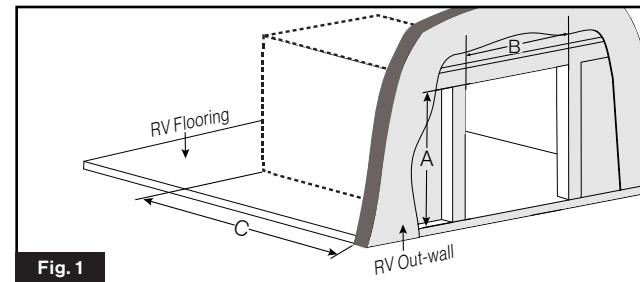


Fig. 1

Dimension		
A	B	C
12 5/8" ~ 12 3/4" (321-325mm)	12 3/4" ~ 12 13/16" (324-326mm)	Min. 20 1/2" (Min. 520mm)



The contents of this manual are proprietary and copyright protected by Lippert. Lippert prohibits the copying or dissemination of portions of this manual unless prior written consent for an authorized Lippert representation has been provided. Any unauthorized use shall void any applicable warranty. The information contained in this manual is subject to change without notice and at the sole discretion of Lippert. Revised editions are available for free download from lippert.com.


Please recycle all obsolete materials.

For all concerns or questions, please contact
Lippert
PhL 432-LIPPERT (432-547-7378) | Web:
lippert.com | E-mail:
customerservice@lci1.com

- Make sure that the front edge of the opening is surrounded by a solid frame to firmly anchor the water heater. If needed, construct the opening by using 1.5" x 1.5" min." wood or aluminum framing.

NOTE:


- Fiberglass, filon, and corrugated aluminum (Mesa 1") are all acceptable exterior wall siding solutions.
 - The exterior wall opening must be the same dimensions with no radius corners.
- Refer to depth "C" for minimum rear clearances, for such items as cabinets, appliances and utility entry locations.
 - Refer to Fig. 2 for adequate spacing from other items on the RV wall to the door assembly.

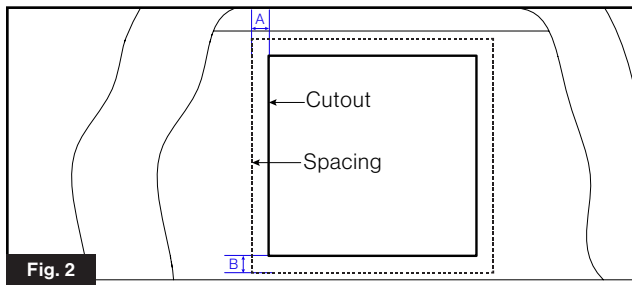

Door Assembly	A	B
FWH09EA-PS/BL	Min. 1 3/4" (45mm)	Min. 1 7/8" (47mm)
FWH41EA-PS/BL	Min. 2 3/4" (70mm)	Min. 1 7/8" (47mm)
FWH46EA-PS/BL	Min. 2 3/4" (70mm)	Min. 2 13/16" (72mm)

Existing Installation

Determine your existing cut-out and choose the appropriate door assembly. (Fig. 3)

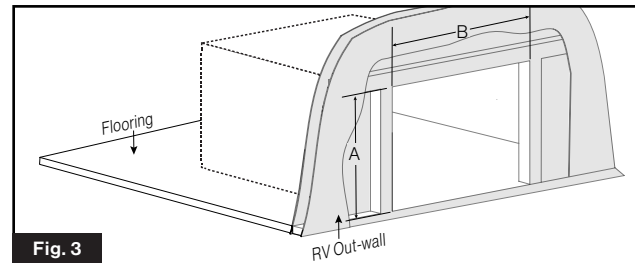

Model and Description	Existing Cutout Dimension	
	A	B
FWH09EA-PS/BL Door 16 1/8" x 16 1/8" (410x410mm)	12 5/8" ~ 15" 321 ~ 381mm	12 1/16" ~ 15" 322 ~ 381mm
FWH41EA-PS/BL Door 16 1/8" x 18 1/8" (410x460mm)	12 5/8" ~ 15" 321 ~ 381mm	12 1/16" ~ 17" 322 ~ 432mm
FWH46EA-PS/BL Door 18 1/8" x 18 1/8" 460x460mm)	12 5/8" ~ 17" 321 ~ 432mm	12 1/16" ~ 17" 322 ~ 432mm

Installation Water Heat Door

Please refer to the user manual of water heater for the installation.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.