


FURRION

24" Gas Cooktop

How To Change NG to LPG

Quick Start Guide

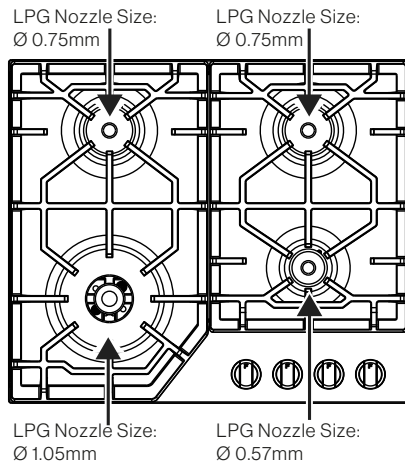

CAUTION

Grate are similar in shape; pay attention to put them in proper position, according to the burners' diameter!

Model: FGHD4L2R-SS

Adjusting the Regulator

1. Disconnect all electrical power at the main circuit breaker or fuse box.
2. Shut off the gas supply to the cooktop by closing the manual shut-off valve.
3. Adjust the pressure regulator by following below instructions: (Fig. 1)

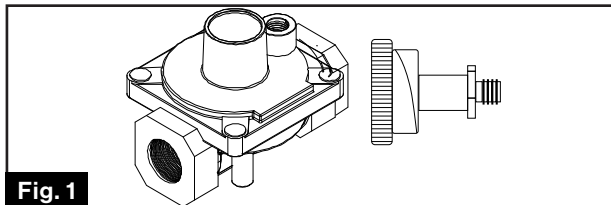


Fig. 1

- Unscrew the regulator cap with the wrench. (Fig. 2)

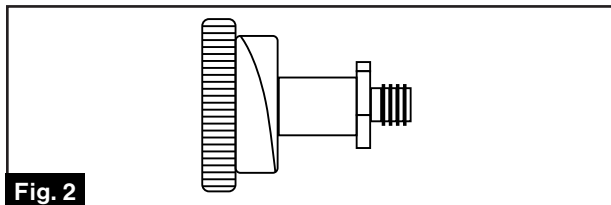


Fig. 2

- Remove the retainer pin and spring. (Fig. 3)

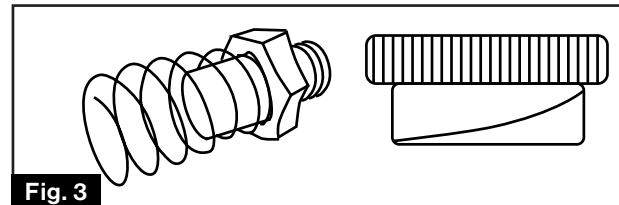


Fig. 3

- To convert gas supply from NG to LP gas, reverse the retainer pin and spring, and put back tightly into the regulator cap. (Fig. 4)

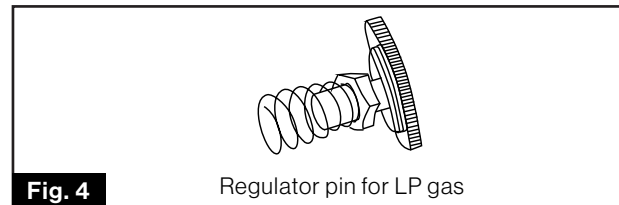


Fig. 4

Regulator pin for LP gas

- Screw the regulator cap back into the regulator and re-attach the regulator to the nipple and flare union. (Fig. 5)

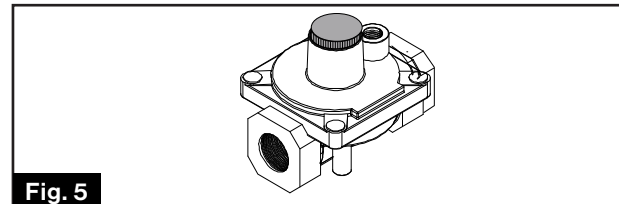


Fig. 5



The contents of this manual are proprietary and copyright protected by Lippert. Lippert prohibits the copying or dissemination of portions of this manual unless prior written consent for an authorized Lippert representation has been provided. Any unauthorized use shall void any applicable warranty. The information contained in this manual is subject to change without notice and at the sole discretion of Lippert. Revised editions are available for free download from lippert.com.

Please recycle all obsolete materials.



For all concerns or questions, please contact Lippert
PhL 432-LIPPERT (432-547-7378) | Web: lippert.com | E-mail: customerservice@lci1.com

Changing Burner Nozzles


Before change the burner nozzles, disconnect all electrical power at the main circuit breaker or fuse box. Shut off the gas supply to the cooktop.

INSTALLATION TIP: First remove all nozzles and then start replacing them. This will help to prevent the possibility that some may not be replaced.


1. Remove the burner grates, burner caps and knobs. (Fig. 6 & Fig. 7)

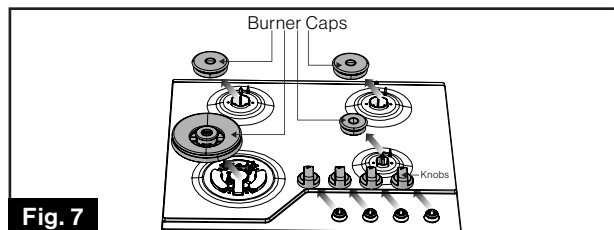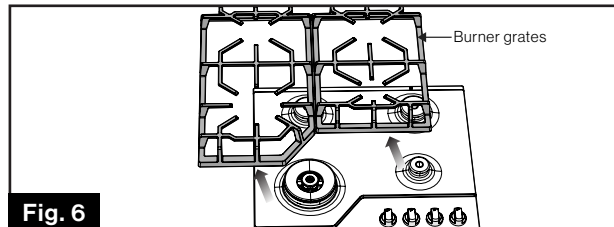

2. Use a 7mm nut sleeve to remove the below 3 burner nozzles. (Fig. 8)

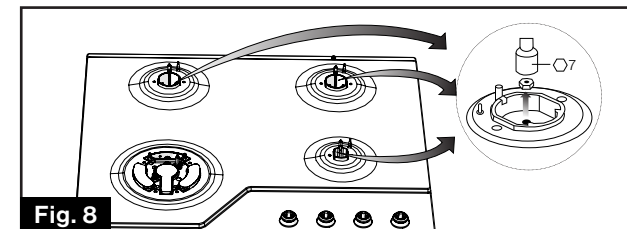

3. Use a 7mm nut driver to remove the below burner nozzle. (Fig. 9)

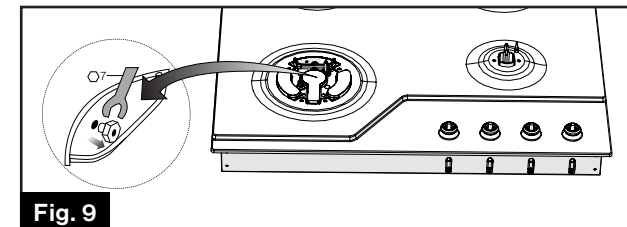

4. Install the proper nozzles tightly in the exact locations as shown above.
5. It should test each burner's leakage one by one to make sure the nozzles are fixed tightly.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.