


32" Furrion Sense™ HD DLED All-In-One Entertainment System

Instruction Manual

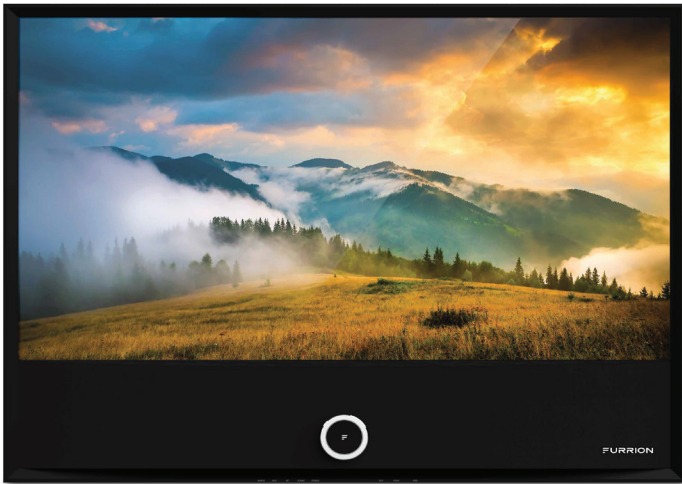

*Product picture is for reference only.

Model: FDHK32V1A

Welcome

English

Thank you for purchasing this 32" Furrion Sense™ HD DLED All-In-One Entertainment System. Before operating your new product, please read these instructions carefully. This instruction manual contains information for safe use, installation and maintenance of the product.

The manufacturer does not accept responsibility for any damages due to not observing these instructions. If you have any questions regarding our products, please contact us at

support@furrion.com

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Unique Identifier

Trade Name: Furrion

Model No.: FDHK32V1A

Responsible Party – U.S. Contact Information

Furrion Innovation Center & Institute of Technology

52567 Independence Ct., Elkhart, IN 46514, USA

Toll free: 1-888-354-5792; Email: support@furrion.com

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Contents

Welcome.....	2
Contents.....	3
Safety Warnings.....	4
Compliance	7
Safety Precautions.....	8
Input & Output ports	9
Front Panel	10
Remote Control	13
About Your TV	15
Features	15
Power Source.....	15
Before Operation	16
What's in the box.....	16
Prepare your Remote Control.....	16
Getting Started.....	17
TV Settings.....	18
Setup Settings.....	18
Picture Settings	20
Audio Settings.....	21
Time Settings.....	22
Lock Settings.....	23
Channel Settings.....	26
USB Mode	27
Soundbar Operation	28
Specification	30
Troubleshooting.....	33

Safety Warnings



CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This 'bolt of lightning' indicates uninsulated material within your unit which may cause an electric shock. For the safety of everyone in your household, please do not remove product covering.



The 'exclamation mark' calls attention to features within the enclosed literature to prevent operating and maintenance problems.



This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

WARNING: To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain / moisture or placed in the vicinity of objects filled with liquids (such as vases).

CAUTION: To prevent electric shock, fully insert the plug. For regions with polarized plugs: Please match wide blade to wide slot.

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.


7. Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as if the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, or when the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Apparatus should not be exposed to dripping or splashing, and objects filled with liquids, such as vases, should not be placed on the apparatus.



Safety Warnings

16. An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to eliminate touching power lines or circuits as contact might be fatal.
17. Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
18. Never push objects of any kind into this product through openings as they may touch short-out parts or dangerous voltage points that could result in a fire or electric shock. Never spill liquid of any kind on the product.
19. If an outside antenna is connected to the television equipment, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges. Section 810 of the National Electrical Code provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrodes.

EXAMPLE OF ANTENNA GROUNDING AS PER THE NATIONAL ELECTRICAL CODE

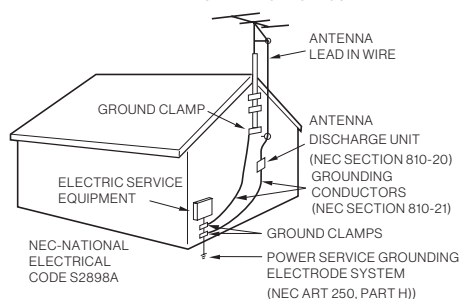

20. NOTE TO CABLE/TV INSTALLER: This reminder is provided to call the CATV system installer's attention to Article 820-40 of the National Electric Code (U.S.A.). The code provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of the cable entry as practical.
21. When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.
22. Upon completion of any service or repairs to this unit, ask the service technician to perform safety checks to determine that the unit is in proper operating condition.
23. When you connect the product to other equipment, turn off the power and unplug from the wall outlet. Failure to do so may cause an electric shock and serious personal injury. Read the owner's manual of the other equipment carefully and follow the instructions when making any connections.
24. Sudden high volume may cause hearing or speaker damage. When you use headphones (if the unit is equipped with a headphone jack), keep the volume at a moderate level. If you use headphones continuously with high volume, you may suffer hearing damage.
25. Any severe physical impact on the product may cause certain components to fallout of place within and break, which may cause fire or electric shock. In such event, do not operate the product. Contact the manufacturer for support.
26. In case of product malfunction or unusual events such as electrical burning smell, smoke, or loss of content signals on built-in Soundbar due to internal overheating,

Safety Warnings

immediately turn off and unplug the power and contact the manufacturer.

27. Do not mount this product near a motor or transformer where strong magnetism is generated.
28. Do not allow the product to output distorted sound for extended periods of time. This may cause speaker overheating and fire.
29. The socket-outlet must be installed near the unit and easily accessible.
30. The mains plug is used as the disconnect and shall remain readily operable.
31. Batteries (battery pack or installed batteries) should not be exposed to excessive heat such as direct sunlight, fire or other heat sources.

CONDENSATION

Moisture will form in the operating section of the unit if the unit is brought from cool surroundings into a warm room or if the temperature of the room rises suddenly. When this happens the unit's performance will be impaired. To prevent this, let the unit stand in its new surroundings for about an hour before switching on, or make sure the room temperature rises gradually.

Condensation may also form during the summer if the unit is exposed to the breeze from an air conditioner. In such cases, change the location of the unit.

HOW TO HANDLE THE LED PANEL

- Do not press hard or jolt the LED panel. It may cause the LED panel glass to break and injury may occur.
- If the LED panel is broken, make absolutely sure you do not touch the liquid in the panel. This may cause skin inflammation.
- If the liquid gets in your mouth, immediately rinse and consult with your doctor. Also, if the liquid gets in your eyes or touches your skin, consult your doctor after rinsing for at least 15 minutes in clean water.

Possible Adverse Effects on LED Panel:

If a fixed (non-moving) pattern remains on the LED panel for long periods of time, the image can become permanently engrained and cause subtle but permanent ghost images. This type of damage is **NOT COVERED BY YOUR WARRANTY**. Never leave your LED panel on for long periods of time while it is displaying the following formats or images:

- Fixed images, such as stock tickers, video game patterns, TV station logos and websites.
- Special formats that do not use the entire screen. For example, viewing letterbox style (16:9) media on a normal (4:3) display (black bars at top and bottom of screen); or viewing normal style (4:3) media on a wide screen (16:9) display (black bars on left and right sides of screen).

The following symptoms are not signs of malfunction but technical limitation. Therefore we disclaim any responsibility for these symptoms.

- LED panels are manufactured using an extremely high level of precision technology, however sometimes parts of the screen may be missing picture elements or have luminous spots. This is not a sign of a malfunction.
- Do not install the LED panel near electronic equipment that produces electromagnetic waves. Some equipment placed too close to LED may cause interference.
- Effect on infrared devices – there may be interference while using infrared devices such as infrared cordless headphones.

POWER SOURCE

NOTE: Please make sure to insert the cord securely at both the Furrion Sense™ TV and 12V outlet.

Safety Warnings

WARNING:

- Do not connect this unit to the power using any device other than the supplied 12V cigarette adapter. Or else it may cause fire, electric shock, or damage.
- Do not use with a voltage other than the power voltage specified. Or else it may cause fire, electric shock, or damage.
- This product is used on RVs under the RVIA code. These RVs contain fuses required by RVIA. And, this product has been tested by LANSON AFM15 fuse.

CAUTION:

- When the unit is not being used for extended periods of time(e.g., away on a trip), in the interest of safety, be sure to unplug it from the outlet.
- Do not plug/unplug the 12V cigarette adapter (included) when your hands are wet. Doing this may cause electric shock.
- If you need to replace the supplied 12V cigarette adapter or purchase a AC power adapter (not included), the specified one is recommended. Contact your dealer to purchase a factory replacement.

Compliance

FCC Statement

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by

turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment under FCC Rules.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

IC Statement

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

IC Radiation Exposure Statement:

This equipment complies with Canada radiation exposure limits set forth for uncontrolled environments.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Safety Warnings

RADIATION EXPOSURE STATEMENT

This equipment complies with FCC's and IC's RF radiation exposure limits set forth for an uncontrolled environment. The antenna(s) used for this transmitter must be installed and operated to provide a separation distance of at least 20 cm from all persons and must not be collocated or operating in conjunction with any other antenna or transmitter. Installers must ensure that 20cm separation distance will be maintained between the device (excluding its handset) and users.


Safety Precautions

WARNING: Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television set.
- Only using furniture that can safely support the television set.
- Ensuring the television set is not overhanging the edge of the supporting furniture.
- Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls.

If your existing television set is being retained and relocated, the same considerations as above should be applied.

The unit emits heat when in operation. Do not place any covers or blankets on the unit, this may cause overheating. Do not block ventilation holes, or set up near radiators. Do not place in direct sunlight. When placing on a shelf, leave 4 inches (10 cm) free space around the entire unit.

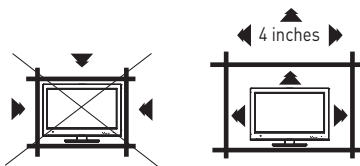

Notes when mounting the LED TV on the wall


If the unit is to be mounted on the wall, contact the retailer where you purchased the LED TV for advice, and have the equipment professionally installed. Incomplete or improper installation may cause injury to you and/or damage to the LED TV.

WARNING:

- Do not use this TV with wall mounts that allow the TV to tilt vertically. Vertical tilting wall mounts may cause structural damage to the TV.
- Use ONLY fixed or horizontal swiveling wall mounts with this TV.

Function Overview

Input & Output ports

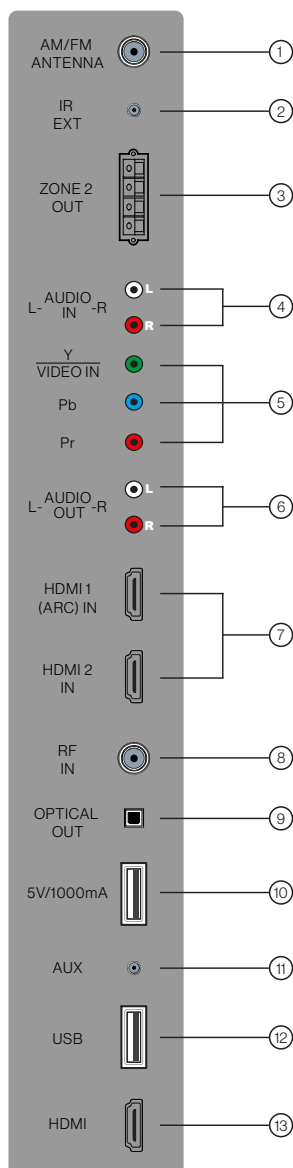


Item	Input/Output	Function
①	AM/FM ANTENNA	Connect to the AM/FM antenna.
②	IR EXT	Connect to the IR EXT port of another Furrion Sense™ TV.
③	ZONE 2 OUT	Connect to Zone 2 Speaker.
④	L-AUDIO IN-R	Connect to the COMPOSITE AUDIO OUT ports of a DVD Player, Cable Box or other compatible devices.
⑤	Y VIDEO IN	Connect to the COMPONENT VIDEO OUT ports of a DVD Player, Cable Box or other compatible devices.
	Pb	
	Pr	
⑥	L-AUDIO OUT-R	Connect to the AUDIO IN ports of an audio device.
⑦	HDMI 1 (ARC) IN	Connect to the HDMI OUT port of a DVD Player, Games Console, Cable Box or other HDMI device. • ARC (Audio Return Channel) When connected with a HDMI 1.4 cable to an ARC compatible audio system, the TV links with the device to give extra audio functionality.
	HDMI 2 IN	
⑧	RF IN	Connect to TV ANTENNA, CABLE, or CABLE BOX.
⑨	OPTICAL OUT	Connect to the OPTICAL AUDIO IN port of an audio device.
⑩	USB (5V/1000mA)	Rear USB Port: Provide power supply only for Google dongle / Roku etc.
⑪	AUX	Front Aux In port: Connect to the 3.5mm audio output socket on an auxiliary device.
⑫	USB	Front USB port: Connect a USB storage device.
⑬	HDMI	Front HDMI In port: Connect to the HDMI output socket on an AV device.

* The configuration of the connection ports may vary from model to model.

Function Overview

Front Panel

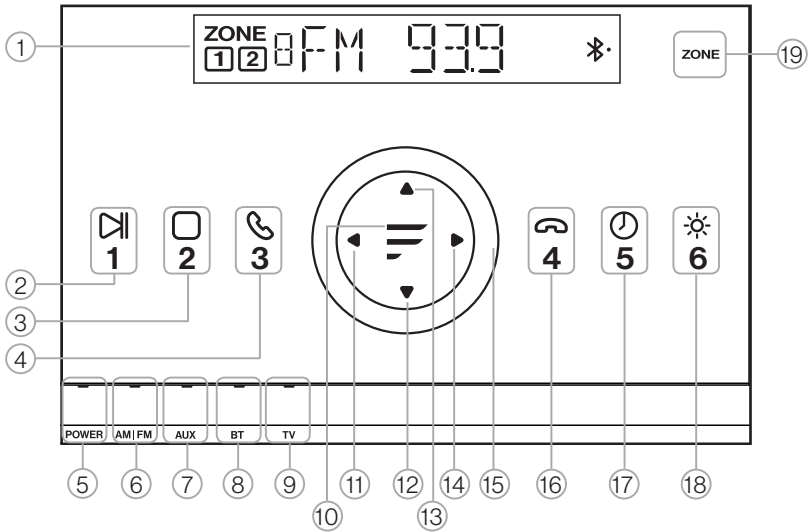

Item	Description	
①	LCD screen	Display the audio source, mode or status.
②		- In radio mode, press and hold this button to store the current frequency as the preset station No.1. Press it briefly to recall the preset station 1. - In BT/USB mode, press this button to play or pause the current playback.
③		- In radio mode, press and hold this button to store the current frequency as the preset station No.2. Press it briefly to recall the preset station 2. - In BT/USB mode, press this button to stop playback. - In non-radio mode, press and hold this button to select the alarm source input AL AUX, AL BT, AL TV or AL RADIO. The corresponding source will display on the front panel LCD.

Item	Description	
④		- In radio mode, press and hold this button to store the current frequency as the preset station No.3. Press it briefly to recall the preset station 3. - In BT mode for an incoming call, press this button to answer. - In BT mode, press this button directly to dial out the last called number.
⑤	POWER	Press it to turn the whole unit on/off.
⑥	AM/FM	- Press it to select AM/FM source when the TV is off : press it to select AM1, AM2, FM1, FM2 or FM3. - Press and hold it to select the radio region USA1, USA2, EUROPE or AUSTRALIA.
⑦	AUX	Press it to select AUX source when the TV is off.

Function Overview

Item	Description	
⑧	BT	- Press BT to select Bluetooth source. It will automatically launch connection with connecting the device paired last time. (BT name: Furrrion Sense 32" TV). - Press and hold it for 6 seconds to disconnect the Bluetooth and clear the pairing information.
⑨	TV	- In TV mode, press this button to display TV input source; press and hold it to enter TV setting menu. - In non-TV mode, press this button to select TV source for Zone 1.
⑩		Touch key: - In TV mode, press briefly to confirm your setting within a menu. - Press and hold it to mute both zones. The indicator on the key lights up. Press and hold it again to unmute.
⑪		- During playback with BT or USB (with a USB storage device connected), press this touching key to skip to the previous track. - In radio mode, press this touching key to move down the radio frequency one step at a time. Press and hold this key to automatically search the radio stations downwards. - In TV mode, press this touching key to move the cursor left within a TV menu.
⑫		In TV mode: - Select TV channel downward; - Move the cursor down within a TV menu.
⑬		In TV mode: - Select TV channel upward. - Move the cursor up within a TV menu.

Item	Description	
⑭		- During playback with BT or USB (with a USB device connected), press this touching key to skip to the next track. - In radio mode, press this touching key to move up the radio frequency one step at a time. Press and hold this touching key to automatically search the radio stations upwards. - In TV mode, move the cursor right within a TV menu.
⑮	Volume knob	Rotate the knob clockwise or counterclockwise to increase or decrease volume.
⑯		- In radio mode, press and hold this button to store the current frequency as the preset station No.4. Press it briefly to recall this stored frequency. - In BT mode, press this button to hang up an incoming call.
⑰		- In non-radio mode, press and hold it to enter clock setting mode. When the hour or minute digits flash, tap the touch key ▶ to switch between hour and minute setting and rotate the volume knob to set the hour or minute. The time is set automatically after a few seconds of inactivity. - In clock setting mode with alarm off (default), press and hold it to enter ALARM ON setting mode (🔔 icon shown). Then repeat the hour and minute setting operation in clock setting mode. When the set alarm is on, the 🔔 icon will stay on the front panel LCD in standby mode. - In clock setting mode with alarm on, press briefly to enter ALARM ON setting mode or vice versa. - In clock setting mode with alarm on or in ALARM ON setting mode, press and hold it to turn off the set alarm (ALARM OFF shown briefly). - In radio mode, press and hold it to store the station as preset number 5. Press it briefly to recall the preset station 5.


Function Overview

Item		Description
⑮		• In radio mode, press and hold this button to store the current frequency as the preset station No.6. Press it briefly to recall the preset station 6. • In non-radio mode, press and hold it to select BL LOW, BL MID or BL HIGH to adjust the brightness.
⑯	ZONE	Press briefly to switch between ZONE 1 and ZONE 2. • By default, ZONE 1 is on while ZONE 2 is off. You can press ZONE briefly to turn on ZONE 2 and play the same source as ZONE 1. • When the selected zone is displayed on the front panel LCD, you can change source or adjust volume of the zone specifically. Press and hold it to turn off the current zone. • When the current zone is off (OFF displayed on the front panel LCD), source input (AM/FM, AUX, BT, TV) and volume controls for the zone will be invalid.

Function Overview

Remote Control

English

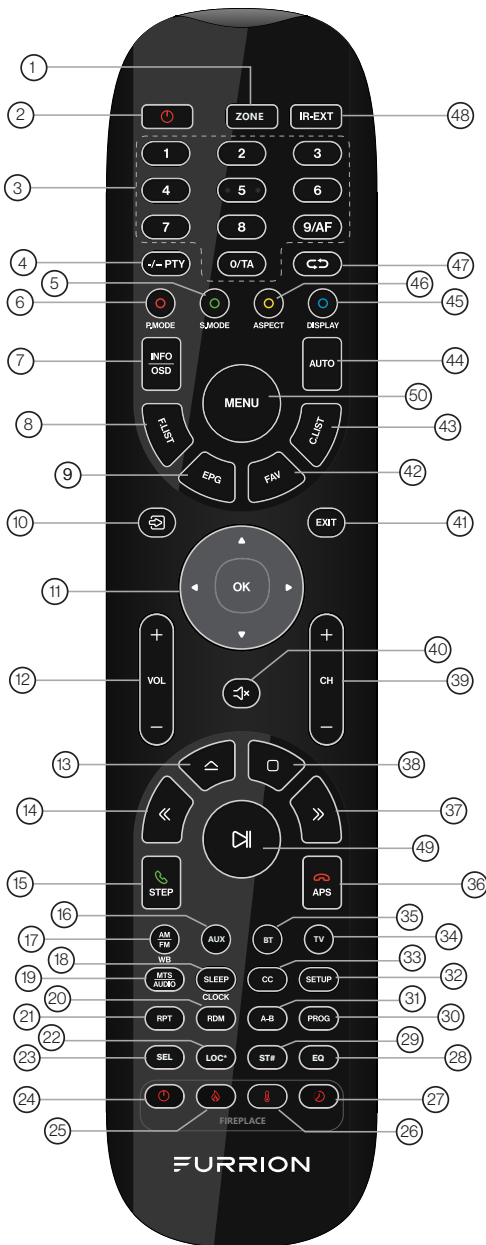

Item	Button	Function
①	ZONE	Press briefly to switch between ZONE 1 and ZONE 2. Press and hold it to turn off the current zone.
②		Turn on/off the whole unit.
③	NUMBER BUTTONS	Enter numbers or select channels.
④	-/PTV	Switch between single and double digit input.
⑤	S.MODE	Select a sound mode.
⑥	P.MODE	Select a picture mode.
⑦	INFO/OSD	In TV mode, press to display information on the selected TV channel.
⑧	F.LIST	Display favorite list.
⑨	EPG	Display the program guide.
⑩		Select the input sources.
⑪	NAVIGATION BUTTONS/ OK	Navigate within a menu; Press OK to confirm your selection.
⑫	VOL +/-	Increase/decrease volume.
⑬		No function for this Sense TV.
⑭		Return to the previous track/ chapter during playback. Press and hold it to fast backward. Automatic or manual tuning in radio mode.
⑮		Dial or accept a call (when the system is connected to a cell phone via BT).
⑯	AUX	Select AUX mode.
⑰	AM/FM	Select AM/FM/WB radio mode.

Function Overview

Item	Button	Function
⑮	SLEEP/CLOCK	In TV mode, press it to set the sleep timer; In non-TV mode, press and hold it to select Clock, ALARM ON or ALARM OFF setting.
⑰	MTS/AUDIO	Cycle through MTS sound modes.
⑳	RDM	No function for this Sense TV.
㉑	RPT	No function for this Sense TV.
㉒	LOC*	In FM mode, select LOC (local) on /off to search radio stations with strong reception strength.
㉓	SEL	Select a feature from Volume, Bass, Treble and Balance.
㉔		Turn on/off the Fireplace.
㉕		Adjust the flame of the fireplace.
㉖		Adjust the temperature of the fireplace.
㉗		Adjust the time of the fireplace.
㉘	EQ	Select the preset sound mode MUSIC or MOVIE.
㉙	ST#	In FM mode, select Stereo or Mono sound.
㉚	PROG	No function for this Sense TV.
㉛	A-B	No function for this Sense TV.
㉜	SETUP	No function for this Sense TV.
㉝	CC	Switch Closed Captions On and Off.

Item	Button	Function
㉞	TV	Switch to TV mode.
㉟	BT	Select the Bluetooth mode.
㊱	 APS	Scan radio stations: Press it to search each stored station. Press and hold it to scan and store the 6 strongest stations; End or reject a call when the system is connected to a cell phone via BT.
㊲		During playback, press it to select the next track/ chapter. Press and hold it to fast forward. In radio mode, tune it automatically or manually.
㊳		Stop playback.
㊴	CH+/-	Channel Up/Down.
㊵		Mute /Unmute the sound.
㊶	EXIT	Exit the current menu.
㊷	FAV	Press to add the channel to favorite list.
㊸	C.LIST	Display the channel list.
㊹	AUTO	No function for this Sense TV.
㊺	DISPLAY	Display the selected source.
㊻	ASPECT	Display available aspect ratios.
㊼		Switch between the current and previous channel.
㊽	IR-EXT	Control another Furrion Sense™ TV when IR external cable connected.
㊾		Start, Pause or restart playback.
㊿	MENU	Enter the main menu.

About Your TV

Features

TV with integrated Soundbar system -

You can operate the TV from the sources of HDMI, DTV/ATV, USB (audio & pictures only) or CVBS with the decoded audio being present on the build-in speakers (stereo); You can enjoy the audio sources of AM/FM, Bluetooth or Line-in even when the TV screen is turned off.

Speaker drivers mounted with a suspension system and facing towards the user - This will reduce vibrations / acoustic feedback to ensure the high quality sound.

Front-facing control buttons and LCD on the bottom of the TV panel - It allows to press the keys easily from the front for basic operation. The LCD displays the source mode and basic information

Front USB in/ HDMI in/ Aux in port - It allows to connect with an external USB device / AV device / Auxiliary device from the front of the TV.

Power Source

NOTE:

- Please make sure to insert the cord securely at both the LED TV and the wall outlet.

WARNING:

- DO NOT CONNECT THIS UNIT TO THE POWER USING ANY DEVICE OTHER THAN THE SUPPLIED 12V CIGARETTE ADAPTER. DOING SO MAY CAUSE FIRE, ELECTRIC SHOCK, OR DAMAGE.
- DO NOT USE WITH A VOLTAGE OTHER THAN THE POWER VOLTAGE SPECIFIED. DOING SO MAY CAUSE FIRE, ELECTRIC SHOCK, OR DAMAGE.

CAUTION:

- WHEN THE UNIT IS NOT BEING USED FOR EXTENDED PERIODS OF TIME (E.G., AWAY ON A TRIP), IN THE INTEREST OF SAFETY, BE SURE TO UNPLUG IT FROM THE OUTLET.
- DO NOT PLUG/UNPLUG THE 12V CIGARETTE ADAPTER (INCLUDED) OR AC POWER ADAPTER (EXCLUDED) WHEN YOUR HANDS ARE WET. DOING SO MAY CAUSE ELECTRIC SHOCK.
- IF YOU NEED TO REPLACE THE SUPPLIED 12V CIGARETTE ADAPTER OR AC POWER ADAPTER (EXCLUDED), THE SPECIFIED ONE IS RECOMMENDED. CONTACT YOUR DEALER TO PURCHASE A FACTORY REPLACEMENT.

Before Operation

What's in the box

Thanks for purchasing this Furrion Sense™ HD LED TV. This manual will help you set up and begin using your TV.


First, check the contents of your box with the parts checklist below:

- TV
 - Remote control
 - AAA battery × 2
 - Wall-mount screws
 - Quick Start Guide
 - Warranty Manual
 - Warning Card
- Now you can get started!


Prepare your Remote Control

BATTERY INSTALLATION

1. Open battery compartment cover.

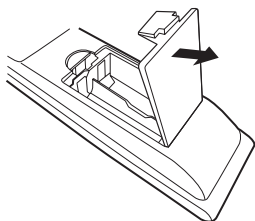

2. Install two AAA batteries.

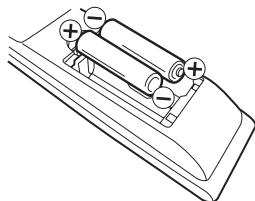

3. Close the cover of the battery compartment.

NOTE: Use two “AAA” size batteries. The batteries may last approximately one year depending on usage. For best performance, it is recommended the batteries should be replaced on a yearly basis, or when the remote operation becomes erratic. Do not mix old and new batteries or different types.

BATTERY PRECAUTIONS

These precautions should be followed when using batteries in this device:

- Use only the size and type of batteries specified.
- Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reversed batteries may cause damage to the device.
- Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.
- If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
- Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer's directions.)
- Please use caution when inserting batteries to avoid battery damage. If the spring terminal in the remote control remains in contact with a side of a damaged battery it can cause a short circuit. Never use damaged batteries as they can become very hot and are dangerous.

Getting Started

The **Setup Wizard** window appears the first time you turned on the TV. It will assist you to configure the TV and scan for available channels.

IMPORTANT: Make sure the antenna is correctly connected with the cables of TV system.

1. Press the button  on the remote control (or press **POWER** button at the bottom of TV front panel) to turn on the TV. The **Setup Wizard** window appears on the screen.

NOTE: It may take a few seconds before the **Setup Wizard** window appears on the screen.

2. Use  or  on the remote control to highlight **TV Location**, then press  or  to select **Home Mode** or **Store Mode**.

NOTE: When you select **Store Mode** it will remind you that **Store Mode** consumes more energy. Select **Yes** to enter or **No** to cancel.

Press  or  to highlight **Go to next step**, press **OK** or  to go to the next step.

Setup Wizard

TV Location < Home Mode >

Go to next step

Set the TV Mode to Store for retail display use. Set the TV Mode to Home for home use. In this mode the TV will remember your customized settings.

  Select   Move **MENU** Return

3. Use  or  on the remote control to highlight **Menu Language**, then press  or  to select the desired language. Press  or  to highlight **Go to next step**, press **OK** or  to go to the next step.

Setup Wizard

Menu Language < English >

Go to next step

Please select your preferred language

  Select   Move **MENU** Return

4. Use  or  on the remote control to highlight **Time Zone**, then press  or  to select desired time zone. Use  or  to highlight **Daylight Saving Time**, then press  or  to select **On/Off**. Use  or  to highlight **Time Format**, then press  or  to select **12-hour** or **24-hour**. Use  or  to highlight **Go to next step**, then press **OK** or  to go to the next step.

Setup Wizard

Time Zone < Pacific >

Daylight Saving Time Off

Time Format 12-hour

Go to next step

Select the time zone & Daylight saving time

  Select   Move **MENU** Return

5. Use  or  on the remote control to highlight **Air/Cable**, then press  or  to select **Air** or **Cable** base on your connection. Use  or  to highlight **Go to next step**, press **OK** or  to start the auto scan.

Setup Wizard

Air/Cable < Air >

Go to next step

Select the antenna type then auto scan


  Select   Move **MENU** Return

The **Setup Wizard** will scan for available channels automatically. The scanning may take some time.

TV Settings

Setup Settings

1. Press **MENU** button on the remote control to display the main menu.
2. Use ◀ or ▶ highlight **Setup** mode.
3. Use ▲ or ▼ to highlight the item you would like to reset, then press ◀ or ▶ to select the settings.
4. Press **MENU** to return to the previous menu or press **EXIT** at any time to exit the setting.

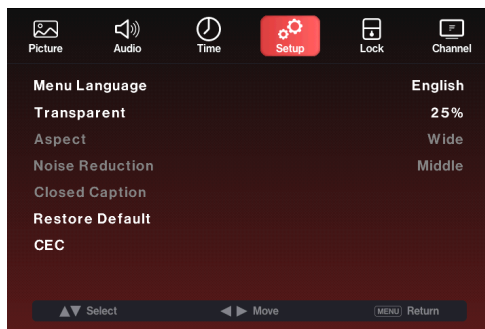

Setup Menu

Menu Language	Select the menu language	Press ◀ or ▶ to select English, Français or Español .
Transparent	Control the transparency level of the menu	Press ◀ or ▶ to select 0%/25%/50%/75%/100% .
Aspect	Set the aspect ratio of an image	Press ◀ or ▶ to select Wide, Normal, Zoom, Cinema or Point-to-Point .
Noise Reduction	Set the desired noise reduction option for the image	Press ◀ or ▶ to select Middle, High, Off or Low .
Closed Caption	Set the closed caption functions	CC Mode Press ◀ or ▶ to select CC On, CC Off or CC On Mute .
		Analog CC Press ◀ or ▶ to select CC1, CC2, CC3, CC4, Text 1, Text 2, Text 3 or Text 4 .
		Digital CC Press ◀ or ▶ to select Off, Service1, Service 2, Service 3, Service 4, Service 5 or Service 6 .
		Mode Press ◀ or ▶ to select Default or Custom .
		Font Style Press ◀ or ▶ to select Default, Font 0, Font 1, Font 2, Font 3, Font 4, Font 5, Font 6 or Font 7 .
		Font Size Press ◀ or ▶ to select Default, Normal, Large or Small .
		Font Edge Style Press ◀ or ▶ to select Default, None, Raised, Depressed, Uniform, Left Shadow or Right Shadow .
		Font Edge Color Press ◀ or ▶ to select Default, Black, White, Red, Green, Blue, Yellow, Magenta or Cyan .
		FG Color Press ◀ or ▶ to select Default, White, Red, Green, Blue, Yellow, Magenta or Cyan .
		BG Color Press ◀ or ▶ to select Default, Black, Red, Green, Blue, Yellow, Magenta or Cyan .
	Option * Press OK or ▶ to enter the sub menu.	FG Opacity Press ◀ or ▶ to select Default, Solid, Flashing, Translucent or Transparent .
		BG Opacity Press ◀ or ▶ to select Default, Solid, Flashing, Translucent or Transparent .

TV Settings

Setup Menu


Restore Default	Reset the unit to factory defaults	Press ◀ or ▶ to select Yes or No .	
CEC	Set CEC functions	CEC Control	Press ◀ or ▶ to select Off or On .
		Device Auto Power Off	Press ◀ or ▶ to select Off or On . * If On, when the TV is turned off, all HDMI CEC connected devices will enter standby mode.
		TV Auto Power On	Press ◀ or ▶ to select Off or On . * If On, when a HDMI CEC connected device is enabled, the TV will turn on and switch to the source connected with the CEC device.
		Audio Receiver	Press ◀ or ▶ to select Off or On . * If On, the TV will output audio to an ARC compatible connected device. Note: The volume output of ARC is fixed. Please use the external connected device to adjust the volume if you need.
		Device Lists	List all connected CEC devices.
		Connect	Connect to a device from the CEC devices.
		Root Menu	Show the root menu of connected devices.

TV Settings

English

Picture Settings

- 1. Press **MENU** button on the remote control to display the main menu.
- 2. Use ◀ or ▶ to highlight **Picture** mode.
- 3. Use ▲ or ▼ to highlight the item you would like to reset, then press ◀ or ▶ to select the settings.
- 4. Press **MENU** to return to the previous menu or press **EXIT** at any time to exit the setting.

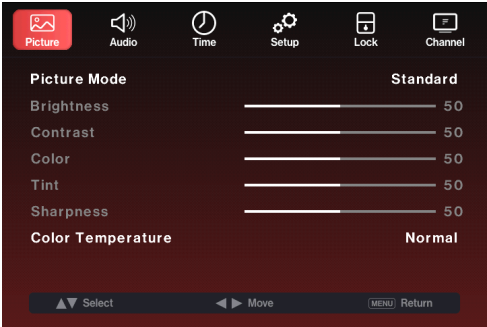


Picture Menu		
Picture Mode	Select the display mode	Press ◀ or ▶ to select the display mode from Standard / Dynamic / Soft / User .
Brightness	Control the picture brightness	Press ◀ or ▶ to adjust the brightness. * Only adjustable when Picture Mode is User .
Contrast	Control the picture contrast	Press ◀ or ▶ to adjust the contrast. * Only adjustable when Picture Mode is User .
Color	Control the color level of the picture	Press ◀ or ▶ to adjust the color. * Only adjustable when Picture Mode is User .
Tint	Control the picture tint	Press ◀ or ▶ to adjust the tint. * Only available under NTSC mode.
Sharpness	Control the sharpness of the picture	Press ◀ or ▶ to change the sharpness to desired level. * Only adjustable when Picture Mode is User .
Color Temperature	Select the color mode	Press ◀ or ▶ to select Normal, Warm or Cool .

TV Settings

Audio Settings

1. Press **MENU** button on the remote control to display the main menu.
2. Use ◀ or ▶ to highlight **Audio** mode.
3. Use ▲ or ▼ to highlight the item you would like to reset, then press ◀ or ▶ to select the settings.
4. Press **MENU** to return to the previous menu or press **EXIT** at any time to exit the setting.

NOTE: The display menu may vary while different input source was selected.

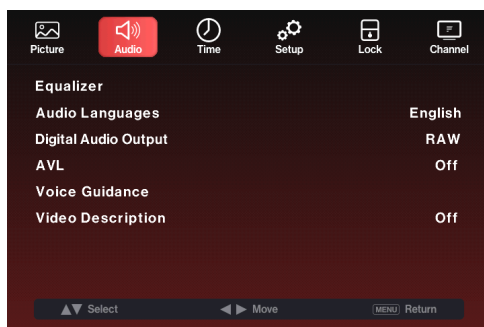

Audio Menu


Equalizer	Select the EQ mode	Press ◀ or ▶ to select Standard, Music, Movie, Sports or User mode.	
		User	Press ▲ or ▼ to select 200 Hz, 500 Hz, 1.5K Hz, 5K Hz, 10K Hz or Balance .
Audio Language	Select the audio language	Press ◀ or ▶ to select English, French or Spanish .	
Digital Audio Output	Select the Digital Audio Output mode	Press ◀ or ▶ to select RAW, PCM or Off .	
AVL	Automatic Volume Level : adjust the TV volume to a fixed level	Press ◀ or ▶ to select On or Off .	
Voice Guidance	Control the Voice Guide functions	Voice Guidance	Press ◀ or ▶ to select On or Off .
		Volume	Press ◀ or ▶ to select Low, Middle or High . * Only available after Voice Guidance was set as On mode.
		Speed	Press ◀ or ▶ to select Slow, Normal or Fast . * Only available after Voice Guidance was set as On mode.
		Pitch	Press ◀ or ▶ to select Low, Middle or High . * Only available after Voice Guidance was set as On mode.
Video Description	Control the video description function	Press ◀ or ▶ to select On or Off .	

TV Settings

English

Time Settings

- 1. Press **MENU** button on the remote control to display the main menu.
- 2. Use ◀ or ▶ to highlight **Time** mode.
- 3. Use ▲ or ▼ to highlight the item you would like to reset, then press ◀ or ▶ to select the settings.
- 4. Press **MENU** to return to the previous menu or press **EXIT** at any time to exit the setting.

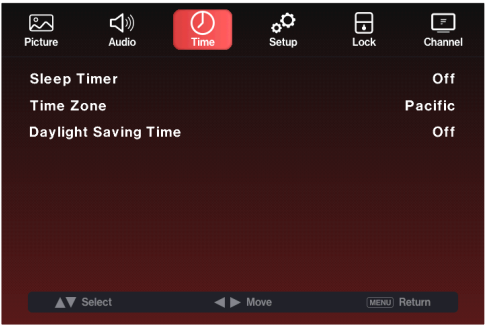



Time Menu

Sleep Timer	Set the time to automatically switch off the TV	Press ◀ or ▶ to select Off, 5min, 10min, 15min, 30min, 60min, 90min, 120min, 180min or 240min.
Time Zone	Set the time zone	Press ◀ or ▶ to select Pacific, Alaska, Hawaii, Samoa, Newfoundland, Atlantic, Eastern, Central or Mountain.
Daylight Saving Time	Switch to daylight saving	Press ◀ or ▶ to set as On or Off. * Only available under TV channel

TV Settings

Lock Settings

1. Press **MENU** button on the remote control to display the main menu.
2. Use ◀ or ▶ to highlight **Lock** mode.
3. Use ▲ or ▼ to highlight "**Enter Password**" and input "**0000**" to enter the setup window.
4. Use ▲ or ▼ to highlight the item you would like to reset, then press ◀ or ▶ to select the settings.
5. Press **MENU** to return to the previous menu or press **EXIT** at any time to exit the setting.

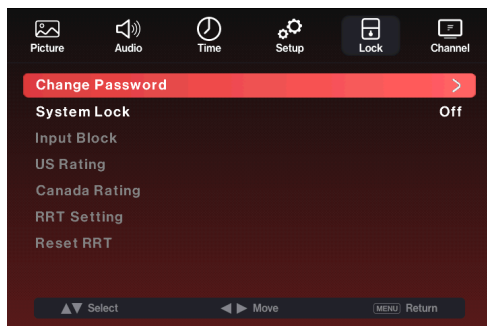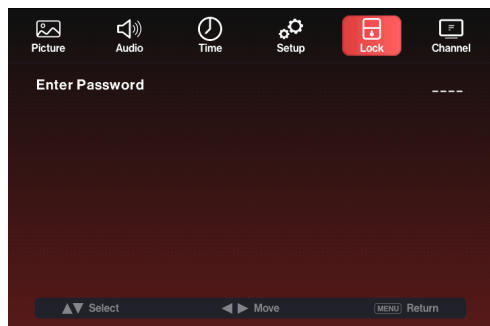


TV Settings

Lock Menu

Enter Password	Input the password to access the Lock menu	Use the Number Buttons (0-9) to enter the password, then the Lock menu will appear. * Default password is 0000. * If you forgot the password, use 8888 to enter any locked menu.	
Change Password	Change the user password	Enter New Password	Use Number buttons (0-9) to enter a new password.
		Confirm Password	Repeat the password to confirm.
System Lock	Set the parental controls status	Press ◀ or ▶ to set as On or Off .	
Input Block	Use the password to lock inputs	TV	Press ◀ or ▶ to set as Block or Unblock .
		AV	
		Component	
		HDMI 1	
		HDMI 2	
		Front-HDMI	
US Rating	Set up parental locks based on US rating system * Only available when System Lock is set as On mode	TV	Press ▶ to enter the TV Ratings menu and use ▲ / ▼ / ◀ / ▶ to select your TV rating preference.(Refer to the following tables of Age and Genre .)
		MPAA	Press ◀ / ▶ buttons to select your movie rating preference based on US Rating System .
Canada Rating	Set up parental locks based on Canadian rating system * Only available when System Lock is set as On mode	Canada English	Use ◀ / ▶ buttons to select your ratings preference based on Canadian Rating System (English) .
		Canada French	Use ◀ / ▶ buttons to select your ratings preference based on Canadian Rating System(French) .
RRT Setting	Set parental lock based on Canadian rating system * Only available when the DTV code RRT traffic detected by the system	Humor Level	See Canadian Rating System table.
		Intelligence level	See Canadian Rating System table.
		Erotic level 20CHARS	See Canadian Rating System table.
Reset RRT	Restore to default RRT settings	Press OK or ▶ to enter the sub menu, then press ◀ or ▶ to select Yes or No .	

TV Settings

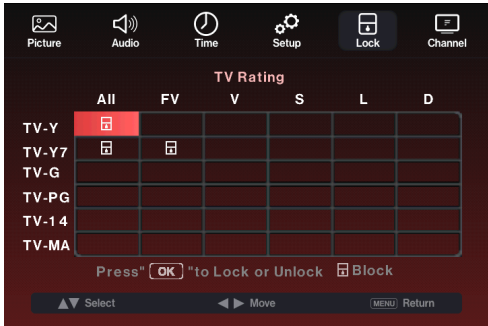

Age	
TV-Y	All Children
TV-Y7	Suitable for 7 years old or above
TV-G	General Audience
TV-PG	Parental Guidance
TV-14	Suitable for 14 years old or above
TV-MA	Suitable for 17 years old or above

US Rating System	
N/A	All Ages
G	General Audience
PG	Parental Guidance
PG-13	Parental Guidance below 13 years
R	Parental Guidance below 17 years
NC-17	Suitable for 17 years old or above
X	Adults Only

Genre	
ALL	All
FV	Fantasy Violence
V	Violence
S	Sex
L	Language
D	Dialogue

Canadian Rating System (English)	
E	Exempt from the ratings (All ages)
C	Suitable for children age of 0–7 years
C8+	Suitable for children age over 8 years
G	General Audience
PG	Parental Guidance
14+	Suitable for viewers age over 14 years
18+	Suitable for adults over 18 years


Canadian Rating System (French)	
E	Exempt from the ratings (All ages)
G	General Audience
8 ans+	Suitable for children ages over 8 years
13 ans+	Suitable for children ages over 13 years
16 ans+	Suitable for viewers ages over 16 years
18 ans+	Suitable for adults over 18 years

TV Settings

English

Channel Settings

1. Press **MENU** button on the remote control to display the main menu.
2. Use ◀ or ▶ to highlight **Channel** mode.
3. Use ▲ or ▼ to highlight the item you would like to reset, then press ◀ or ▶ to select the settings.
4. Press **OK** to confirm your selections or settings and enter the sub menus.
5. Press **MENU** to return to the previous menu or press **EXIT** at any time to exit the setting.



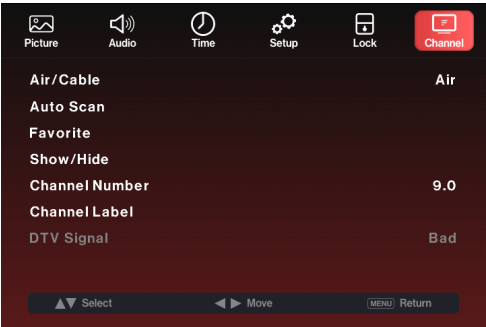


Channel Menu		
Air/Cable	Set the reception type	Press ◀ or ▶ to select Air or Cable .
Auto Scan	Automatically scan for available channels	Press ▶ or OK to select Cable System or Start to Scan .
Favorite	Add the channel to the favorite list	Press ▲ or ▼ to select a channel, then press OK to add or delete in the favorite list.
Show/Hide	Select the channel number to show or hide	Press ▲ or ▼ to select a channel, then press OK to show or hide the channel.
Channel Number	Select the channel number for labeling	Press ◀ or ▶ to select a channel.
Channel Label	Label the selected channels	Press ▲ or ▼ to select a character, press ◀ or ▶ to navigate the characters (Maximum of 7 characters).
DTV signal	Display the current DTV signal status	


TV Settings

USB Mode

1. After connecting a USB storage device to front USB port, press  button on the remote control and select **USB** as the input source. Press **OK** or **▶** to enter.
2. Use **◀** or **▶** to select **Photo** or **Music**. Press **OK** or **▶** to confirm the selection.
3. Use **▲** or **▼** to navigate the files or folders stored on a USB device.
4. Press **MENU** to return to the previous menu or press **EXIT** at any time to exit the setting.

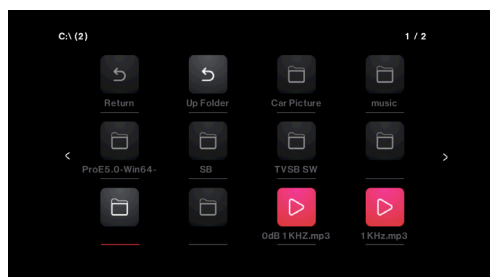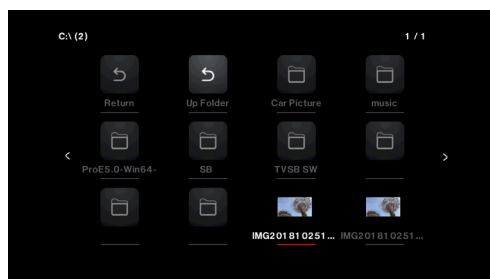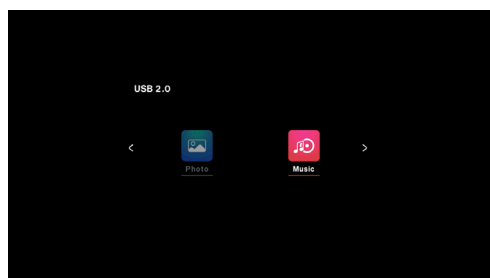


For photos, you can use the tools on the photo viewer to control slide show, view photos and show file information.

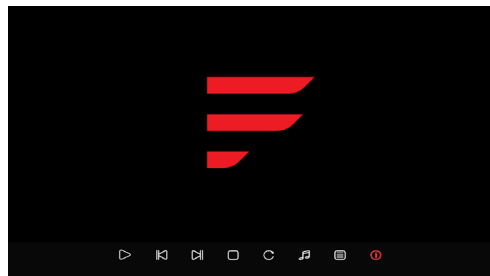

* The photo viewer supports the JPG format files.

For music, you can use the tools of the music player to control playback and display file information.

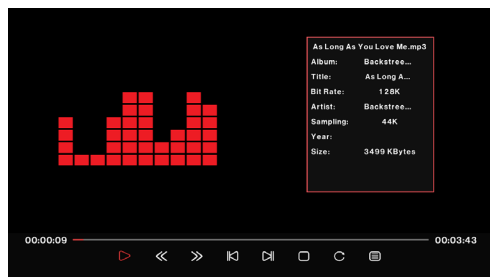

* The music player supports the MP3 audio format files.

Soundbar Operation

* The built-in Soundbar could be operated separately even when the TV is turned off.

General Operation	
Power On/ Off	Press POWER button at the bottom of the TV front panel or  button on the remote control to turn on/off the whole unit. When the whole unit is powered on, ZONE 1 is on while ZONE 2 is off by default.
MUTE	Press briefly to mute or unmute the current zone. Press and hold it to mute or unmute both zones.
Select a Source	Press the button AM/FM , AUX , BT or TV at the bottom of front panel to select Radio, AUX, BT or TV source.
Adjust Volume	Rotate Volume Knob on the front panel to adjust volume.
Select Audio Feature	Press SEL on the remote control to select VOL, BAS (without EQ preset), TRE (without EQ preset) or BAL. Rotate Volume Knob on the front panel to adjust audio feature.
Preset EQ	Press EQ button on the remote control to select the sound mode MUSIC or MOVIE.
Select Speakers	ZONE 1 represents built-in speakers of the TV, which will be activated by default when the TV is turned on. Press ZONE 2 on the remote control or the front panel to select or turn on/off ZONE 1/ZONE 2. The corresponding zone number will appear on the front panel LCD once it is selected.
Reset	Enter TV main menu " Setup " in TV mode. Select " Restore Default " to reset both the TV and Soundbar to factory defaults. Then TV and Soundbar enter standby mode.
IR-EXT	Press IR-EXT on the remote control, then you can use the remote control to control another TV connected through an IR-EXT cable. The IR-EXT icon will flash on the front panel LCD.

Radio Operation	
Select Radio Region	Press and hold AM/FM to select the radio region USA1, USA2, EUROPE or AUSTRALIA.
Manual Tuning	Press ◀ or ▶ button on the front panel to move radio frequency down or up one step at a time.
Automatic Tuning	Press and hold ◀ or ▶ button to search for the next strongest station automatically.
Select Band	Press AM/FM button on the front panel to move radio frequency down or up one step at a time.
Store and Recall Preset Station	Press and hold any one of the six preset buttons (1-6) on the front panel to store the current frequency. Press the corresponding preset button again to recall the frequency stored.
Store Stations Automatically	Press and hold APS button on the remote control to automatically store the six strongest stations in the current band. (Up to 18 FM stations and 12 AM stations can be stored.)
Scan Tuning	Press APS button on the remote control to scan preset station 1-6 in the current band.
LOC	Press LOC on the remote control repeatedly to set the LOC ON or LOC OFF.
Stereo/Mono	In FM mode, press ST button on the remote control to select ST ON or ST OFF.

Soundbar Operation

USB Operation


Backward and Fast Forward	Press « or » button on the remote control to fast forward or backwards.
Pause Playback	Press  on the front panel to temporarily stop playback. Press  again to resume playback.
Stop Playback	Press  on the front panel or  on the remote control to stop playback, then press OK on the remote control to start playback from the beginning of the first chapter/track.
Repeat	During playback, select the repeat icon from the player tools on screen bottom and set Repeat 1, Repeat ALL or Repeat NONE.

Bluetooth Operation

Connect or Disconnect BT	Press the button BT on the bottom of front panel to automatically connect with the last paired device. (BT name: Furrion Sense 32" TV) Press and hold the button BT on the bottom of front panel for 6 seconds to disconnect bluetooth and clear the pairing information.
Dial or accept call	Press the button  on the front panel to accept an incoming call or dial out the last called number directly.
Reject or End call	Press the button  on the front panel to reject or end a call. Press  to reject or end a call.

Specification

English

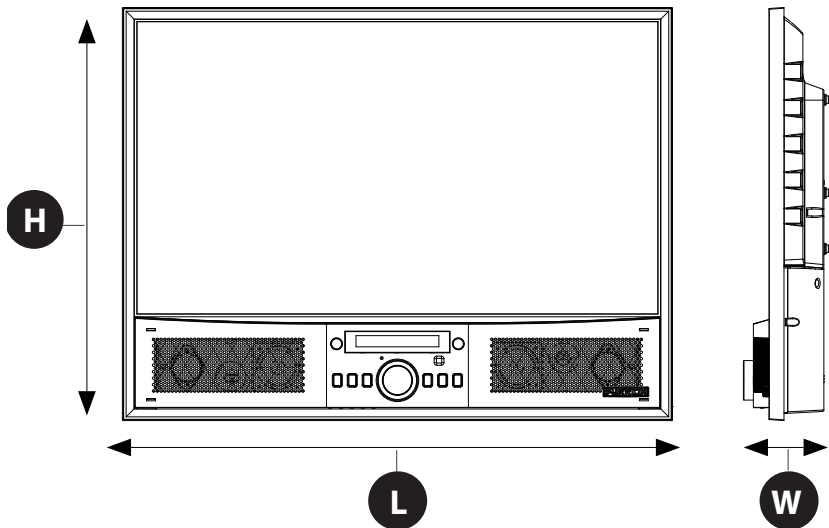


MODEL, DIMENSION & RESOLUTION

TV Model	Dimension without Stand (L*H*W)	Max Resolution
FDHK32V1A	29" x 21 ¹³ / ₁₆ " x 4 ⁵ / ₁₆ " (736.7 x 554.2 x 109.4 mm)	1280 x 720 @ 60Hz HD

INPUT & OUTPUT CONNECTIONS

TV Model	HDMI In	AM/FM ANTENNA	Audio In	Optical Out	USB	Audio Out	Zone 2 Out	IR EXT	Component YPbPr In	Aux In	RF In
FDHK32V1A	3	1	1 x Right (Red) 1 x Left (White)	1	2	1 x Right (Red) 1 x Left (White)	1	1	1 x Yellow/ Green 1 x Blue 1 x Red	1	1

Specification

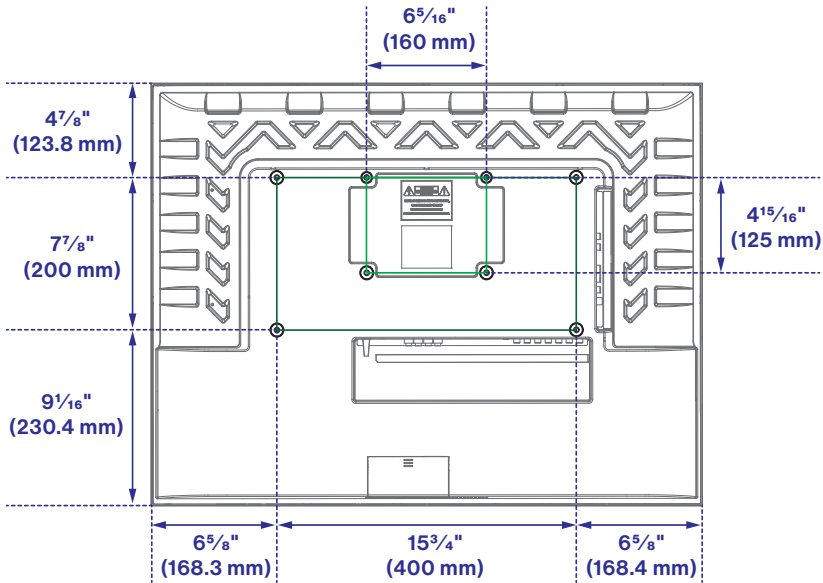

VESA MOUNTING PATTERN

Model	Width (mm)	Height (mm)	Screw Size	Screw Quantity
FDHK32V1A	400	200	M 6 * 12mm	4

FURRION MOUNTING PATTERN

Model	Width (mm)	Height (mm)	Screw Size	Screw Quantity
FDHK32V1A	160	125	M 6 * 12mm	4

Specification

Category	Item	General Specification
PANEL DISPLAY	Panel Size	32"
	Resolution / Display Type	1366 × 768 / FWXGA / D-LED
	Refresh Rate	60Hz
	Contrast Ratio (CR ≥ 10)	3000 (min.: 2100) : 1
	View Angle	H:178°, V:178°
	Aspect Ratio	16 : 9
	Brightness	≥ 180cd/m2 (Typ. 200cd/m2)
AUDIO OUTPUT	L / R output (CVBS)	1VRMS (with 1kHz 0dB input); SNR: ≥ 80dB
VIDEO INPUT	TV (via RF-input)	ATV(NTSC) / DTV(ATSC)
	CVBS (video)	Video System NTSC Video level 1.0V _{pp} ±10%
	Component YPbPr (video)	480i, 480p, 720p, 1080i, 1080p
	HDMI	480i, 480p, 720p, 1080i, 1080p CEC (including remote control pass-through) HDCP Version 1.4b
	CVBS (audio)	L/R RCA input 0.2 – 2.0VRMS
	Component YPbPr (audio)	
USB Playback	Output voltage / current	5V, 500 mA
	USB standard / Class	USB V2.0 / Mass storage Class 0
	File system format	FAT, FAT32; single partition
	Media playback	MP3, WMA
	Photo display / playback	JPEG
USB Port	USB (for Google dongle)	5V/1000mA
Power supply requirement		DC 12V
Current Consumption		12A
Total Speaker Out Power		4 X20W RMS
Number of channels		Independent 2 Channels STEREO
Radio	FM Frequency range	87.5 - 107.9 MHz (USA) 87.5 - 108.0 MHz (Europe) 87.5 - 108.0 MHz (Australia)

Troubleshooting

Problem	Solution/Issue
TV does not operate	• Make sure the power cord is plugged in. • Try another DC outlet. • Power is off, check fuse or circuit breaker. • Unplug unit for an hour, then plug it back in. • Make sure the whole unit source is selected as "TV" mode.
Normal picture, but no sound	• Check the volume settings. • Sound muted? Press MUTE button. • Try another channel. • Check audio cable connections.
The remote control does not work	• Make sure the remote control is in range with no obstructions. • Check the batteries. • Correct operating mode set: TV, VCR etc.
Poor sound or no sound	• Station or Cable TV experiencing problems, tune to another station. • Check sound adjustments (Volume or Mute). • Check for sources of possible interference.
Poor picture or no picture	• Station or Cable TV experiencing problems, tune to another station. • Make sure channels are set into memory. • Check antenna or Cable TV connections, adjust antenna. • Check for sources of possible interference. • Check picture control adjustments.
Poor TV reception	• Ensure the antenna amplifier is turned on for Antenna TV. • Adjust the antenna position to a stronger signal receiving angle. • Check if the Antenna connection is tight to the TV. • Check if there is power supplied to the Antenna distribution box. • Ensure your incoming cable is connected to the correct cable / antenna wall connection inside the RV. • Ensure the internal RV coax jump cable is connected to the correct port.
Poor Cable / Satellite TV Reception	• Ensure antenna amp is turned off for cable signal. • Check if incoming Cable is connected correctly to RV. • Ensure cable splitter box has power. • Ensure the incoming cable is connected to the correct cable / Satellite wall connection inside your RV. • Ensure the internal RV coax jump cable is connected to the correct port. • Check if Dish has no obstruction.
TV shuts off	• Sleep Timer is set. • Power interrupted.
Black and white image from the connected AV device	• Check video connections on both the TV and connected AV device. Ensure the colors match between the connectors and sockets: green (Y), blue (Pb/Cb) and red (Pr/Cr) for component connection, and yellow (VIDEO) for composite connection. • Ensure all video cables are connected firmly.



The contents of this manual are proprietary and copyright protected by Lippert. Lippert prohibits the copying or dissemination of portions of this manual unless prior written consent from an authorized Lippert representative has been provided. Any unauthorized use shall void any applicable warranty. The information contained in this manual is subject to change without notice and at the sole discretion of Lippert. Revised editions are available for free download from lippert.com.

Please recycle all obsolete materials.

For all concerns or questions, please contact Lippert

Ph: 432-LIPPert (432-547-7378) | Web: lippert.com | Email: customerservice@lci1.com



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.