



CONNECT POWER

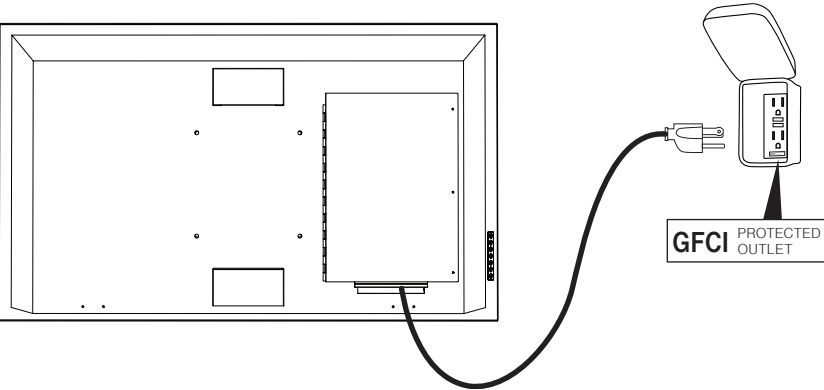


INSTALL REMOTE CONTROL BATTERY

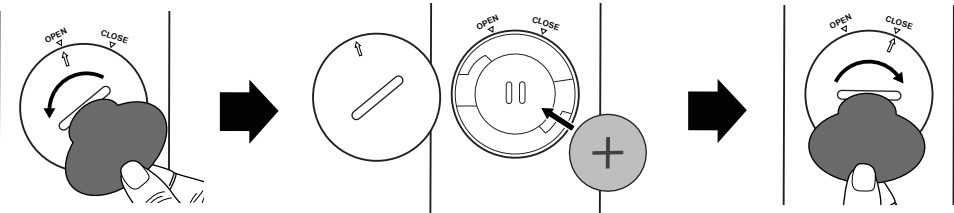

INITIAL SETUP

Press **POWER** to power on and follow the on-screen instructions to finish initial setup.

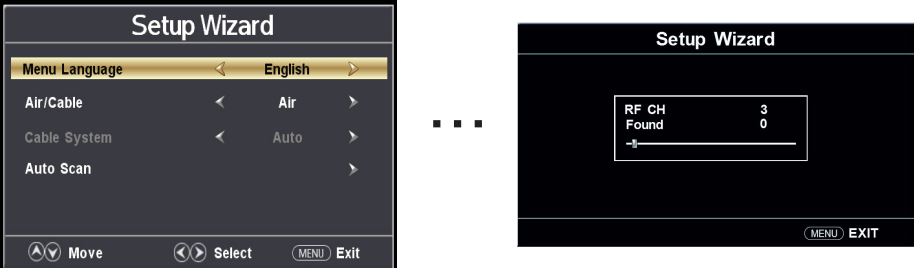


BASIC OPERATION

Button	Function
POWER	Power on/off.
VOL +/-	Adjust volume.
MUTE	Mute or un-mute the audio output.
MENU	Enter the main menu or return to the previous menu.
NAVIGATION	Navigate each menu.
OK	Confirm your selection.

1. Press **SOURCE** button to bring up the input source selection screen.
2. Choose the appropriate input source.
 - If the selected source is TV, press **CH** **UP** / **DOWN** to choose your desired channel.
 - For other AV connections, use the remote control of the connected AV device to operate.

Tip:
See the complete user manual online for detailed functional explanation.

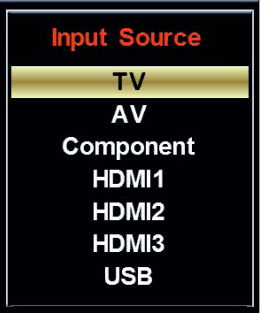

Programming Other Manufacturers' Universal Remote Control Devices

When programming a local cable universal remote control or control system, you may find that Furrion may not be on the list of TV manufacturers. If that is the case, your Furrion Aurora Outdoor TV supports LG's universal remote code. Commonly used cable provider remote codes are:

- Dish Network- 545
- DirectTV- 12731
- Xfinity- 10178 / 11265 / 12731
- Frontier- 210



The contents of this manual are proprietary and copyright protected by Lippert. Lippert prohibits the copying or dissemination of portions of this manual unless prior written consent from an authorized Lippert representative has been provided. Any unauthorized use shall void any applicable warranty. The information contained in this manual is subject to change without notice and at the sole discretion of Lippert.

Revised editions are available for free download from lippert.com.

Please recycle all obsolete materials.

For all concerns or questions, please contact Lippert
Ph: 432-LIPPERT (432-547-7378) | Web: lippert.com | Email: customerservice@lci1.com

FURRION

Furrion Aurora™ TV Series



Model: FDUF43CBR / FDUF49CBR / FDUF55CBR / FDUF65CBR
FDUP43CBR / FDUP49CBR / FDUP55CBR / FDUP65CBR

Quick Start Guide


<https://furrion.com/pages/downloads-audio-visual>



* To view the multi-language user manual, please access the link or scan the QR code.
* Pour obtenir le manuel d'utilisateur multilingue, accédez au lien ou scannez le QR code.
* Para ver el manual de usuario en otros idiomas, acceda al siguiente enlace o escanee el código QR.

This quick start guide will help you install and use the device properly. For further support and to download the complete user manual please visit www.furrion.com/support.


WHAT'S IN THE BOX

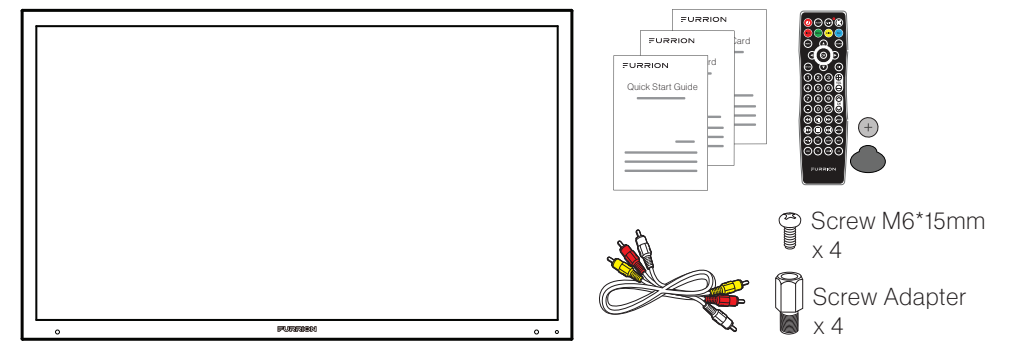

CONNECT


WARNING: Do not connect the power source before making connections.

Open the cable access door to connect the cables.

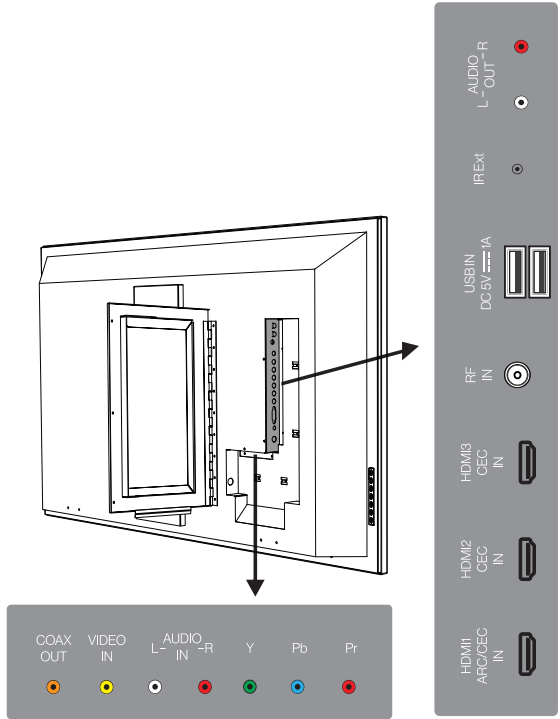


Note: All external devices and cables shown in the diagram are for reference only and not included in the package.


1. Choose one or more of the TV signal/AV connections

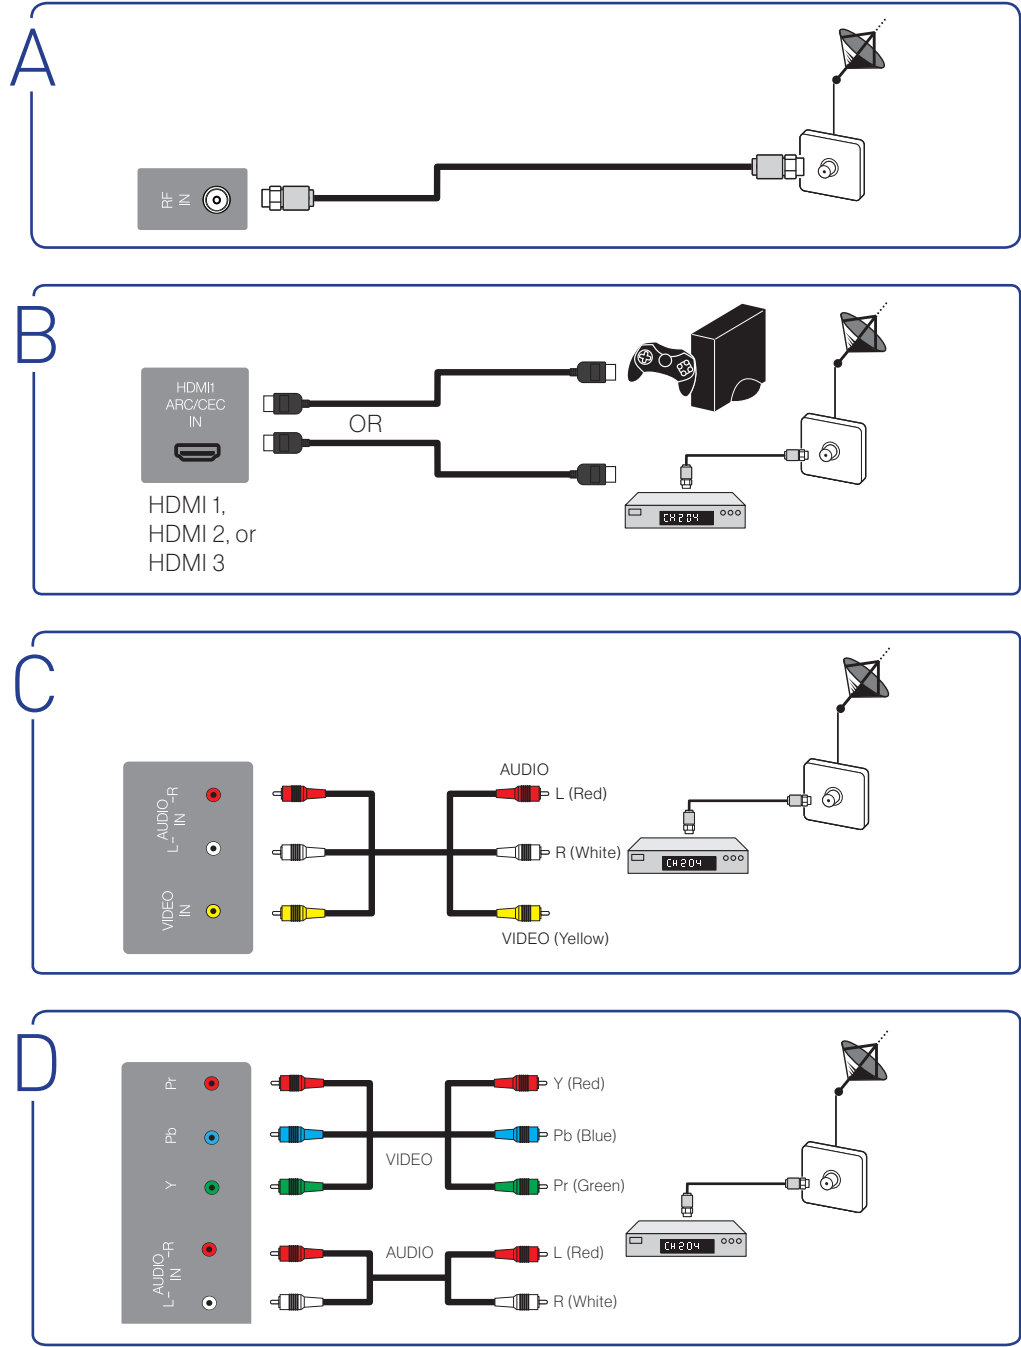

2. Connect for more features

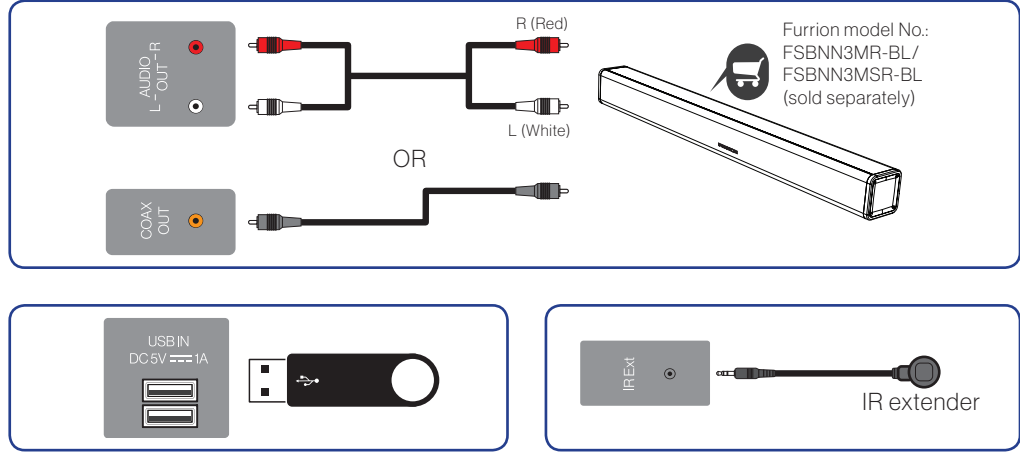


3. Cable management

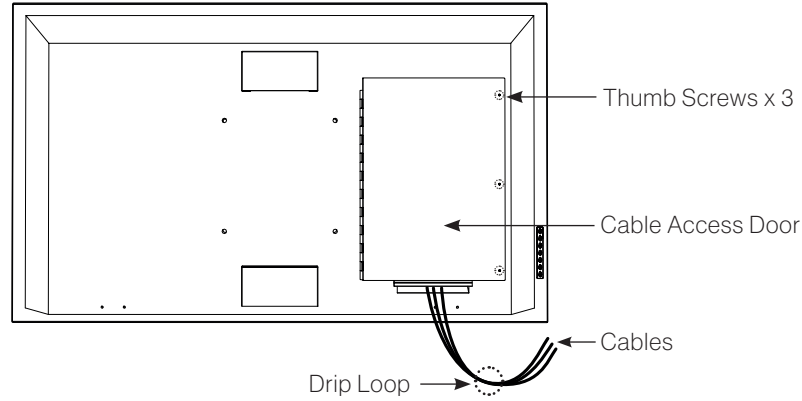

- After all connections are completed, lead all connecting cables downwards through the duct at the bottom of the cable access door.
- Leave a drip loop when cables enter the compartment. This will prevent water from dripping down the cord and possibly entering the door area.
- Close the door and tighten the thumb screws for the best weatherproof effect.

INSTALL


You are recommended to install the TV in an area shaded by trees, landscape and/or structures, or under a patio cover or gazebo.

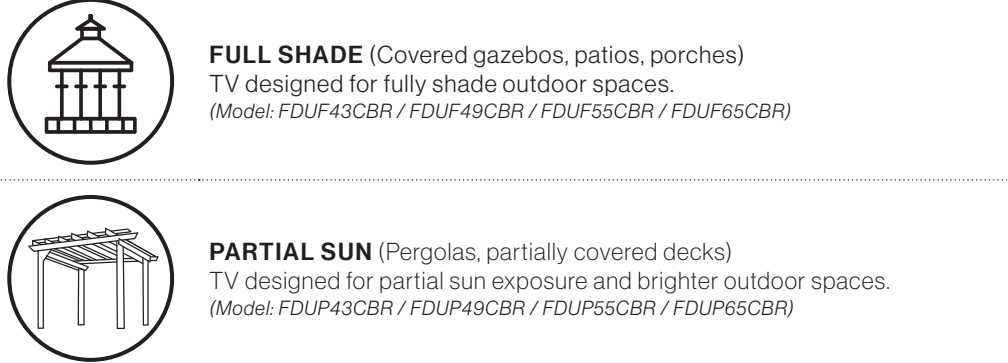

Note: Connect all cables prior to mounting TV on wall. The cable access door in the rear panel will be obstructed once the TV is mounted.

- Follow the installation guide supplied with the Wall-Mount Bracket when installing the TV.
- Choose an appropriate location and refer to the VESA pattern for mounting.
- Recommend you to contact a professional for installation and use at least two people to move or install the TV.

VESA MOUNTING PATTERN				
Model	Width (mm)	Height (mm)	Screw size	Screw Quantity
FDUP43CBR FDUF43CBR	200	200	M6 * 15mm	4
FDUP49CBR FDUF49CBR	200	400		
FDUP55CBR FDUF55CBR FDUP65CBR FDUF65CBR	400	400		

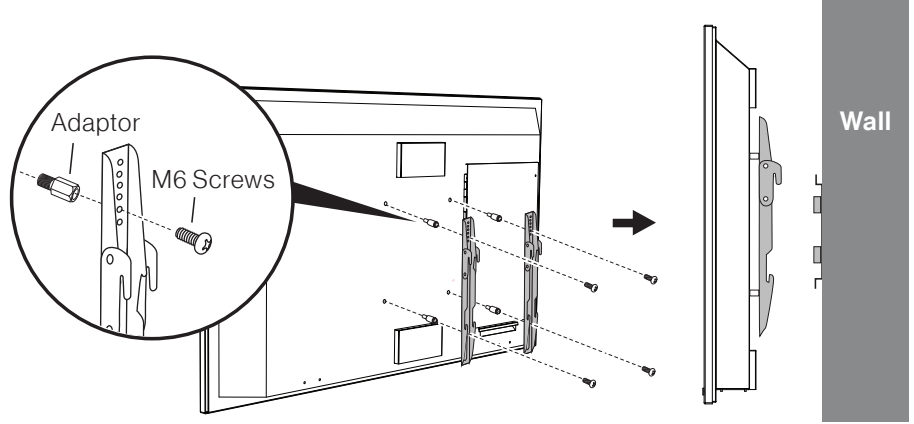



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.