



CONNECT POWER

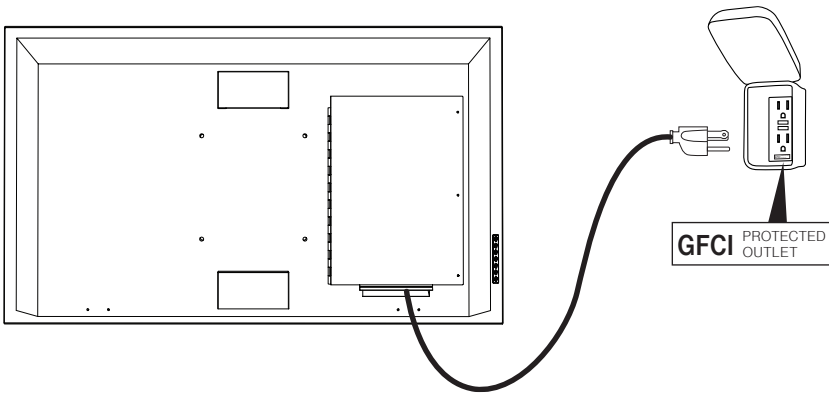


INSTALL REMOTE CONTROL BATTERY

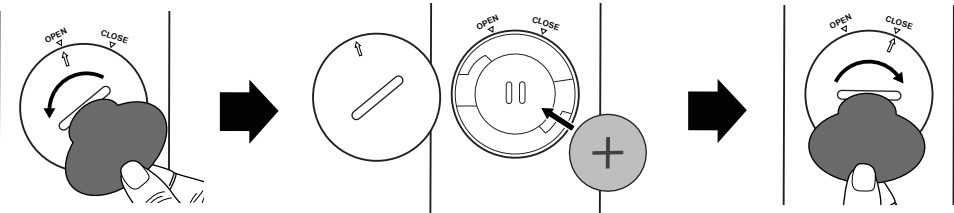

INITIAL SETUP

Press **POWER** to power on and follow the on-screen instructions to finish initial setup.

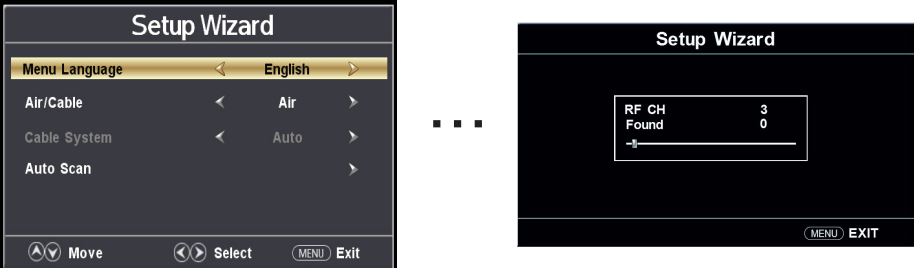

BASIC OPERATION


Button	Function
POWER	Power on/off.
VOL +/-	Adjust volume.
MUTE	Mute or un-mute the audio output.
MENU	Enter the main menu or return to the previous menu.
NAVIGATION	Navigate each menu.
OK	Confirm your selection.

1. Press **SOURCE** button to bring up the input source selection screen.
2. Choose the appropriate input source.

- If the selected source is TV, press **CH** **UP** / **DOWN** to choose your desired channel.
- For other AV connections, use the remote control of the connected AV device to operate.

Tip:

See the complete user manual online for detailed functional explanation.

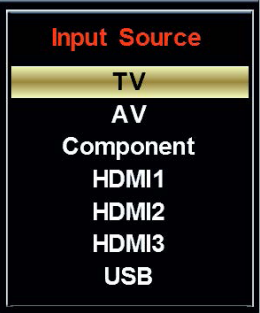

Programming Other Manufacturers' Universal Remote Control Devices

When programming a local cable universal remote control or control system, you may find that Furrion may not be on the list of TV manufacturers. If that is the case, your Furrion Aurora Outdoor TV supports LG's universal remote code. Commonly used cable provider remote codes are:

- Dish Network- 545
- DirectTV- 12731
- Xfinity- 10178 / 11265 / 12731
- Frontier- 210

FURRION

Furrion Ltd. (Furrion) is a wholly owned subsidiary of Lippert Components, Inc. (Lippert) Furrion Ltd.
Furrion Innovation Center & Institute of Technology

- 22244 Innovation Drive, Elkhart, IN 46514-5514, USA
- Toll free/Numéro gratuit/Línea telefónica gratuita:1-800-789-3341
- Email/Courriel/Correo electrónico: support@furrion.com

©2007-2023 Furrion Ltd. Furrion® and the Furrion logo are trademarks licensed for use by Furrion Ltd. and registered in the U.S. and other countries.

FURRION.COM
For Patent Info: www.Lippert.com/patents



The contents of this manual are proprietary and copyright protected by Lippert. Lippert prohibits the copying or dissemination of portions of this manual unless prior written consent from an authorized Lippert representative has been provided. Any unauthorized use shall void any applicable warranty. The information contained in this manual is subject to change without notice and at the sole discretion of Lippert. Revised editions are available for free download from lippert.com.

Please recycle all obsolete materials.

For all concerns or questions, please contact Lippert.

Ph: 432-LIPPERT (432-547-7378) | Web: lippert.com | Email: customerservice@lci1.com

FURRION

Furrion Aurora™ TV Series




Model: FDUP43CBS / FDUP49CBS / FDUP55CBS / FDUP65CBS
FDUF43CBS / FDUF49CBS / FDUF55CBS / FDUF65CBS

Quick Start Guide

This quick start guide will help you install and use the device properly. For further support and to download the complete user manual please visit www.furrion.com/support.


WHAT'S IN THE BOX

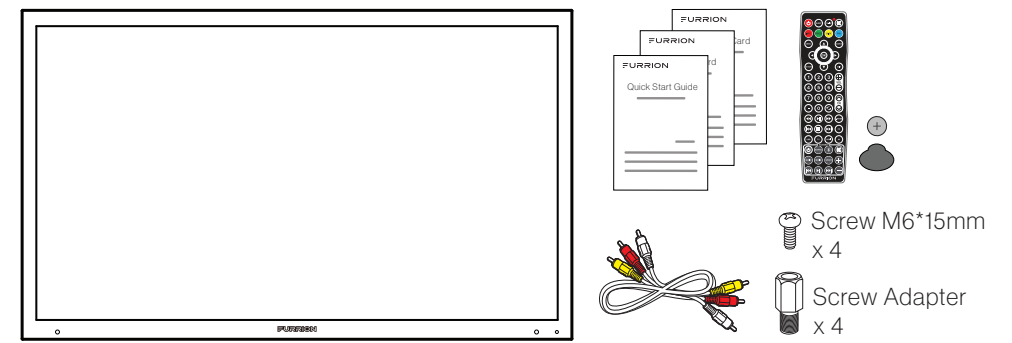

CONNECT





WARNING: Do not connect the power source before making connections.

Open the cable access door to connect the cables.

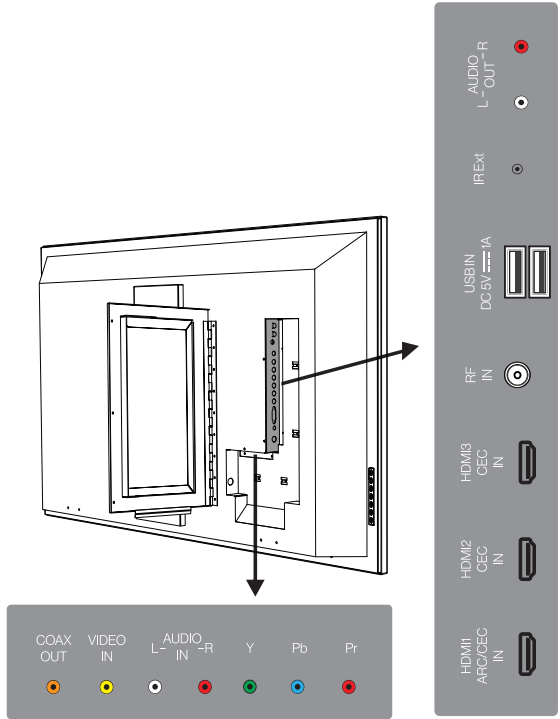


Note: All external devices and cables shown in the diagram are for reference only and not included in the package.


1. Choose one or more of the TV signal/AV connections

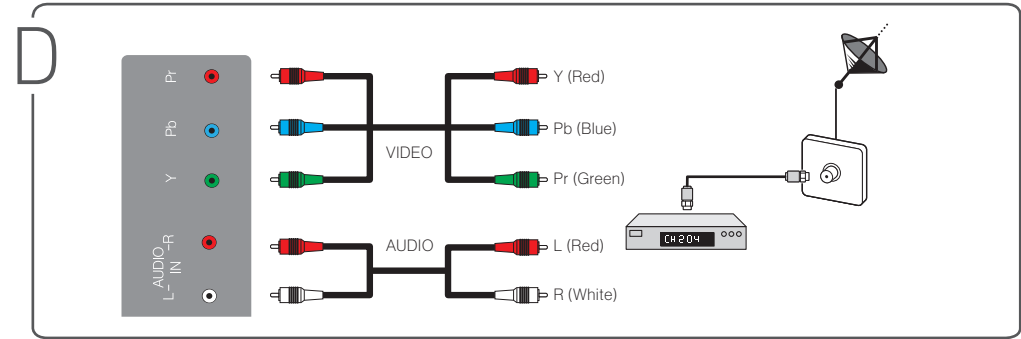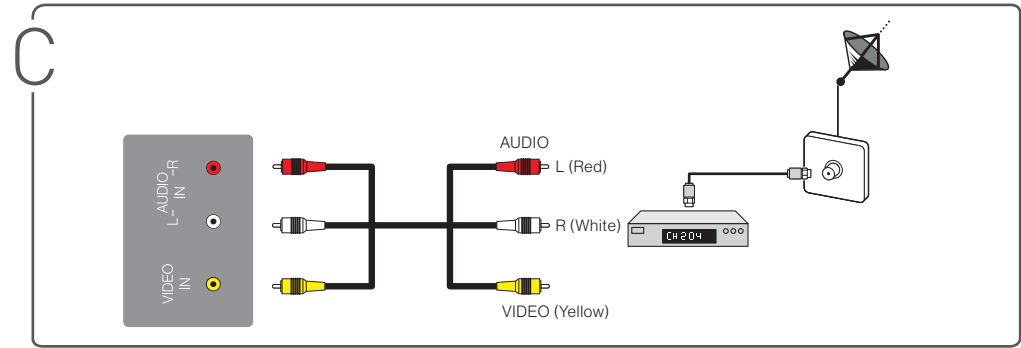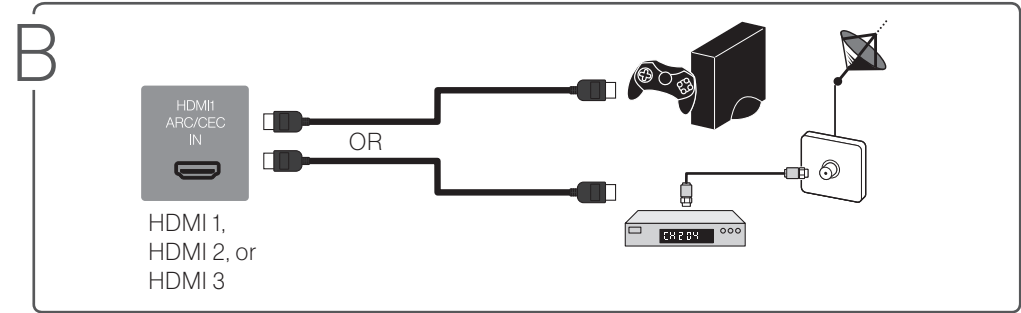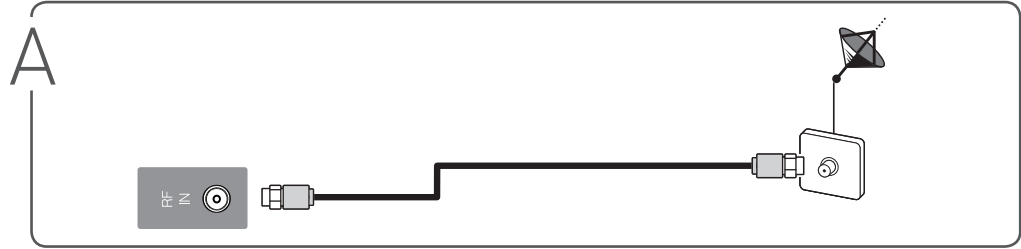

2. Connect for more features

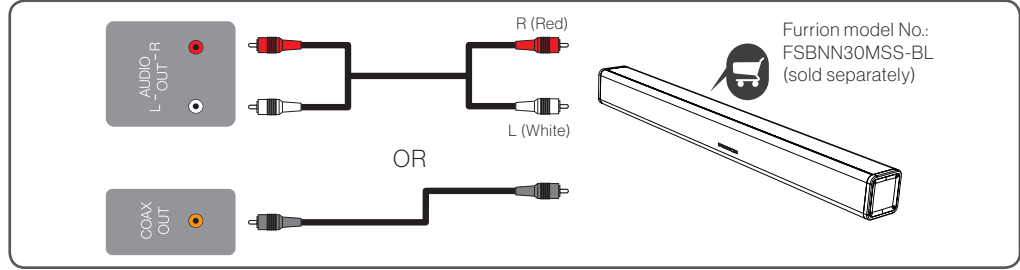

3. Cable management

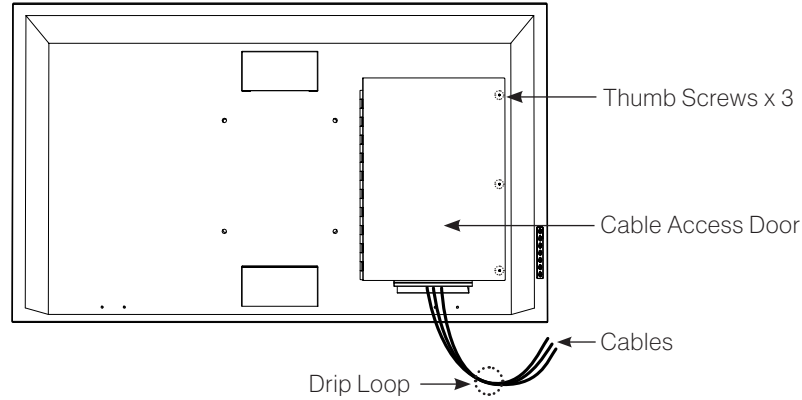


- After all connections are completed, lead all connecting cables downwards through the duct at the bottom of the cable access door.
- Leave a drip loop when cables enter the compartment. This will prevent water from dripping down the cord and possibly entering the door area.
- Close the door and tighten the thumb screws for the best weatherproof effect.

INSTALL

You are recommended to install the TV in an area shaded by trees, landscape and/or structures, or under a patio cover or gazebo.



FULL SHADE (Covered gazebos, patios, porches)
TV designed for fully shade outdoor spaces.
(Model: FDUF43CBS / FDUF49CBS / FDUF55CBS / FDUF65CBS)

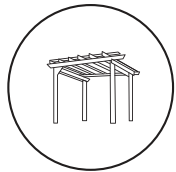


PARTIAL SUN (Pergolas, partially covered decks)
TV designed for partial sun exposure and brighter outdoor spaces.
(Model: FDUP43CBS / FDUP49CBS / FDUP55CBS / FDUP65CBS)

Note: Connect all cables prior to mounting TV on wall or TV mount. The cable access door in the rear panel will be obstructed once the TV is mounted.

- Follow the installation guide supplied with the Wall-Mount Bracket when installing the TV.
- Choose an appropriate location and refer to the VESA pattern for mounting.
- Recommend you to contact a professional for installation and use at least two people to move or install the TV.

VESA MOUNTING PATTERN				
Model	Width (mm)	Height (mm)	Screw size	Screw Quantity
FDUP43CBS FDUF43CBS	200	200	M6 * 15mm	4
FDUP49CBS FDUF49CBS	200	400		
FDUP55CBS FDUF55CBS FDUP65CBS FDUF65CBS	400	400		

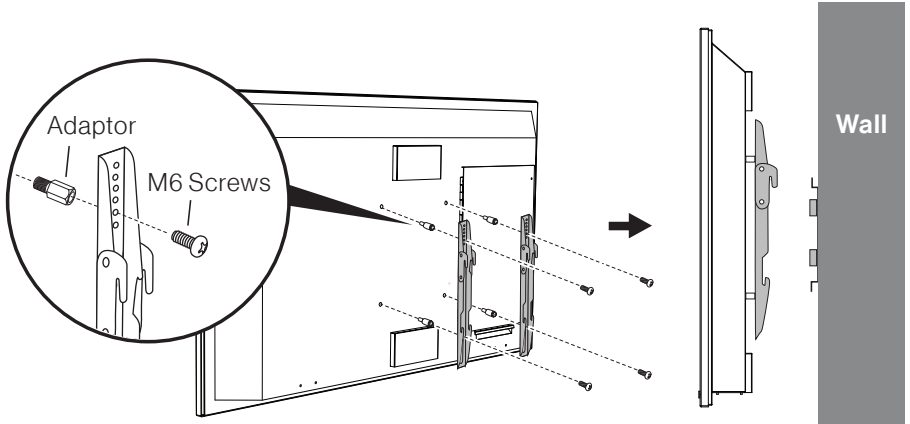



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.