

SET CLOCK

Press and hold **CLOCK** on the remote control to enter clock setup mode. Rotate the **VOLUME -/+** knob on the front panel to adjust the hour. Press the **VOLUME -/+** knob on the front panel to enter minute setting and rotate the **VOLUME -/+** knob to adjust the minute. The time on the clock is set automatically after a few seconds of inactivity.

TURN ON / OFF LOUDNESS EFFECT

Press and hold **LOUD** on the remote control to turn on or off the loudness sound effect.

SELECT SPEAKERS

Press **ZONE1** / **ZONE2** on the front panel to select speaker output. The corresponding zone number will be displayed on the LCD once selected.

RESET

Press **RESET** on the front panel with a pointed object to reset the unit to factory default settings.



The contents of this manual are proprietary and copyright protected by Lippert. Lippert prohibits the copying or dissemination of portions of this manual unless prior written consent for an authorized Lippert representation has been provided. Any unauthorized use shall void any applicable warranty. The information contained in this manual is subject to change without notice and at the sole discretion of Lippert. Revised editions are available for free download from lippert.com.

Please recycle all obsolete materials.

For all concerns or questions, please contact
Lippert

Ph: 432-LIPPERT (432-547-7378) | Web:
lippert.com | E-mail:
customerservice@lci1.com

FURRION

ENTERTAINMENT SYSTEM

MODEL: DV3100S

LIPPERT NO.: 2021123566

QUICK START GUIDE



* Product picture for reference only

This quick start guide will help you install and use the device properly.
For further support and to download the complete user manual please visit
www.furrion.com/support.

WHAT'S IN THE BOX


- DV3100S Unit
- Remote Control
- Wire Harness
- Hang Tag
- Quick Start Guide
- Warning Card
- Warranty Manual

NOTE: Product design and packaging may change without notice.


SETUP

STEP 1: CONNECT YOUR DEVICE

Please connect according to following diagram for proper functionality.

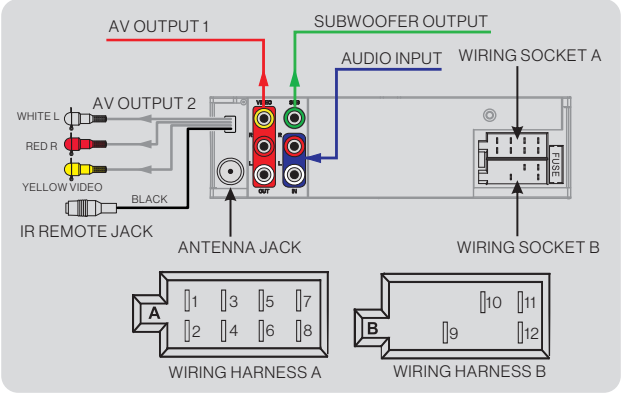


PIN NO.	COLOR	FUNCTION
1	Purple	Right (2) Speaker (+)
2	Purple/Black	Right (2) Speaker (-)
3	Gray	Right (1) Speaker (+)
4	Gray/Black	Right (1) Speaker (-)
5	White	Left (1) Speaker (+)
6	White/Black	Left (1) Speaker (-)
7	Green	Left (2) Speaker (+)
8	Green/Black	Left (2) Speaker (-)
9	Yellow	+12V DC Memory B+
10	Blue	Auto Antenna
11	Red	+12V DC Ignition Switch
12	Black	Power Ground (-12 DC)

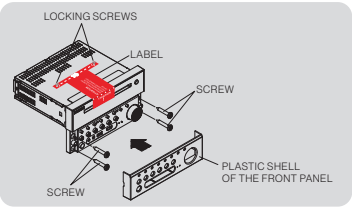

STEP 2: INSTALL YOUR DEVICE

IMPORTANT: Before final installation, check by powering the stereo on to make sure unit operates properly.

1. Unscrew the locking screws only by screw driver and remove the attention label.
2. Remove front panel.
3. Slide the device into a prepared opening and fix with 4 #8 pan head self-tapping screws.
4. Reattach the front panel and push slightly until it locks into place.

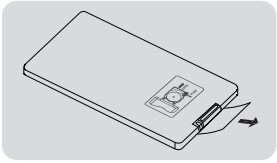

STEP 3: PREPARE THE REMOTE CONTROL

Before use, remove the insulating sheet from the remote control as indicated.

BASIC OPERATION

TURN ON/OFF OR SWITCH TO STANDBY MODE

Press  on the front panel to turn the unit on or enter standby mode.
Press and hold  to turn the unit off.

MUTE

Press **MUTE**  on the remote control to mute the sound. The icon  flashes on the display.
Press **MUTE**  again to resume.

SELECT A SOURCE

Press  repeatedly to select Tuner (AM/FM), Disc (with a disc loaded), USB (with a USB storage device connected), BT, AV IN, AUX or HDMI mode.

ADJUST VOLUME

Rotate the **VOLUME**  knob on the front panel to adjust the volume.

SELECT A FEATURE/SETTING

Press **SEL** on the remote control (or push the **VOLUME**  knob on the front) once or more to select VOL, BAS (without preset EQ), TRE (without preset EQ), BAL, EQ or BEEP (ON/ OFF). Then rotate the **VOLUME**  knob on the front panel to select a feature / setting.

SELECT A PRESET EQ

Press **EQ** on the remote control once or more directly (or push the **VOLUME**  knob on the front panel once or more to activate EQ mode and then rotate the **VOLUME**  knob) to select EQ, CINEMA, ROCK, CLASSIC, or FLAT. The sound effect will change accordingly.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.