

Furriion ePod™ Battery

Model: FBN12C33A1



* Picture shown for reference only

Quick Start Guide

GENERAL SAFETY INSTRUCTIONS

⚠ WARNING

Indicates a hazardous situation which, if not avoided, could result in death or serious injury.

⚠ WARNING

RISK OF FIRE, ELECTRIC SHOCK, OR PERSONAL INJURY.

- WARNING:** When using this product, basic precautions should always be followed, including the following:
- Read all instructions and safety precautions before using the product.
 - Keep out of reach of children. To reduce the risk of injury, close supervision is necessary when the product is used near children.
 - Failing to operate the battery or power station in accordance to this manual may damage internal components and will void the warranty.
 - Damage to internal components may result in electrical shock, chemical burn, outgassing, fire, or explosion causing personal injury or damage to other devices.
 - Do not allow internal battery materials to come in contact with skin or eyes. If exposed to internal battery materials seek medical attention immediately and flush area with clean lukewarm water without interruption or as instructed by medical professionals.
 - Do not modify or disassemble the battery or the power station; there are no userserviceable parts inside.
 - Do not use power sources or attachments that are not approved by Furriion®.

- To reduce risk of damage to the adapter cables and charging ports, pull cables by the plug end when disconnecting the power station. Do not operate the power station with damaged adapter cables.
- Do not drop or subject the product to strong mechanical shock.
- Do not expose the product to moisture, water, rain, snow, or spray.
- Keep the product clean and dry. Unplug the product before cleaning. Use a clean dry cloth to clean battery or power station terminals if they become dirty.
- Do not allow foreign objects or conductive materials such as keys or fingers to come in contact with the positive and negative terminals on the battery or power station. Doing so may cause a short circuit.
- Always unplug charging cables from power station prior to removing battery.
- Ensure that battery is fully inserted in power station and charging cords are connected properly before attempting to charge or discharge.
- Do not expose the product to excessive heat or fire above 158°F (70°C) and avoid storage in direct sunlight.
- The product may become warm, up to 104°F (40°C), during extended high-power operation. During operation, keep the product away from materials that may be affected by these temperatures.
- Disconnect the ePod from power source after more than 48 hours when not in use.
- Do not allow the ePod or any other connected devices exceed the rated current, voltage, or power indicated in this manual and at the AC/DC ports.
- Dispose of battery in accordance with local regulation. Contact your local waste management office for information on proper battery recycling or disposal.
- The product must be stored indoors and protected from the elements.
- Do not block the air vents of the product. Keep a clearance of at least 1" (2.5cm) on the left and right side.

CORRECT DISPOSAL OF THIS PRODUCT

To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle the battery responsibly to promote the sustainable reuse of material resources. To return your used product, please use the return and collection systems or contact the retailer where the product was purchased. They will help inform the best way to deal with the product in an environmentally safe way.



Do not dispose of used batteries with your household waste. Take them to an appropriate disposal/ collection site.

STORAGE

- Store the ePod in a cool dry location, not accessible to children and pets.
- Store the ePod indoors at temperature of -4 to 140°F (-20 to +60°C) with low humidity and non-corrosive atmosphere.
- Ensure that no heavy objects are placed on top of the ePod or could otherwise fall on the ePod.
- After extended periods of storage, up to 6 months, it is recommended to fully discharge and charge the ePod several times to optimize performance.

BEFORE USE

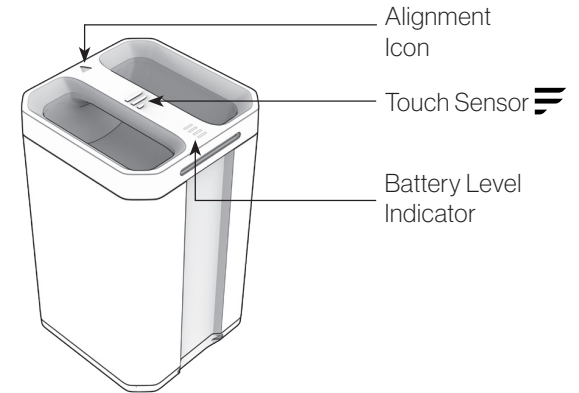 
- Remove all packaging materials.
- Please keep this instruction manual in a safe place for future reference. Make sure to pass the instruction manual on to any new owners of the product.
- The manufacturer does not accept responsibility for any damages that may occur due to not observing these instructions.

- If you have any further questions regarding our products, please contact us at support@furriion.com.
- Check the battery for transport damages.

PRODUCT OVERVIEW

Make sure you have all the following items included in the packaging. If any item is damaged or missing, contact your dealer or Furriion® customer service.

- Furriion ePod™ Battery (FBN12C33A1) x 1
- Quick Start Guide x 1
- Warranty Manual x 1



- The battery is compatible with the following components:
- Furriion ePod™ Power Station (FIVSP40A-BL, sold separately)
 - Furriion eRove™ (FCR45DCAPA-GL, sold separately)




The contents of this manual are proprietary and copyright protected by Lippert. Lippert prohibits the copying or dissemination of portions of this manual unless prior written consent for an authorized Lippert representation has been provided. Any unauthorized use shall void any applicable warranty. The information contained in this manual is subject to change without notice and at the sole discretion of Lippert. Revised editions are available for free download from lippert.com.

Please recycle all obsolete materials.

For all concerns or questions, please contact Lippert
Ph: 432-LIPPERT (432-547-7378) | Web: lippert.com
| E-mail: customerservice@lci1.com

CHECKING THE BATTERY LEVEL WHILE DISCHARGING



 
Touch the  logo on the handle to check the battery level. The battery percentage and corresponding LED indicators are shown below:

Indicator on Display	Indicator on Battery	Battery Level
		76 – 100%
		51 – 75%
		26 – 50%
		11 – 25%
	 Red blink	0 – 10%

NOTE: Indication is shown for 10 seconds.

CHECKING THE BATTERY LEVEL WHILE CHARGING

   During the charging process, the battery percentage and corresponding LED indicators are shown below:

Indicator on Display	Indicator on Battery	Battery Level
		91 – 100%
		76 – 90%
		51 – 75%
		26 – 50%
		≤ 25%

INSERTING AND CHARGING THE ePod™ BATTERY

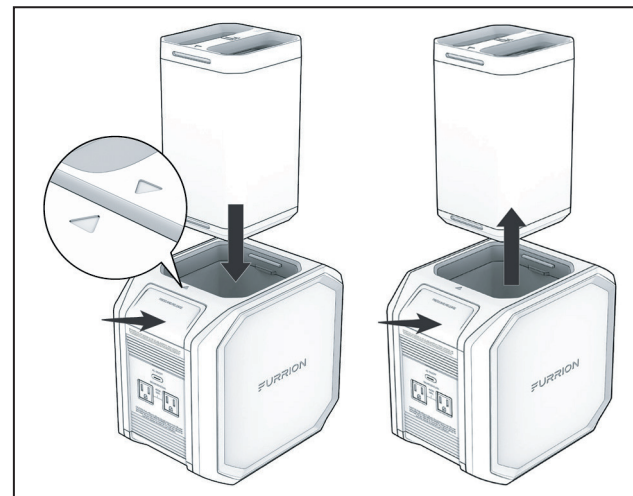 
NOTE: Before installing/removing the battery, switch off the appliance and disconnect it from any power supply.

NOTE: During the charging process, the battery indicator on the handle flashes slowly.

Charge with Furrion ePod™ Power Station

- Fully insert the battery into the power station until the PRESS AND RELEASE button is latched into position.
- To remove, press the PRESS AND RELEASE button and pull upwards.


NOTE: For detailed instructions, refer to the Furrion ePod™ Power Station user manual.



Charge with Furrion eRove™

Insert the battery into the eRove battery compartment.

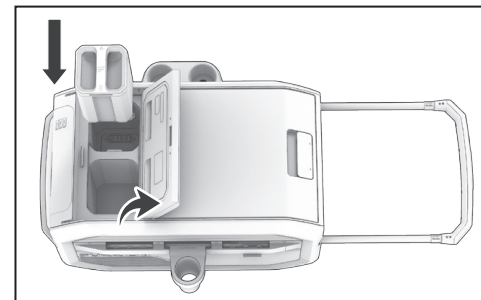 NOTE: For detailed instructions, refer to the Furrion eRove™ user manual.



SPECIFICATION

Weight	8.8lb (4kg)
Dimensions	5 ⁹ / ₁₆ " x 5 ⁹ / ₁₆ " x 9 ¹ / ₂ " (141.5 x 141.5 x 241mm)
Operating Temperature	32 to 104°F (0 to +40°C)
Storage Temperature	-4 to 140°F (-20 to +60°C)
Cell Chemistry	Lithium-ion
Pack Capacity	412Wh
Battery Voltage	14.4Vdc
Life Cycles*	500 @RT 77°F (25°C), charge & discharge with 0.2C
* Maintaining over 70 % of original capacity.	



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.