


BASIC OPERATION

Button	Function
	Power on/off.
VOL +/-	Adjust volume.
	Mute or un-mute the audio output.
MENU	Enter the main menu or return to the previous menu.
	Navigate each menu.
OK	Confirm your selection.
CH +/-	Select the channels.
SOURCE	Select the input source.
EXIT	Exit the menu.

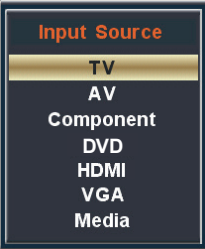


1. Press **SOURCE** button to bring up the input source selection screen.

2. Choose the appropriate input source.
- If the selected source is TV, press **CH +/-** to choose your desired channel.

For DVD player operation: Select the source of DVD and insert a compatible disc into the disc compartment on the rear of the TV. The DVD player starts playback or opens the DVD disc menu automatically.

For other AV connections, use the remote control of the connected AV device to operate.

Tip:
See the complete user manual online for detailed functional explanation.

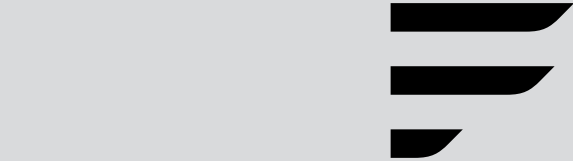

FURRION®

Furrion Ltd. (Furrion) is a wholly owned subsidiary of Lippert Components, Inc. (Lippert) Furrion Ltd.
Furrion Innovation Center & Institute of Technology

- 22244 Innovation Drive, Elkhart, IN 46514-5514, USA

• Toll free/Numéro gratuit/Línea telefónica gratuita: 1-800-789-3341

• Email/Courriel/Correo electrónico: support@furrion.com

©2007-2023 Furrion Ltd. Furrion® and the Furrion logo are trademarks licensed for use by Furrion Ltd. and registered in the U.S. and other countries.

FURRION.COM
For Patent Info: www.Lippert.com/patents



The contents of this manual are proprietary and copyright protected by Lippert. Lippert prohibits the copying or dissemination of portions of this manual unless prior written consent from an authorized Lippert representative has been provided. Any unauthorized use shall void any applicable warranty. The information contained in this manual is subject to change without notice and at the sole discretion of Lippert. Revised editions are available for free download from lippert.com.

Please recycle all obsolete materials.

For all concerns or questions, please contact Lippert.
Ph: 432-LIPPERT (432-547-7378) | Web: lippert.com | Email: customerservice@lci1.com

FURRION

22" FHD LED 12V TV




Model: FDFD22A0A

Quick Start Guide


This quick start guide will help you install and use the device properly. For further support and to download the complete user manual please visit www.furrion.com/support.

WHAT'S IN THE BOX

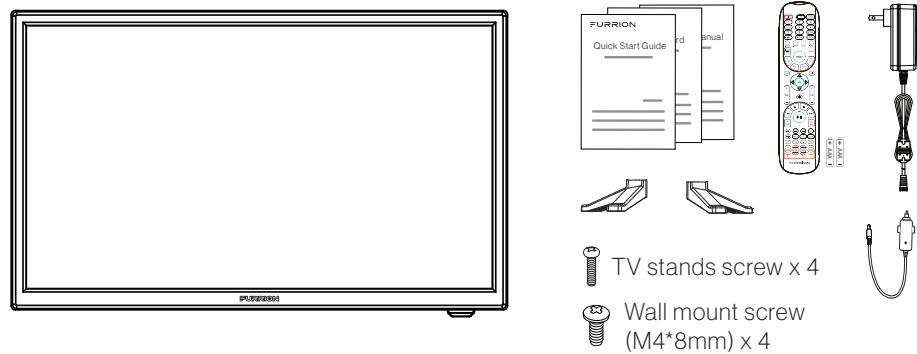

INSTALL

A. Use the supplied TV stands

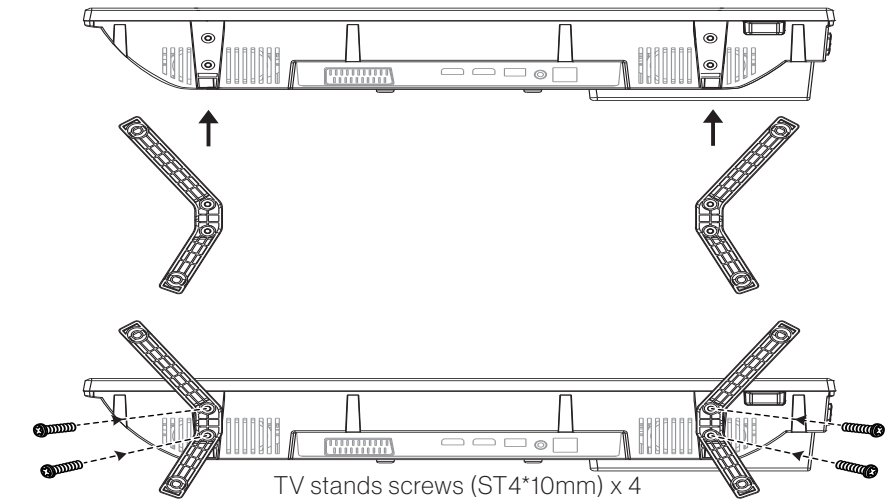


B. Wall mount

Choose an appropriate location and VESA mount. Follow the installation guide supplied with the Wall-Mount Bracket when installing the TV and contact a professional for installation.

VESA MOUNTING PATTERN				
Model	Width mm	Height mm	Screw Size	Quantity
FDFD22A0A	100	100	M4*8 mm	4





CONNECT

WARNING: Do not connect the power source before making connections.



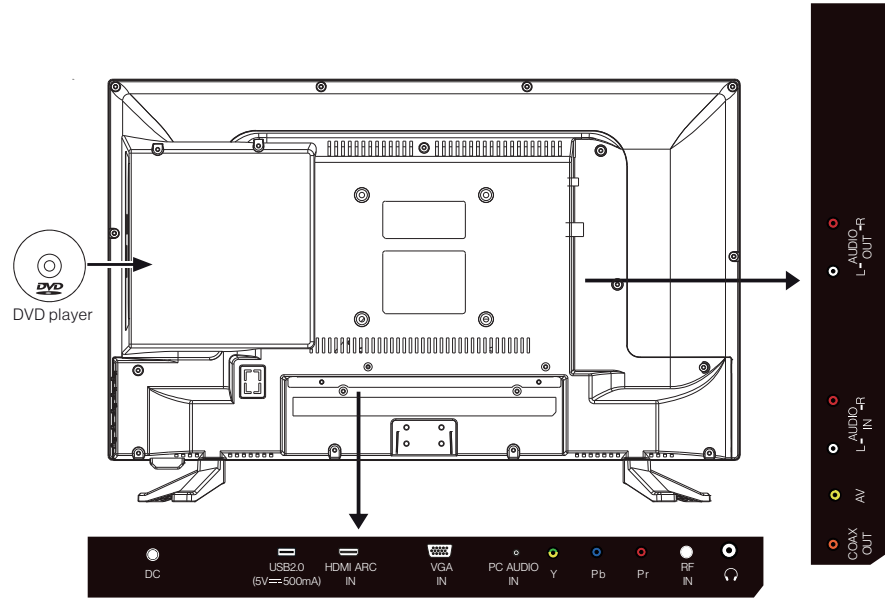


Note: All external devices and cables shown in the diagram are for reference only and not included in the package.


1. Choose one or more of the TV signal/AV connections

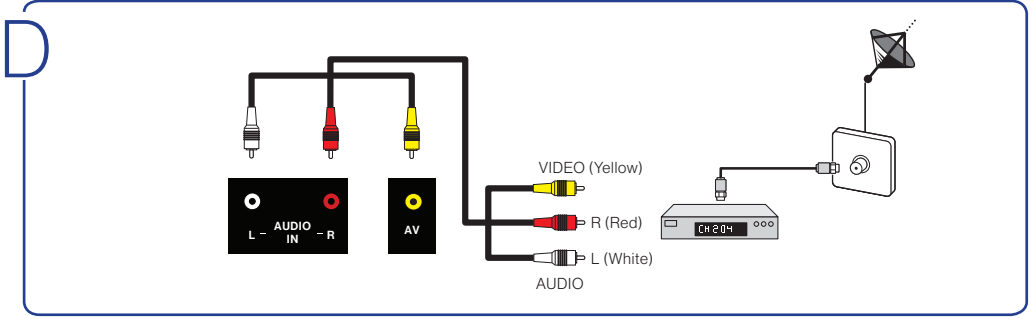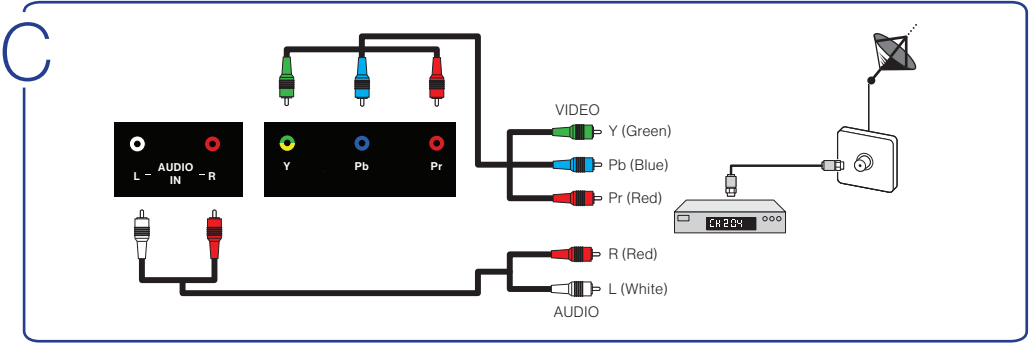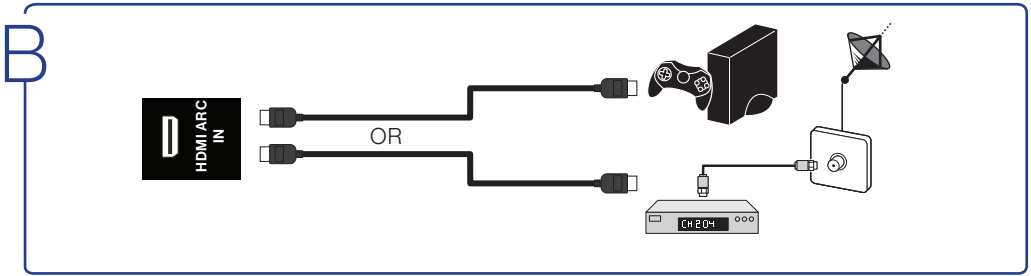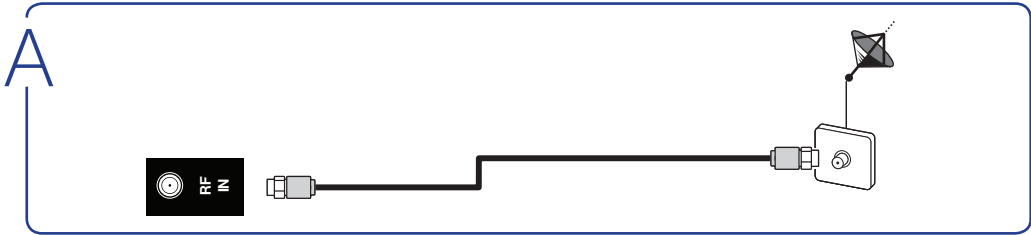

2. Connect for more features

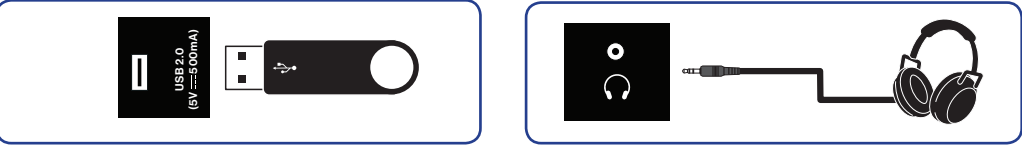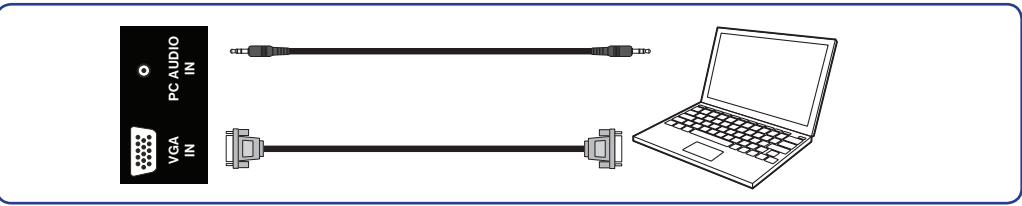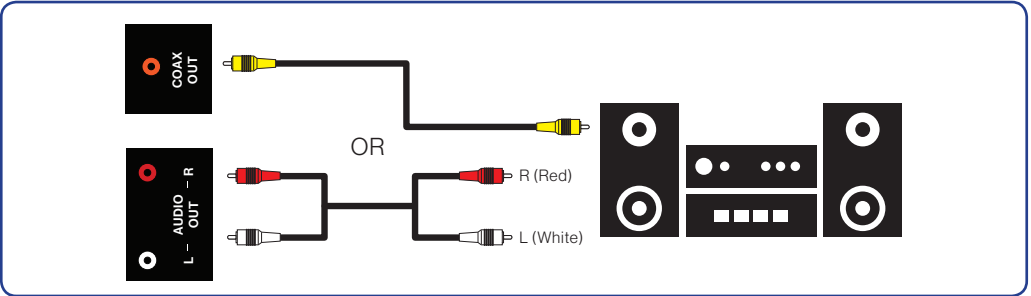


CONNECT POWER & INSTALL BATTERY

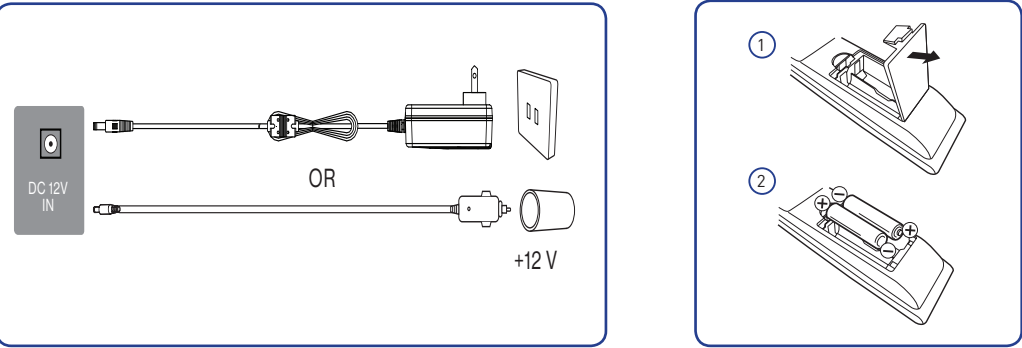

INITIAL SETUP

Press to power on and follow the on-screen instructions to finish initial setup.

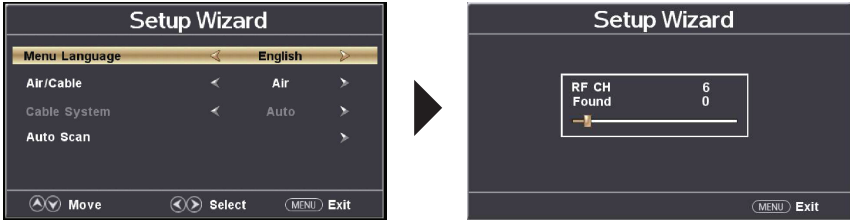



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.