



GMW09AB/2022071764



* Product picture for reference only

Thank you for purchasing this Girard product. Before operating your new product, please read these instructions carefully. This user manual contains information for safe use, installation and maintenance of the product.

Please keep this user manual in a safe place for future reference. This will ensure safe use and reduce the risk of injury. Be sure to pass on this manual to new owners of this product.

The manufacturer does not accept responsibility for any damages due to not observing these instructions.

CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	2
General Safety Instructions	2
Grounding Instructions.....	4
Electrical Requirements.....	4
Radio or TV Interference	4
California Residents Only	4
PRODUCT OVERVIEW.....	5
Product Features	5
Control Panel.....	6
INSTALLATION	7
What's in the Box	7
Before Installation	7
Microwave Oven Installation.....	7
Electrical Connection	9
QUICK COOK PROGRAMS	9
OPERATION	10
COOKING TECHNIQUES.....	13
UTENSILS GUIDE.....	13
CLEANING AND CARE	14
TROUBLESHOOTING.....	15
SPECIFICATION	16

IMPORTANT SAFETY INSTRUCTIONS

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

1. Do not attempt to operate this oven with the door open since open door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
2. Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
3. Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the:
 - a. DOOR (bent)
 - b. HINGES AND LATCHES (broken or loosened)
 - c. DOOR SEALS AND SEALING SURFACES
4. The oven should not be adjusted or repaired by anyone except properly qualified service person.

General Safety Instructions

WARNING - When using electrical appliances basic safety precautions should be followed, including the following. To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy.

1. Read all instructions before using the appliance.
2. Read and follow the specific: "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY".
3. This appliance must be grounded. Connect only to properly grounded outlet. See "GROUNDING INSTRUCTIONS" section.
4. Install or locate this appliance only in accordance with the provided installation instructions.
5. HOT CONTENTS CAN CAUSE SEVERE BURNS. DO NOT ALLOW CHILDREN TO USE THE MICROWAVE. Use caution when removing hot items.
6. When cleaning surfaces of door and oven that comes together on closing the door, use only mild, nonabrasive soaps, or detergent applied with a sponge or soft cloth.
7. Keep cord away from heated surface.
8. Liquids, such as water, coffee, or tea are able to overheat beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present. THIS COULD RESULT IN VERY HOT LIQUID SUDDENLY BOILING OVER WHEN THE CONTAINER IS DISTURBED OR A UTENSIL IS INSERTED INTO THE LIQUID. To reduce the risk of injury to persons:
 - a. Do not overheat the liquid.
 - b. Stir the liquid both before and halfway through heating it.
 - c. Do not use straight-sided containers with narrow necks.
 - d. After heating, allow the container to stand in the microwave oven for a short time before removing the container.

-
- e. Use extreme care when inserting a spoon or other utensil into the container.
 9. This appliance should be serviced only by qualified service personnel. Contact nearest authorized service facility for examination, repair, or adjustment.
 10. To reduce the risk of fire in the oven cavity:
 - a. Do not overcook food. Carefully attend appliance when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
 - b. Remove wire twist-ties from paper or plastic bag before placing bag in oven.
 - c. If material inside of the oven ignites, keep oven door closed, turn oven off, and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.
 - d. Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils, or food in the cavity when not in use.
 11. Some products such as whole eggs and sealed containers, for example, closed glass jars are able to explode and should not be heated in this oven.
 12. Do not cover or block any openings on the appliance.
 13. Do not store this appliance outdoors. Do not use this product near water - for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar location.
 14. Use this appliance only for its intended use as described in the manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specially designed to heat, cook or dry food. It is not designed for industrial or laboratory use.
 15. Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
 16. Do not immerse cord or plug in water or any other liquid.
 17. Do not let cord hang over edge of table or counter.
 18. Do not operate any heating or cooking appliance beneath the appliance.
(Exception: A microwave oven investigated for use above another heating appliance.)
 19. Do not mount unit over or near any portion of heating or cooking appliance.
(Exception: A microwave oven investigated for use above another heating appliance.)
 20. Do not mount over sink.
 21. Do not store anything directly on top of the appliance surface when the appliance is in operation.

SAVE THESE INSTRUCTIONS
HOUSEHOLD USE ONLY (NOT FOR COMMERCIAL
USE)

CAUTION

- NOTICE: PACEMAKERS - Most pacemakers are shielded from interference from electronic products, including microwaves. However, patients with pacemakers may wish to consult their physicians if they have concerns.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

Grounding Instructions

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces risk of electric shock by providing an escape wire for the electric current.

WARNING - Improper use of the grounding plug can result in a risk of electric shock.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded, and either: If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade grounding plug and a 3-slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord shall be equal to or greater than the electrical rating of the appliance.

Electrical Requirements

The electrical requirements are a 120 volt, 60 Hz, AC only, 15 amp or 20 amp dedicated circuit. It is recommended that a separate circuit serving only the oven be provided. The oven is equipped with a 3-prong grounding plug. It must be plugged into a wall receptacle that is properly installed and grounded.

Radio or TV Interference

Should there be any interference caused by the microwave oven to your radio or TV, check that the microwave oven is on a different circuit, relocate the radio or TV as far away from the oven as feasible or check position and signal of receiving antenna.

California Residents Only

WARNING


This product can expose you to chemicals such as Di (2-ethylhexyl) phthalate (DEHP), which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov

This device complies with part 18 of the FCC Rules.

SAVE THESE INSTRUCTIONS

PRODUCT OVERVIEW

Product Features

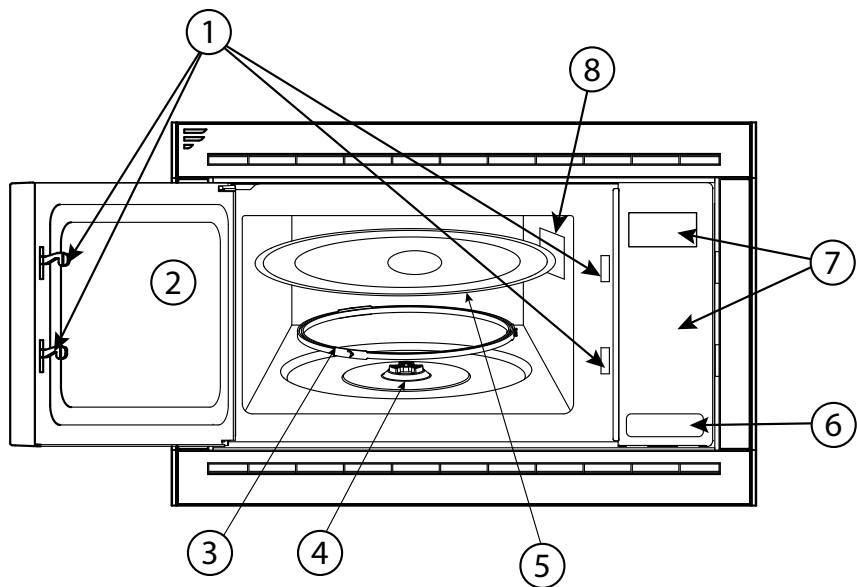

Item	Description
①	Door Safety Lock System
②	Oven Window
③	Roller Ring
④	Shaft
⑤	Glass Tray
⑥	Door Release Button
⑦	Control Panel
⑧	Wave Guide (Do not remove the mica plate covering the wave guide)

Control Panel



DISPLAY

Cooking time, power, indicators and present time are displayed.

TIME COOK

Cook with the setting you programmed.

TIME DEFROST

Defrost by the time you input.

WEIGHT DEFROST

Defrost by the weight you input.

POWER

Set the cooking power or check power level during cooking.

CLOCK

Set the time of day.

KITCHEN TIMER

Set a timer to cook.

QUICK COOK BUTTONS

Instant settings to cook popular foods

EXPRESS COOK (1-6)

Press numbers 1 through 6 to quickly select a time cooked setting from 1 to 6 minutes.

NUMBER BUTTONS (0-9)

Set the time, power or weight

STOP/CANCEL

Stop/cancel a setting.

0/MEMORY

Set and memory a program.

START/+30 SEC

Press to start cooking. During the cooking process, press to increase the cooking time.

INSTALLATION

What's in the Box

Make sure all the following items are included in the packaging. If any item is damaged or missing, contact your dealer.

- Microwave oven body x 1
- Glass tray x 1
- Glass tray roller ring x 1
- User manual x 1
- Warranty manual x 1

Before Installation

1. Make sure that all the packing materials are removed from the oven cavity.
2. Check the oven for any damage, such as misaligned or bent door, damaged door seals and sealing surface, broken or loose door hinges and latches and dents inside the cavity or on the door. If there is any damage, do not operate the oven and contact qualified service personnel.
3. This microwave oven must be placed on a flat, stable surface to hold its weight and the heaviest food likely to be cooked in the oven.
4. Do not place the oven where heat, moisture, or high humidity are generated, or near combustible materials.
5. The oven must have sufficient airflow. Do not cover or block any openings on the oven. Do not remove feet on which oven stands.
6. Do not operate the oven without glass tray, roller support, and shaft in their proper positions.
7. Make sure that the power supply cord is good in condition and does not run under the oven or over any hot or sharp surface.

8. The electrical plug or the circuit breaker must be accessible so that it can be easily unplugged in an emergency.


Microwave Oven Installation

WARNING

For built-in installations, you have to use the upper and bottom ducts provided with trim kit FMSN09A-BL-TK/FMSN09A-SS-TK. Failure to comply would lead to overheating of the device.

Cabinet Preparation


1. Select a suitable place that is not susceptible to moisture.
2. Mark and cutout an opening in the cabinet according to the dimensions outlined in the table.

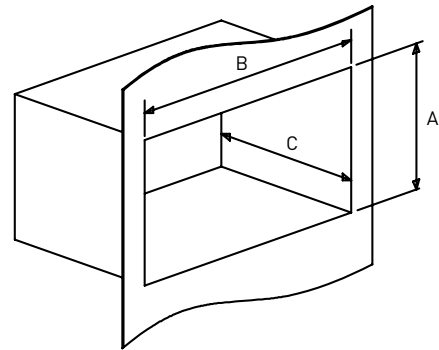


A	13 ³ / ₈ " (340mm) Min.
B	20" (510mm) Min.
C	14 ¹ / ₈ " (359mm) Min.

Bottom Duct Installation (sold together with FMSN09A-BL-TK or FMSN09-SS-TK trimkit))

1. Mark out the cabinet center line as shown in the figure below.

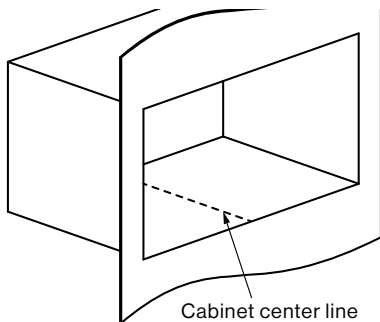


2. Locate the bottom duct into the cabinet opening. Ensure the duct bottom is center aligned to the cabinet center line. Fix the bottom duct with four M4 x $\frac{3}{8}$ " self-tapping screws.

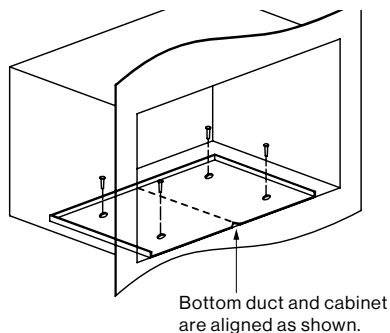


Trim Kit Installation (FMSN09A-BL-TK/FMSN09A-SS-TK, not included)

1. Remove the trim kit from the packaging. Check to make sure it is not damaged.

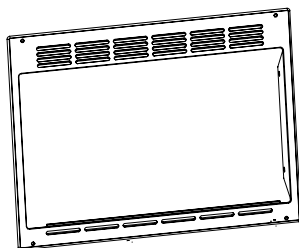


2. Fit the trim kit over the oven front panel and fix with four M4 x $\frac{5}{8}$ " self-tapping screws on side.

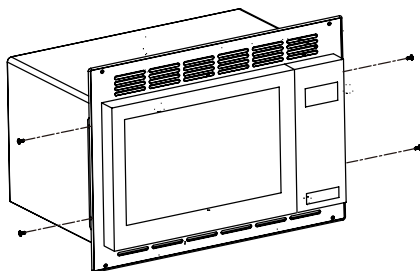


Upper Duct Installation (sold together with FMSN09A-BL-TK or FMSN09-SS-TK trimkit))

Install the upper duct on the top of the oven and fix it with four M4 x $\frac{5}{8}$ " self-tapping screws.

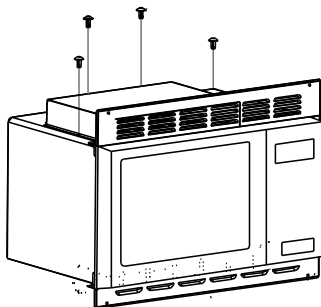


Oven Installation

Slide the microwave oven into the cabinet opening and fix it to the cabinet with four M4 x $\frac{3}{8}$ " self-tapping screws.

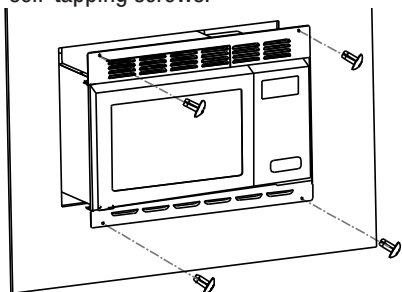

Turntable Installation

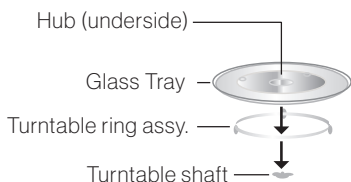

- Never place the glass tray upside down. The glass tray should never be restricted.
- Both the glass tray and turntable ring assembly must always be used during cooking.
- All food and containers of food are always be placed on the glass tray for cooking.
- If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.

Electrical Connection

Connect the microwave oven to a 120 volt, 60 Hz, AC only, 15 amp or 20 amp dedicated circuit. It is recommended that an individual circuit serving only the microwave oven be provided.

QUICK COOK PROGRAMS

The Quick Cook programs allow you to cook or reheat food automatically without selecting power level and time.

POPCORN

1. Press "POPCORN" repeatedly, the number "1.75", "3.0", "3.5" will be displayed in order.
2. Once the number you desired is displayed, press "START/+30 SEC" to start cooking, the buzzer will sound once.
3. When the cooking is finished, the buzzer will sound five times then return to standby mode.

NOTE: The number indicates the weight of food.

POTATO

1. Press "POTATO" repeatedly, the number "1", "2", "3" will be displayed in order.
2. Once the number you desired is displayed, press "START/+30 SEC" to start cooking, the buzzer will sound once.
3. When the cooking is finished, the buzzer will sound five times then return to standby mode.

NOTE: The number displayed indicates the number of potatoes. Approximate weight of a single potato is 8 oz.

PIZZA

1. Press "PIZZA" repeatedly, the number "4.0", "8.0", "14.0" will be displayed in order.
2. Once the number you desired is displayed, press "START/+30 SEC" to start cooking,

the buzzer will sound once.

- When the cooking is finished, the buzzer will sound five times then return to standby mode.

NOTE: The number indicates the weight of food in oz.

FROZEN VEGETABLE

- Press “FROZEN VEGETABLE” repeatedly, the number “4.0”, “8.0”, “16.0” will be displayed in order.
- Once the number you desired is displayed, press “START/+30 SEC” to start cooking, the buzzer will sound once.
- When the cooking is finished, the buzzer will sound five times then return to standby mode.

NOTE: The number indicates the weight of food in oz.

BEVERAGE

- Press “BEVERAGE” repeatedly, the number “1”, “2”, “3” will be displayed in order.

OPERATION

POWER LEVEL

There are 11 power levels available to select:

Number button	Power Level	Cooking Power	Screen Display
1,0	10	100%	PL10
9	9	90%	PL9
8	8	80%	PL8
7	7	70%	PL7
6	6	60%	PL6
5	5	50%	PL5
4	4	40%	PL4
3	3	30%	PL3
2	2	20%	PL2
1	1	10%	PL1
0	0	0%	PL0

- Once the number you desired is displayed, press “START/+30 SEC” to start cooking, the buzzer will sound once.
- When the cooking is finished, the buzzer will sound five times then return to standby mode.

NOTE: The number indicates the cup of beverage, one cup is about 120ml.

DINNER PLATE

- Press “DINNER PLATE” repeatedly, the number “9.0”, “12.0”, “18.0” will be displayed in order.
- Once the number you desired is displayed, press “START/+30 SEC” to start cooking, the buzzer will sound once.
- When the cooking is finished, the buzzer will sound five times then return to standby mode.

NOTE: The number indicates the weight of food in oz.

CLOCK SETTING

- Press “CLOCK” once, the “00:00” will be displayed.
- Use the number buttons to enter the current time. For example, the time is 12:10 now, press “1, 2, 1, 0” buttons accordingly.
NOTE: It is a 12-hour clock system, the clock range allowed to be set is 1:00--12:59.
- Press “CLOCK” to finish the clock setting.
- Repeat steps 1 to 3 to reset the clock if you want to reset it.

NOTE: In the process of clock setting, if the “STOP/CANCEL” button is pressed or if there is no operation within 1 minute, the oven will return to the previous setting automatically.

KITCHEN TIMER

1. Press “KITCHEN TIMER” once, the “00:00” will be displayed.
2. Use the number buttons to set the timer. The maximum timer allowed to set is 99 minutes and 99 seconds.
3. Press “START/+30SEC.” to confirm the setting.
4. When the timing is finished, the buzzer will sound five times, then return to the clock displaying.

NOTE: You are not allowed to change the program setting during the timing process.

TIME COOK

1. Press “TIME COOK” once, the screen will display “00:00”.
2. Use the number buttons to input the cooking time. The maximum cooking time is 99 minutes and 99 seconds.
3. Press “POWER” once, the screen will display “PL10”. Press the number button to adjust the power level.

NOTE: The default power is 100% power.

4. Press “START/+30SEC.” to start cooking. The remaining cooking time is displayed and start counting down.

For example, if you want to cook the food with 50% microwave power for 15 minutes.

1. Press “TIME COOK” once.
2. Press “1”, “5”, “0”, “0” in order.
3. Press “POWER” once, then press “5” to select 50% cooking power.
4. Press “START/+30SEC.” to start cooking.

NOTES:

- In the process of setting, if the “STOP/CANCEL” button is pressed or if there is no operation within 1 minute, the oven will return to the previous setting automatically.
- If the “PLO” power level is selected, the oven will work with fan mode only.

NOTE: You can use the “PLO” level to remove the odor of the oven.

- During the cooking process, you are allowed to change the cooking power by pressing the “POWER” button. Once the “POWER” button is pressed, the current power will flash for 3 seconds, then you can press the number button to change the power.

EXPRESS COOKING

- In standby mode, press the number buttons 1 to 6 to select 1 to 6 minutes of cooking at instantly 100% power level. Press “START/+30SEC.” to increase the cooking time during the cooking process, each press will increase cooking time by 30 seconds. The maximum cooking time is 99 minutes and 99 seconds.
- In standby mode, press “START/+30SEC” to start 30 seconds of cooking at instantly 100% power level. During microwave cooking and time defrost, time can be added by pressing “START/+30SEC” button. The maximum cooking time is 99 minutes and 99 seconds.

WEIGHT DEFROST

1. Press “WEIGHT DEFROST” once, the screen will display “dEF1”.
2. Use the number buttons to input the food weight to be defrosted. The valid weight range is 4~100 Oz.
3. Press “START/+30SEC.” to start defrosting. The defrosting time will be displayed and start counting down.

TIME DEFROST

1. Press “TIME DEFROST” once, the screen will display “dEF2”.
2. Use the number buttons to input the defrosting time. The valid time range is 0:01~99:99.
3. Press “START/+30SEC.” to start defrosting. The defrosting time will be displayed and start counting down.

NOTE: The default defrosting power is level 3.

If you want to change the power level, press “POWER” once, then press the number button to choose a desired defrosting power level.

MEMORY FUNCTION

If a program has been memorized in the system.

1. Press “0/MEMORY” repeatedly, the number “1”, “2”, “3” will be displayed in order.
2. Once the number where the program to be saved is displayed, press “START/+30 SEC” to start cooking by using the saved program.

For example, to set a new program of “To cook the food with 80% microwave power for 3 minutes and 20 seconds.” as the second memory, the steps are as follows:

1. In standby mode, press “0/MEMORY” twice, the number “2” will be displayed.
2. Press “TIME COOK” once, then press “3”, “2”, “0” in order.
3. Press “POWER” once, the screen will display “PL10”. Press “8” to change the power level to “PL8”.

NOTE: The default power is 100% power.

4. Press “START/ +30 SEC” once to save the program. The buzzer will sound once and the screen displays “2”.

NOTE: The memory will not be cleared unless the power is cut off. Or you need to reset the program.

MULTI-STAGE COOKING

At most 2 multi-stage programs can be set for cooking.

For example, if you want to cook with 80% microwave power for 5 minutes and 60% microwave power for 10 minutes. The cooking program can be set as follows:

1. Press “TIME COOK” once, then press “5”, “0”, “0” to set the cooking time.

2. Press “POWER” once, then press “8” to select 80% microwave power.
3. Press “TIME COOK” once, then press “1”, “0”, “0”, “0” to set the cooking time.
4. Press “POWER” once, then press “6” to select 60% microwave power.
5. Press “START/ +30 SEC” to start cooking.

NOTE: If the defrosting stage is included in multi-stage cooking, the defrosting will be set as the first stage automatically. The auto cooking function is unusable during multi-stage cooking.

CHILD LOCK

The child lock function prevents unsupervised operation by children.

To lock: In standby mode, press and hold “STOP/CANCEL” for 3 seconds, a long “beep” will be heard indicating the oven has entered into the lock mode, the screen displays “”.

To unlock: Press and hold “STOP/CANCEL” for 3 seconds, a long “beep” indicating the oven is unlocked, the “” disappeared from the screen.

INQUIRING FUNCTION

- In cooking mode, press “CLOCK”, the clock will be displayed for 3 seconds and then disappeared.
- In cooking mode, press “POWER” the current power level will be displayed for 3 seconds and then disappeared.

COOKING END REMINDING

When the cooking is finished, the buzzer will beep 5 times to alert the user the cooking is finished.

COOKING TECHNIQUES

Your microwave makes cooking easier than conventional cooking, provided you keep these considerations in mind:

STIRRING

Stir foods such as casseroles and vegetables while cooking to distribute heat evenly. Food at the outside of the dish absorbs more energy and heats more quickly, so stir from the outside to the center. The oven will turn off when you open the door to stir your food.

ARRANGEMENT

Arrange unevenly shaped foods, such as chicken pieces or chops, with the thicker, meatier parts toward the outside of the turntable where they receive more microwave energy. To prevent overcooking, place delicate areas, such as asparagus tips, toward the center of the turntable.

SHIELDING

Shield food with narrow strips of aluminum foil to prevent overcooking. Areas that need shielding include poultry wing tips, the ends of poultry legs, and corners of square baking dishes. Use only small amounts of aluminum foil. Larger amounts can damage your oven.

UTENSILS GUIDE

This section lists which utensils can be used in the microwave, which ones have limited use for short periods, and which ones should not be used in the microwave.

RECOMMENDED

Microwave browning dish - Use to brown the exterior of small items such as steaks, chops, or pancakes. Follow the directions provided with your browning dish.

Microwaveable plastic wrap - Use to retain steam. Leave a small opening for some steam to escape and avoid placing it directly

TURNING

Turn foods over midway through cooking to expose all parts to microwave energy. This is especially important with large foods such as roasts.

STANDING

Foods cooked in the microwave build up internal heat and continue to cook for a few minutes after heating stops. Let foods stand to complete cooking, especially foods such as cakes and whole vegetables. Roasts need this time to complete cooking in the center without overcooking the outer areas. All liquids, such as soup or hot chocolate, should be shaken or stirred when cooking is complete. Let liquids stand a moment before serving. When heating baby food, stir well at removal and test the temperature before serving.

ADDING MOISTURE

Microwave energy is attracted to water molecules. Food that is uneven in moisture content should be covered or allowed to stand so that the heat disperses evenly. Add a small amount of water to dry food to help it cook.

on the food.

Paper towels and napkins - Use for short-term heating and covering; these absorb excess moisture and prevent spattering. Do not use recycled paper towels, which may contain metal and could ignite.

Glass and glass-ceramic bowls and dishes - Use for heating or cooking.

Paper plates and cups - Use for short-term heating at low temperatures. Do not use recycled paper, which may contain metal and could ignite.

Wax paper - Use as a cover to prevent spattering.

Thermometers - Use only those labeled "Microwave Safe" and follow all directions. Check the food in several places. Conventional thermometers may be used on microwave food once the food has been removed from the oven.

LIMITED USE

Aluminum foil - Use narrow strips of foil to prevent overcooking of exposed areas. Using too much foil can damage your oven, so be careful. You should keep distance of 1 inch (25.4mm) between aluminum foil and cavity.

Ceramic, porcelain, and stoneware - Use these if they are labeled "Microwave Safe". If they are not labeled, test them to make sure they can be used safely.

Plastic - Use only if labeled "Microwave Safe". Other plastics can melt.

CLEANING AND CARE

1. Turn off the oven and remove the power plug from the wall socket before cleaning.
2. Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergent may be used if the oven gets very dirty. Avoid the use of spray and other harsh cleaners as they may stain, streak or dull the door surface.
3. The outside surfaces should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
4. Wipe the window on both sides with a damp cloth to remove any spills or splatters.
5. Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.
6. If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity conditions. In such case, it is normal.
7. It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm sudsy water or in a dishwasher.
8. The roller ring and oven floor should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven with mild detergent. The roller ring may be washed in mild sudsy water or dishwasher. When removing the roller ring from cavity floor for cleaning, be sure to replace in the proper position.
9. Remove odors from your oven by combining a cup of water with the juice and skin of one lemon in a deep

NOT RECOMMENDED

Glass jars and bottles - Regular glass is too thin to be used in a microwave. It can shatter and cause damage and injury.

Paper bags - These are a fire hazard, except for popcorn bags that are designed for microwave use.

Styrofoam plates and cups - These can melt and leave an unhealthy residue on food.

Plastic storage and food containers - Containers such as margarine tubs can melt in the microwave.

Metal utensils - These can damage your oven. Remove all metal before cooking.

NOTE: Should you wish to check if a dish is safe for microwaving, place the empty dish in the oven and microwave on HIGH for 30 seconds. A dish which becomes very hot should not be used.

microwaveable bowl, microwave for 5 minutes. Wipe thoroughly and dry with a soft cloth.

10. When it becomes necessary to replace the oven light, please consult a dealer to have it replaced.
11. The oven should be cleaned regularly and any food deposits removed. Failure to maintain the oven in a clean condition

could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

12. Please do not dispose this appliance into the domestic rubbish bin; it should be disposed to the particular disposal center provided by the municipalities.

TROUBLESHOOTING

Check your problem by using the chart below and try the solutions for each problem. If the microwave oven still does not work properly, contact the nearest authorized service center.

TROUBLE	POSSIBLE CAUSE	POSSIBLE REMEDY
Oven will not start	– Electrical cord for oven is not plugged in. – Door is open. – Wrong operation is set.	– Plug into the outlet. – Close the door and try again. – Check instructions. – Check circuit breaker
Arcing or sparking	– Materials to be avoided in microwave oven were used. – The oven is operated when empty. – Spilled food remains in the cavity.	– Use microwave-safe cookware only. – Do not operate with oven empty. – Clean cavity with wet towel.
Unevenly cooked foods	– Materials to be avoided in microwave oven were used. – Food is not defrosted completely. – Cooking time, power level is not suitable. – Food is not turned or stirred.	– Use microwave-safe cookware only. – Completely defrost food. – Use correct cooking time, power level. – Turn or stir food.
Overcooked foods	– Cooking time, power level is not suitable.	– Use correct cooking time, power level.
Undercooked foods	– Materials to be avoided in microwave oven were used. – Food is not defrosted completely. – Oven ventilation ports are restricted. – Cooking time, power level is not suitable.	– Use microwave-safe cookware only. – Completely defrost food. – Check to see that oven ventilation ports are not restricted. – Use correct cooking time, power level.
Improper defrosting	– Materials to be avoided in microwave oven were used. – Cooking time, power level is not suitable. – Food is not turned or stirred.	– Use microwave-safe cookware only. – Use correct cooking time, power level. – Turn or stir food.

SPECIFICATION

Technical Specification	
Rated Input Power	120V/60Hz, 1350W (MICROWAVE)
Rated Output Power (Microwave)	900 W
Product Dimensions (W×D×H)	19 ¹ / ₈ " x14 ³ / ₄ " x 13 ³ / ₈ " (485 x 375 x 340mm)
Oven Capacity	0.9 cu. ft.
Turntable Diameter	Ø10.6" / Glass
Net Weight	Approx. 27.6 lbs.



The contents of this manual are proprietary and copyright protected by Lippert. Lippert prohibits the copying or dissemination of portions of this manual unless prior written consent for an authorized Lippert representation has been provided. Any unauthorized use shall void any applicable warranty. The information contained in this manual is subject to change without notice and at the sole discretion of Lippert. Revised editions are available for free download from lippert.com.

Please recycle all obsolete materials.

For all concerns or questions, please contact Lippert
PhL 432-LIPPERT (432-547-7378) | Web: lippert.com | E-mail:
customerservice@lci1.com



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.