




GIRARD PRODUCTS. LLC.

10 CU. FT. 12V BUILT-IN REFRIGERATOR

GRF10DBGL [2022071754]; GRF10DBGR [2022071755]

USER MANUAL

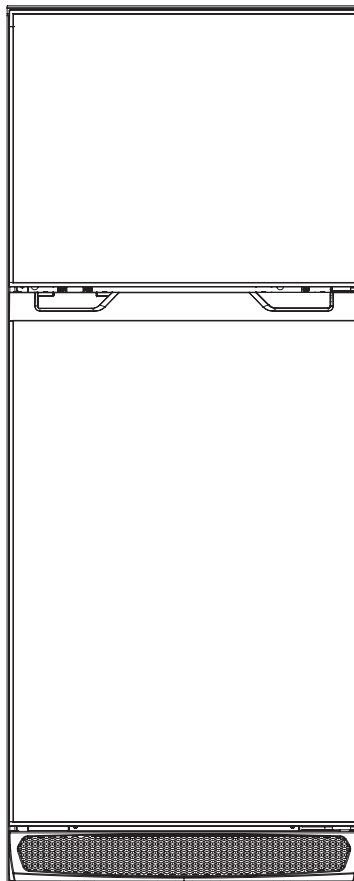

* Picture shown here is for reference only.

Thank you for purchasing this Girard product. Before operating your new appliance, please read these instructions carefully. This instruction manual contains information for safe use, installation and maintenance of the appliance.

Please keep this instruction manual in a safe place for future reference. This will ensure safe use and reduce the risk of injury. Be sure to pass on this manual to new owners of this appliance.

The manufacturer does not accept responsibility for any damages due to disregarding these instructions.

Table of Contents

Table of Contents 1

Explanation of Symbols 2

Important Safety Instructions 2

 General Safety Warnings 2

 Proper Disposal of the Refrigerator 2

Parts and Features 3

Installation 4

 What's in the Box 4

 Site Preparation 4

 Securing the Refrigerator 5

Operation 6

 Temperature Control 6

 Off Grid Usage 6

 Extreme Temperature Usage 7

 Adjusting the Shelf (Optional) 7

 Storage Lock 7

 Transportation 8

 Energy Saving Tips 8

 Extended Storage 8

Cleaning and Maintenance 8

 Refrigerator Interior Cleaning 8

 Refrigerator Exterior Cleaning 8

 Battery Maintenance 8

 Replacing the Charcoal Filter 8

Circuit Diagram 9

Specifications 9

Troubleshooting 10

Explanation of Symbols

This manual has safety information and instructions to help you eliminate or reduce the risk of accidents and injuries. Always respect all safety warnings identified with these symbols. A signal word will identify safety messages and property damage messages, and will indicate the degree or level of hazard seriousness.

DANGER

Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate personal injury, or property damage.

Important Safety Instructions

General Safety Warnings

CAUTION

Improper installation, adjustment, alteration, service or maintenance can cause personal injury or property damage. For assistance or additional information, contact Girard customer service.

- Do not allow anything to touch the refrigerator cooling system.
- Make sure the electrical installation follows all applicable code.
- Do not bypass or change the refrigerator's electrical components or features.
- Do not spray liquids near electrical outlets, connections, or the refrigerator components. Most liquids are conductive, which can cause electric shock, short circuit or fire.
- The refrigerator cooling system is under pressure. Do not try to repair or to recharge a defective cooling system.
- The shelves have been fixed according to safety regulation. The shelves must always be retained during operation and transportation. Contact Girard customer service if the fixing mechanism is ever compromised.
- Make sure the glass door does not contact any hard object while opening/closing the door.
- Do not slam the glass door.

WARNING

- The rear of the refrigerator has sharp edges and corners. To prevent cuts or abrasions when working on the refrigerator, use caution and wear personal protection such as cut resistant gloves, and arm protection.
- Do not store or use gasoline or any flammable vapors and liquids in the vicinity of this refrigerator.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- To avoid an electrical shock hazard, relevant actions should be performed by qualified and certified professionals. Power should always be disconnected.

WARNING

- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

Proper Disposal of the Refrigerator

DANGER

Risk of child entrapment. To avoid the possibility of child entrapment, please take the following precautions before you dispose of your refrigerator.

- Remove all doors.
- Leave shelves in place so children may not easily climb inside.
- Never allow children to play with, operate, or crawl inside the refrigerator.



Child entrapment and suffocation are not problems of the past. Junked or abandoned refrigerators are still dangerous even if they will sit for "just a few days." If you are getting rid of your old refrigerator, please follow the instructions below to help prevent accidents.

Before you throw away your old refrigerator or freezer:


- Take off the doors.
- Leave the shelves in place so that children may not easily climb inside.

Refrigerants

The refrigerant isobutane (R600a) is contained within the refrigerant circuit of the refrigerator, a natural gas with a high level of environmental compatibility, which is nevertheless flammable and under federal law must be removed prior to product disposal. If you are getting rid of an old refrigeration product, check with the company handling the disposal about what to do.

Save these instructions for future reference!

Parts and Features

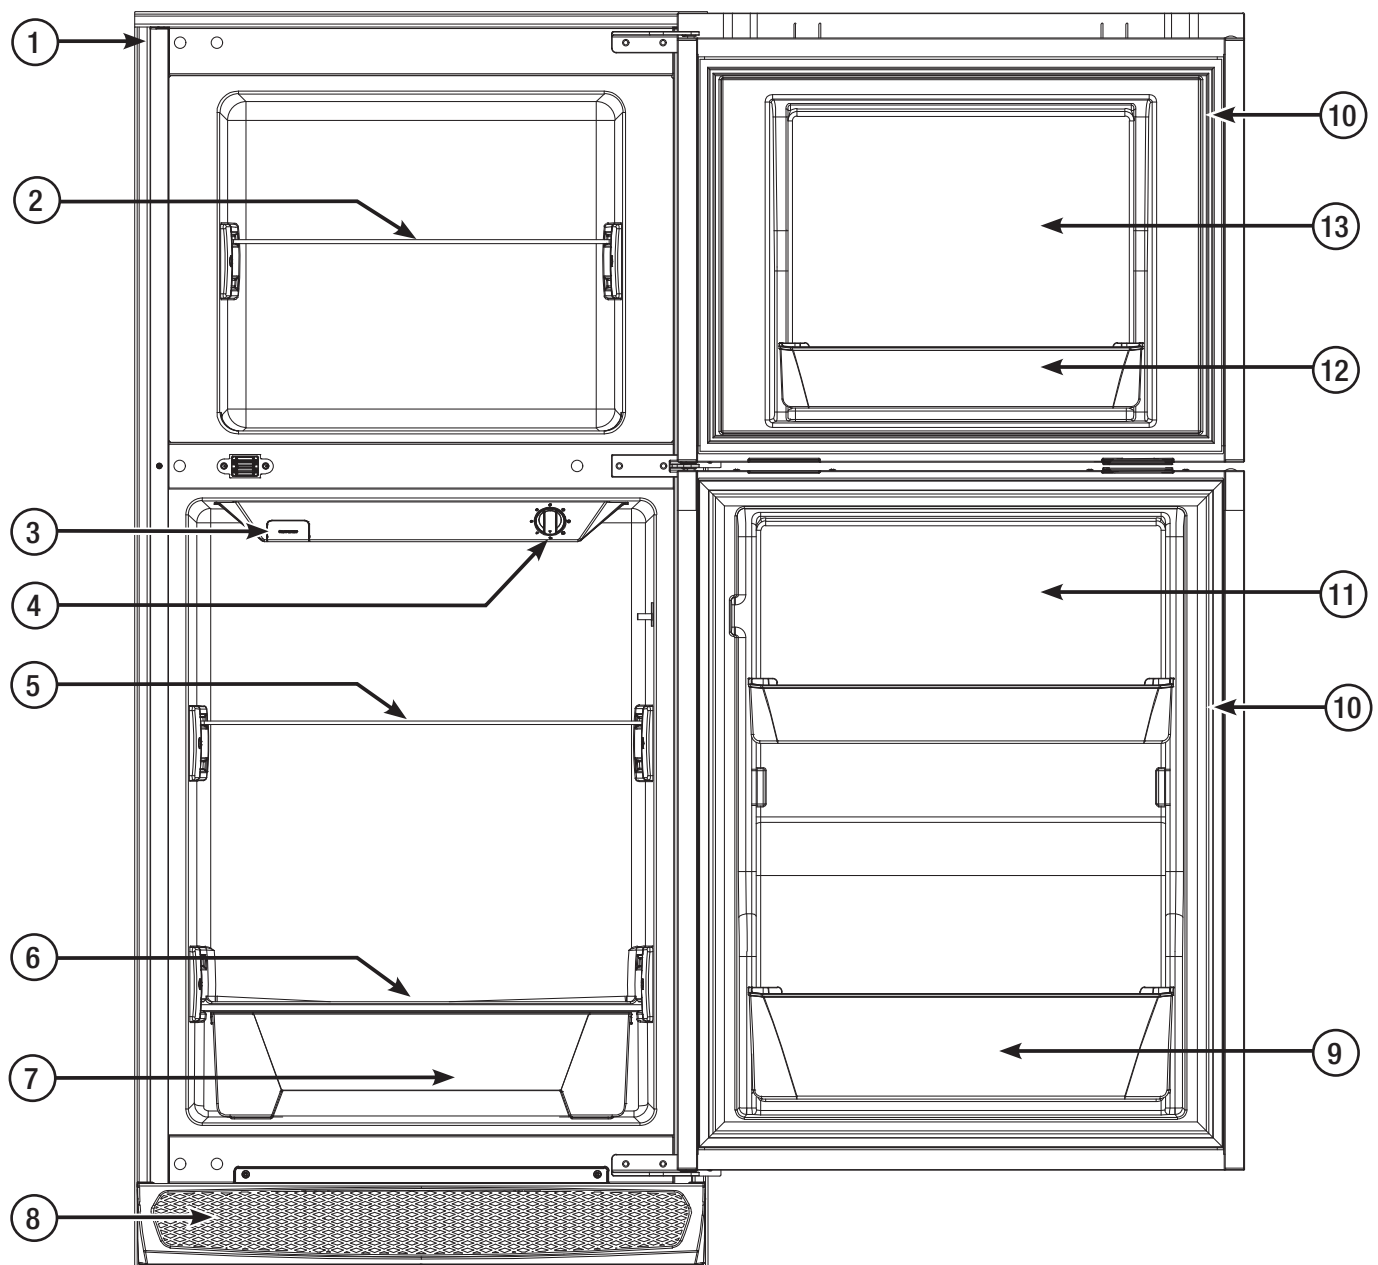

Item	Part Name
①	Trim Kit
②	Freezer Shelf
③	Charcoal filter drawer
④	Temperature Control
⑤	Refrigerator Top Shelf
⑥	Refrigerator Bottom Shelf
⑦	Drawer

Item	Part Name
⑧	Air Vent
⑨	½ Gallon Door Bin
⑩	Gasket
⑪	Refrigerator Door
⑫	Common Door Bin
⑬	Freezer Door

Installation

What's in the Box

- Set the unit upright.
NOTE: The refrigerator may have been laid on its back for transportation and delivery. This is acceptable, but must be stood up-right vertically for at least 4 hours before running the compressor to settle the compressor oil.
- 1. Unpack the unit, discard the packaging material appropriately.
- 2. Confirm everything is in the box. If anything is damaged or missing, contact your dealer.
 - Refrigerator x 1
 - User Manual x 1
 - Warranty Leaflet x 1
 - Refrigerator Door Lock Cover x 1
 - Storage Lock x 1
 - Air Vent (on glass shelf) x 1
 - Door Bin (on glass shelf) x 1

Site Preparation

Removing the Existing Refrigerator (if applicable)

⚠ WARNING

FIRE OR EXPLOSION

Gas leaks may occur in your system and result in a dangerous situation. Always perform a leak test for possible leaks according to the manufacturer's instructions after removing any appliance.


- NEVER leak test when smoking. Never use a flame.
 - Do not use any appliance until connection has been leak tested and does not leak.
- Remove the existing refrigerator (if applicable):
 - Unplug the 120V AC power cord from the receptacle at the rear of the refrigerator enclosure.
 - Disconnect the 12V DC leads from the refrigerator and cap the lead ends.
 - Turn off the LP gas supply to the refrigerator.
 - Disconnect the LP gas line from the refrigerator. Cap the line and verify there are no LP gas leaks.
 - Remove the screws anchoring the refrigerator to the enclosure.
 - Slide the refrigerator out from the enclosure and remove it from the RV.

Select Location

- Your new refrigerator must stand on a flat surface which should support a weight of 330Lbs (150kg). Surface must be level relative to the coach floor plane.
NOTE: A slope that is comfortable to live with, and from normal transportation is acceptable.
- If the appliance is to be placed onto the carpet, support it with a wooden board. Do not place the appliance directly on the carpet, as the heat from the compressor may cause the carpet to fade.
- For best and most efficient operation, the refrigerator should operate within 50°F ~ 126°F (10°C ~ 52°C). If installing near large heat sources, such as furnaces, fireplaces, furnaces, etc. Ensure a thermal barrier, such as wood paneling isolates the refrigerator space as not to hinder performance of the appliance.

Refrigerator Cabinet/Enclosure Preparation

- The built-in refrigerator is designed for 0" clearance to the sides, top. There is an intentional ¼" clearance between the back of the unit and cabinet to allow the service wire to enter the cabinet space. Frame the cabinet to the dimensions indicated below:

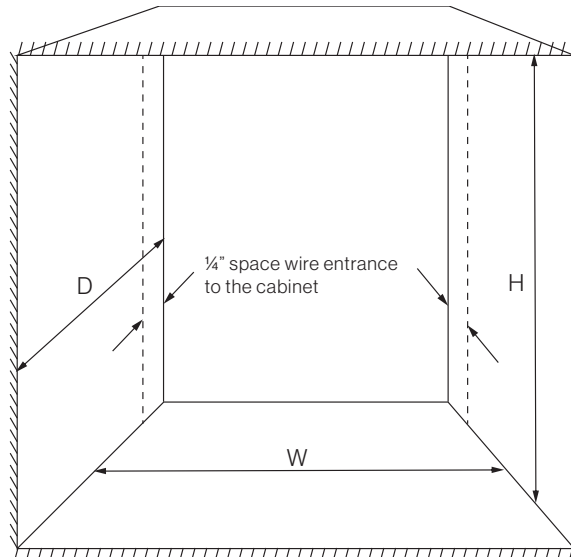

W	H	D
23 ³ / ₈ " – 24"	59 ³ / ₄ " – 60"	Min. 24"

- Squareness of the cabinet/enclosure needs to be within the "W" & "H" dimensions described in two places on either end. The diagonal measurement should be within 3/8" from each other.
- The base support of the cabinet/enclosure must be prepared with a 0 degree slope. If the existing cabinet/enclosure has a base with a slope, shimming is required to level and support the refrigerator.
NOTE: Cabinet/enclosures of absorption style fridges may be built with a 3 degree slope towards the rear. The slope is to allow moisture drainage towards the sidewall vent.
- The cooling system is a forced air closed loop design, with inlet and exhaust on the bottom front of the unit. The enclosure does not need to be ventilated for any purpose. There is also no need for additional insulation on sides and top of the enclosure. The enclosure can be treated as a normal cabinet enclosure of the living space.
- Face surfaces of the cabinet enclosure made from solid MDF should contain a softwood backing as a skeleton for mounting support, and to reduce splitting.
NOTE: A softwood core with MDF laminate, or a soft/hardwood face will be sufficient without a skeleton backing.

Electrical Connection

⚠ WARNING

Any electrical work required to install this appliance should be carried out by a qualified or competent person.

All Girard products referenced in this manual are to be installed in accordance with local and national codes, including the latest editions of the following standards:

USA:

- NFPA 1192
- NFPA 70
- ANSI/RVIA low Voltage

Canada:

- C22.1
- CSA Z240

The appliance is powered by Nominal DC 12V and must be supplied at SAFETY EXTRA-LOW VOLTAGE circuit, a listed power converter that conforms to UL 458 and/or C22.2 No. 107.1 is required.

Circuit Wiring Based on Voltage Drop:

Circuit wiring, gauge (AWG), length, and routing is to be determined by the installer. It must not exceed a voltage drop at the appliance of more than .4V DC.

To Measure: Start the appliance from warm, isolate and measure the voltage difference between each DC12V power source(s) and the appliance connection. If the Voltage drop exceeds .4V DC, the length of wire should be shortened, and/or Wire gauge (AWG) increased.

Circuit Rating: Min 15Amp, Max 40Amp. Do not share circuit with any other utilization equipment.

NOTE: The circuit must be fused appropriately for the wire gauge (AWG) used, within 18" of the DC 12V power source.


Only a single blow fuse or manual resettable breaker is allowed, auto-resetting breakers must not be used. Do not add an additional fuse to the pigtail end of the appliance.

The following is a starting guideline for wire sizing and should be adjusted based on actual voltage drop:


- Max 20ft = 10AWG
- Max 35ft = 8AWG
- Max 55ft = 6AWG

Installation TIPS:

- Voltage drop can be reduced by terminating the -12V (white) lead directly to the vehicle chassis.
- -12V (white) and Ground (Green) leads can be combined at the appliance or individually terminated.
- Remove the strain relief and connector cover.

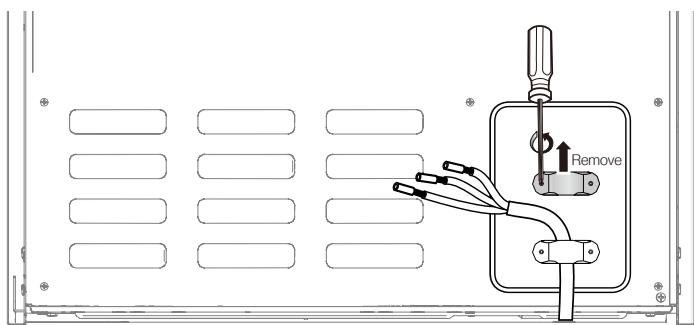

- Connect the supply wire to the appliance pigtail wire and tighten down the strain relief to hold the supply wire.

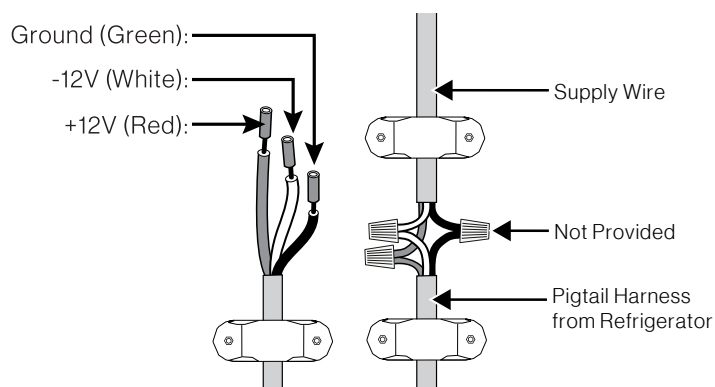

- Enter supply wire into the cabinet space. It is acceptable to enter through the cabinet floor, sidewall, backwall or ceiling. Ensure that the wire enters within the free cabinet space behind the refrigerator.
- Girard recommends dropping the 12V supply wire from the upper ceiling or upper rear wall. Temporarily affix the wires to the upper half of the appliance with tape so that excess wire will droop without risk of rubbing with the appliance chassis and floor during installation.


Drainage Preparation

The cavity condensate drainage is captured in a drain pan integrated with the unit. No external drainage needs to be prepared at this point.

Securing the Refrigerator

1. Center the appliance in the cabinet and adjust to align the trim evenly to cover gaps. If the trim is uneven or protruding from the cabinet face, ensure the cabinet base is level and add shims to align. Do not force the appliance chassis into position as this will tweak it out of shape.
2. Affix the refrigerator to the cabinet using the appropriate screws for the material (Fig 1 & 2). Ensure that the screw affixes into a soft or hardwood substrate for support. Mounting only into MDF material is not sufficient.

NOTE: If securing a refrigerator in a cabinet with a sidewall vent, no additional mounting or sealing is necessary on the rear of the appliance.

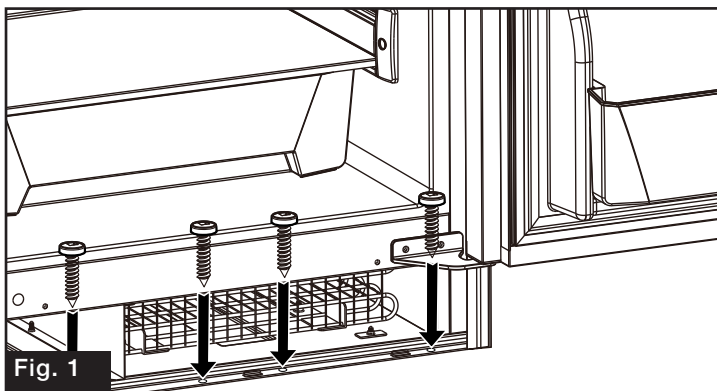

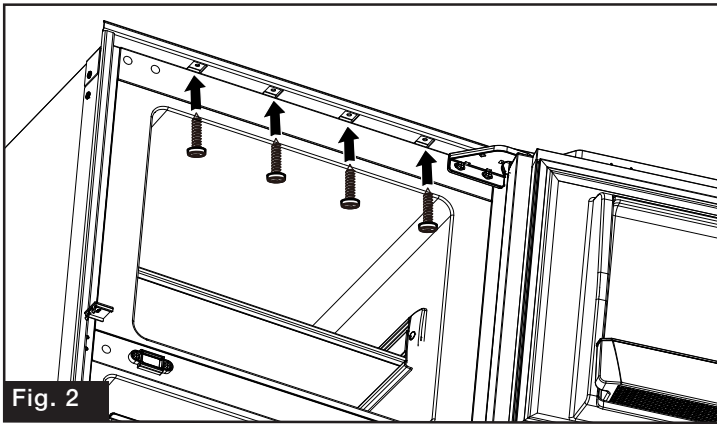


Fig. 2

3. Install the air vent and tighten the screws. (Fig. 3)

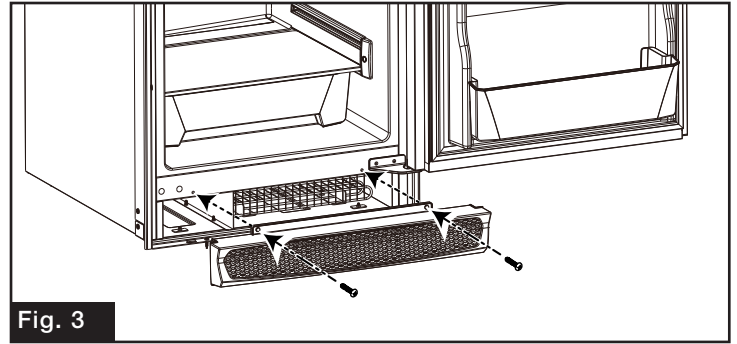


Fig. 3

Operation

The appliance has a low-voltage shut-off function, intended to protect your RV battery's from excessive drain.

NOTE: This function controls compressor operation only, a small electric current is still used for the LED cavity light and low-voltage monitoring system. Once voltage is increased, the system will automatically begin normal operation.

The cavity LED light will also turn off after 3 minutes of the door being open. The 3-minute timer can be reset by closing and re-opening the door.

Temperature Control

⚠ CAUTION


Proper food storage temperatures is important to reduce the risk of foodborne illness bacteria.

The temperature control knob is located in the fresh food compartment of the refrigerator. It is designed to set the temperature from cold to coldest or turn the refrigeration system off.

The recommended operating temperatures for proper food storage is as follows:

Compartment	Temperature
Fridge	36°F~40°F (2°C~4°C)
Freezer	< 0°F (< -18°C)

Turn the thermostat to max when first starting the refrigerator and after putting large quantities of food in. After a few hours turn it down between mid and max position to reach the recommended operating temperature setting. This will ensure the cabinet is thoroughly chilled before food is placed into the refrigerator. Placing large amounts of food may require additional cooling time to bring the temperature down. Several conditions may require adjustment of the temperature dial, use the following chart as a guideline.

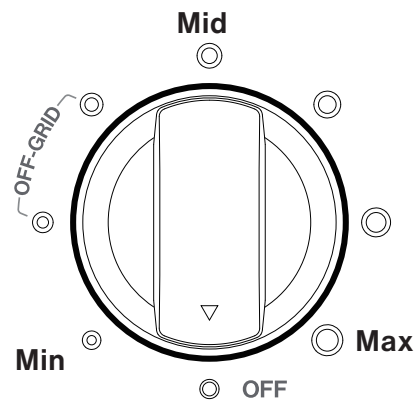


Thermostat Setting	Fridge Temperature	Freezer Temperature
Max	30°F(-1.1°C)	-11.2°F(-24°C)
Between Max and Mid	39.2°F(4°C)	1.4°F(-17°C)
Mid	43.7°F(6.5°C)	5°F(-15°C)
Between Mid and Min	45.5°F(7.5°C)	6.8°F(-14°C)
Min	46.4°F(8°C)	8.6°F(-13°C)

NOTE: The above chart is a guideline defined based on ideal ambient conditions of 77°F (25°C). Several factors can alter the performance, a refrigerator thermometer should be placed to achieve maximum performance.

NOTE: If power is lost during operation, the refrigerator will automatically resume operation after 3 to 5 minutes. The temperature knob does not need to be adjusted or cycled to restart the refrigerator.

Off Grid Usage

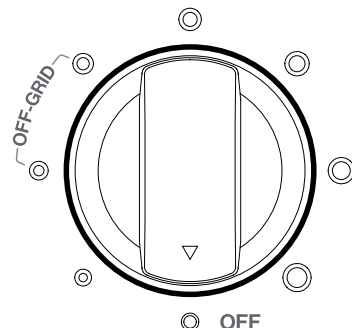

- Where grid power is not available, the “OFF GRID” setting can be used to maximize battery life.
- It is recommended to store meat and dairy products towards the back and middle shelf of your refrigerator. Utilize the other space of the refrigerator for beverages, condiments, and produce.
- If opening the door often, it is advised to turn the dial up to compensate. At lower usage times/overnight the dial can be set back in the “OFF GRID” setting.

To optimize DC12V power source runtime performance:

- Ensure the refrigerator and food stored is down to desired temperature before disconnecting shore power.
- Avoid adding significant amounts of warm items, especially beverages, at one time unless already cooled.
- Adding new items is best in the morning to utilize solar power (if available) during the day to bring the temperature back down without consuming DC12V power source capacity.

Extreme Temperature Usage

The normal operating temperature for this appliance is 50°F (10°C) to 109.4°F (43°C).

The refrigerator can be used in ambient temperatures between 109.4°F (43°C) and 125.6°F (52°C), but expect reduced cooling performance. If the ambient temperature exceeds 125.6°F (52°C), allow the inside of the coach to cool down before turning on. If the ambient temperature is below 50°F (10°C), the dial control may need to be turned towards max to operate the refrigerator. The freezer can be operated with ambient temperatures below 32°F (0°C), but expect the refrigerator to be frozen. Girard recommends increasing the ambient temperatures above 50°F (10°C) for best results.

Adjusting the Shelf (Optional)

⚠ WARNING

To avoid the possibility of child entrapment, do not remove any shelf from the refrigerator. Shelving is intended to deter children from play in the compartment area.

The refrigerator and freezer shelves are fixed in the compartments from the factory. Shelving adjustment is possible with the following Instruction:

NOTE: The instructions will walk through the freezer compartment shelving, but apply to all shelving.

To adjust the freezer compartment shelf position:

1. Open the compartment door. (Fig. 4)

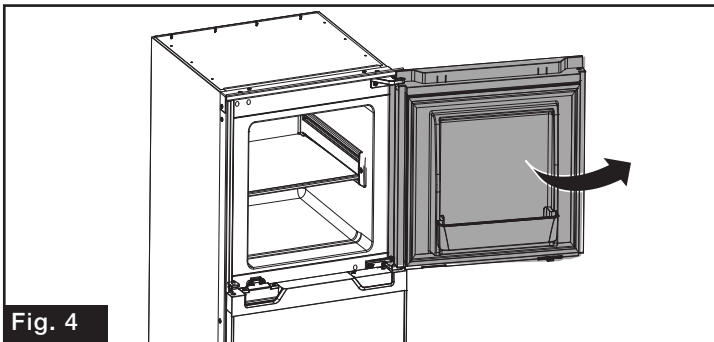


Fig. 4

2. Lever the shelf fixing screw cover using a sharp tool. (Fig. 5)

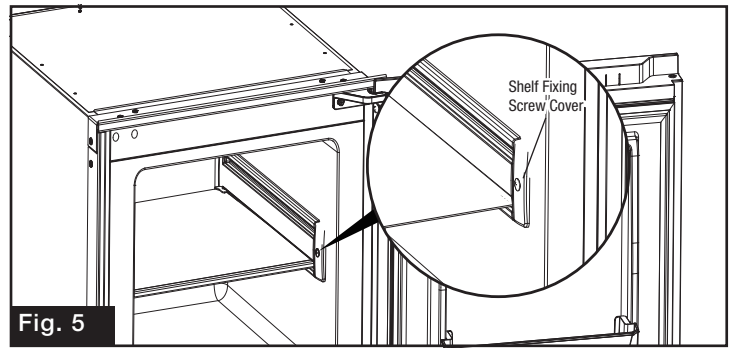


Fig. 5

3. Loosen the fixing screw using a Phillips screwdriver. (Fig. 6)

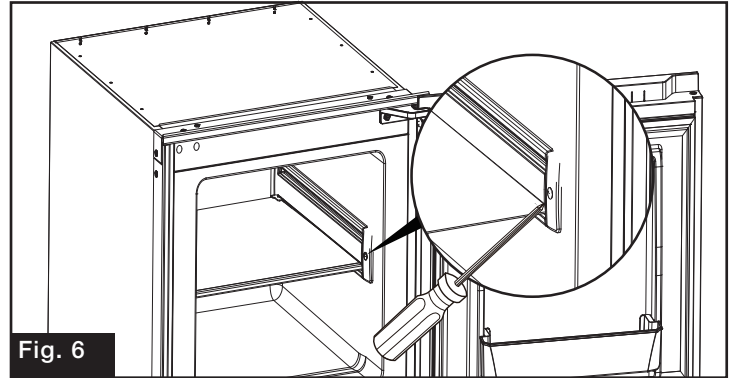


Fig. 6

4. Repeat steps 2 and 3 to loosen the shelf fixing screw on the other side. Pull to remove the shelf out from its original position. (Fig. 7)

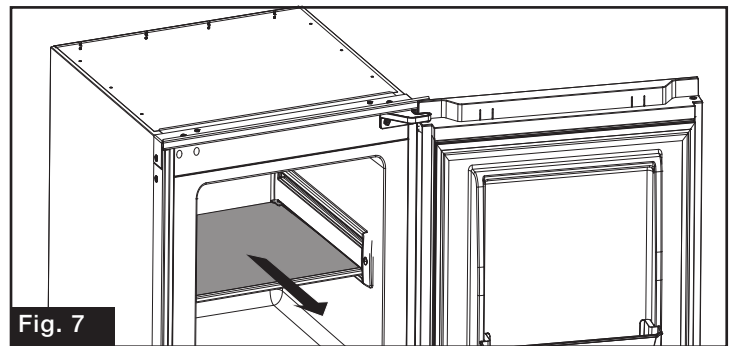


Fig. 7

5. Slide the shelf into an appropriate position and fix with screw. (Fig. 8)

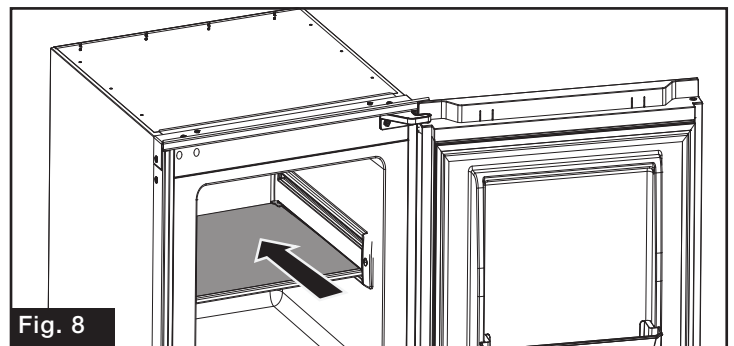


Fig. 8

Repeat the process for shelving in the refrigerator.


Storage Lock

Utilize the Storage Lock, provided in the accessories package with the unit, to prop the door open during extended storage. This will provide air flow throughout to reduce moisture and odors.

NOTE: It is not recommended to leave the Storage Lock in position during traveling, vibration may shake the latch loose.

1. Press the Storage Lock onto the lock bracket directly to install it.
2. Press both sides of the Storage Lock as per the arrows shown in Fig.

9 and pull to remove the Storage Lock.

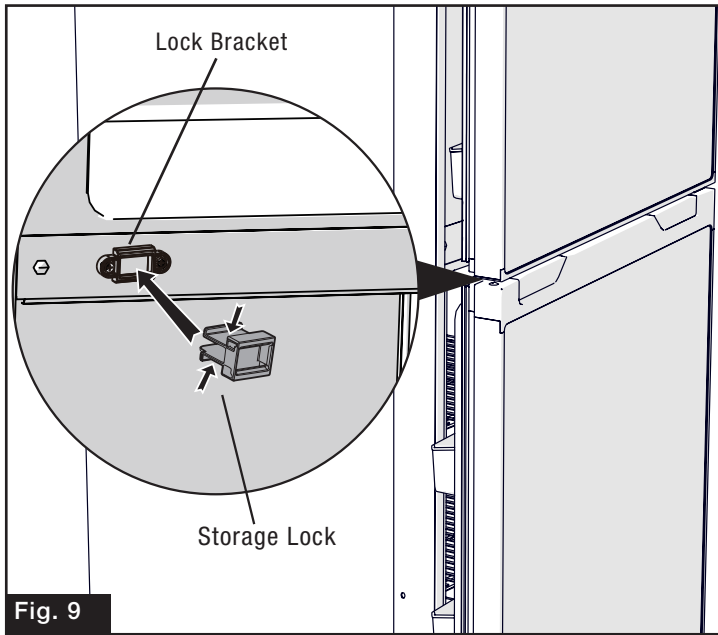

3. Close the doors so that the door latch engages with the storage lock.

Traveling

Your refrigerator is designed to operate during normal transportation of your coach. Please refer to the following guidelines to assist during transportation.

- Ensure your refrigerator has reached desired temperature before traveling to prevent excessive discharge of your battery. Refer to the "off-grid" section of this manual for more information.
- Use caution when storing food in the cavity while traveling. Heavy and hard sided containers (glass/metal) may shift and bounce which

could cause damage to the refrigerator or container. It is advised to secure/protect items well or store in a separate container until reaching your destination.

- Never travel with the Storage lock in place and make certain the doors are locked and secured well before departing.

Energy Saving Tips

- When possible, place your coach or refrigeration in a position to avoid direct sun.
- Cool down the hot food to normal temperature before putting them into the refrigerator.
- Be sure to wrap foods properly, and wipe containers dry before placing them in the refrigerator. This could prevent frost buildup inside the refrigerator.
- Organize and label the food to reduce door openings and long time searches.

Extended Storage

Any time the unit is not to be in-use, it is considered "extended storage". Follow the below steps to properly prepare the unit for storage:

1. Remove all food and turn the dial to off.
2. Let any accumulated ice thaw, and dry out with a towel.
3. Disconnect power(either via main disconnect switch, and turning the converter off or fuse).
4. Remove charcoal filter to preserve charcoal activation, replace with a new filter every season or after three months of active use.
5. Install door Storage Lock.

See the "Storage Lock" section about how to install the Storage Lock.

Cleaning and Maintenance

Refrigerator Interior Cleaning

It is recommended to clean the interior as needed due to spills and other cleaning needs, or each time a new charcoal filter is replaced.

Refrigerator Exterior Cleaning

To maintain good appearance of your refrigerator, it is recommended to clean it regularly.

Mix together one to two tablespoon of baking soda and one quart of water. Wipe down the walls and glass doors of the refrigerator with this solution, then rinse it with water. Wipe the refrigerator dry. Avoid using abrasive cleaners and scrubbing pads or they will damage the refrigerator surfaces.

Battery Maintenance

Your refrigerator has an automatic shut-off switch, should the voltage drop below 9.6V at the terminal connection. This is to help prevent permanent damage to your batteries.


NOTE: Once voltage is re-established the refrigerator will begin

working automatically per the setting of the dial.


When possible maintain the float voltage listed on your battery. Solar is a good way to maintain battery voltage if a local power source is not available.

Replacing the Charcoal Filter


Replace the charcoal filter by pulling it out from the refrigerator as shown in Fig. 10 and replace with a new one.

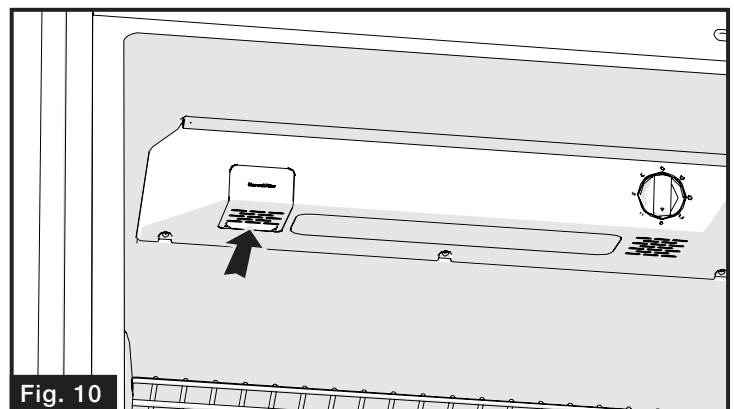

Circuit Diagram

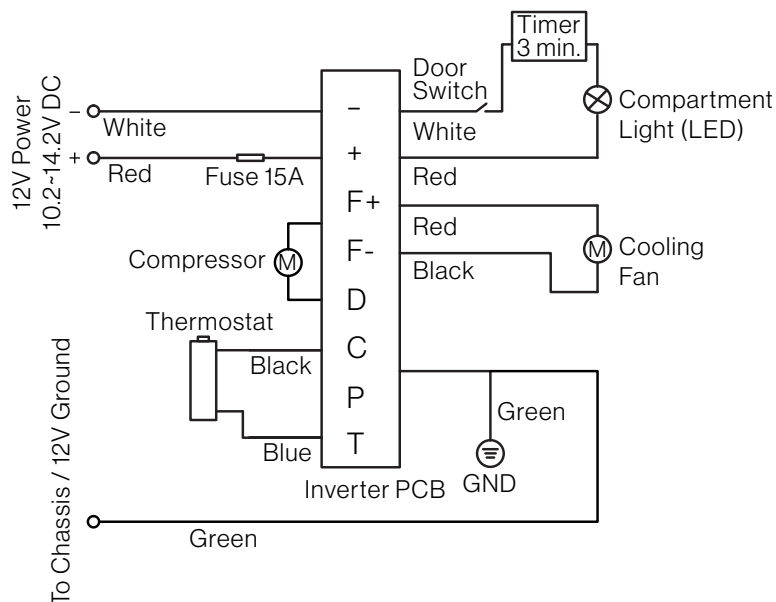

Specifications

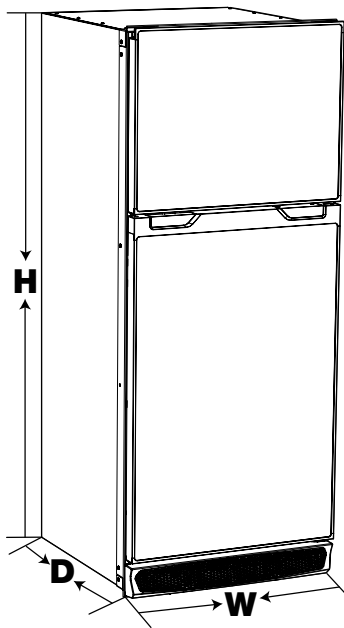

Capacity (cu. ft.)	10 cu. ft.	
Product Dimensions (W x H x D)	24¼ x 60⅞ x 25¾" (616 x 1528 x 655mm)	
Recessed Dimensions (W x H x D)	23¼ x 52⅝ x 23¾" (592 x 1338 x 604mm)	
Net Weight (lbs/kg)	GRF10DBGL GRF10DBGR	139lbs / 63kg
Rated Power Supply Voltage	DC 12V (Min. 9.6V to max. 17V)	
Rated Current	11A @ start-up & maximum cooling setting	
Temperature Range	Refrigerator Compartment: +32°F ~ +50°F (0°C ~ 10°C) Freezer Compartment: -4°F ~ +10.4°F (-20°C ~ -12°C)	
Typical Runtime (Off Grid Usage, powered by 100amp/hr battery)	49 hours @ 77°F (25°C) 31 hours @ 90°F (32.2°C)	

Troubleshooting

A qualified professional is required for any servicing of the compressor drive board and the control board, otherwise it will void the product warranty. If you encounter a problem similar to what is mentioned in the following table, try the suggested solution below to see if you can solve the problem before calling service.

Problem	Solution
Refrigerator does not work	The circuit breaker tripped or fuse blown.
	The unit temperature control dial is set to the "OFF" position.
	Battery voltage might be out of operating range. Check battery voltage for 10.5V under load.
Compressor turns on and off frequently	The room temperature might be elevated.
	The door is open or is frequently opened.
	The temperature control dial is not set correctly.
	The door gasket is torn or not sealing properly.
	Battery voltage might be low, and dropping out of operating range. Check battery voltage for 10.5V under load.
Refrigerator compartments are too warm	Temperature control dial is not set correctly (see the "Temperature Control" section for instructions on setting the temperature).
	The door is open or is frequently opened.
	The door gasket is torn or not sealing properly.
	A large amount of warm or hot food was stored recently. Wait for the refrigerator to reach its selected temperature.
	The refrigerator has recently been disconnected for a period of time.
Vibrating or rattling (slight vibration is normal)	The refrigerator is placed on uneven or weak surface.
	Temperature setting, such as max position, may affect the vibration level. Refer to the "Temperature Control" section.
Moisture or ice inside the refrigerator	The door is open or is frequently opened.
	Temperature control dial is set at too cold of a position
Moisture forms on the outside of refrigerator	This is normal in hot and humid weather.
Bubbling or gurgling sounds (like boiling water)	This is the normal sound of refrigerant (used to cool refrigerator) circulating throughout the system.
Popping or cracking sounds when compressor comes on	This is normal for metal parts to undergo expansion and contraction, like hot water pipes.
The door can't be closed properly	The refrigerator is not on a level surface.
	The door was reversed and not properly installed.
	The gasket is dirty or bent.
	The storage basket, shelves, and bins are not seated properly.



The contents of this manual are proprietary and copyright protected by Lippert. Lippert prohibits the copying or dissemination of portions of this manual unless prior written consent from an authorized Lippert representative has been provided. Any unauthorized use shall void any applicable warranty. The information contained in this manual is subject to change without notice and at the sole discretion of Lippert. Revised editions are available for free download from lippert.com.

Please recycle all obsolete materials.

Les renseignements contenus dans le présent manuel peuvent seulement être distribués sous forme de document complet, à moins de recevoir l'approbation explicite de Lippert Components pour distribuer des parties individuelles. Tous les renseignements contenus dans le présent manuel peuvent être modifiés sans préavis. Les éditions révisées pourront être téléchargées gratuitement sur le site lci1.com. Ces renseignements sont considérés comme étant factuels jusqu'à ce qu'une version révisée les rende désuets.

Veuillez recycler tout le matériel désuet.

For all concerns or questions, please contact Lippert.
Communiquer avec Lippert Components si vous avez des questions ou des préoccupations.

Ph: 432-LIPPERT (432-547-7378) | Web: lippert.com | Email: customerservice@lci1.com



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.