




GIRARD PRODUCTS. LLC.

17" 3-Burner All Glass Gas Range

GRG17ABS [2022071759]

USER MANUAL

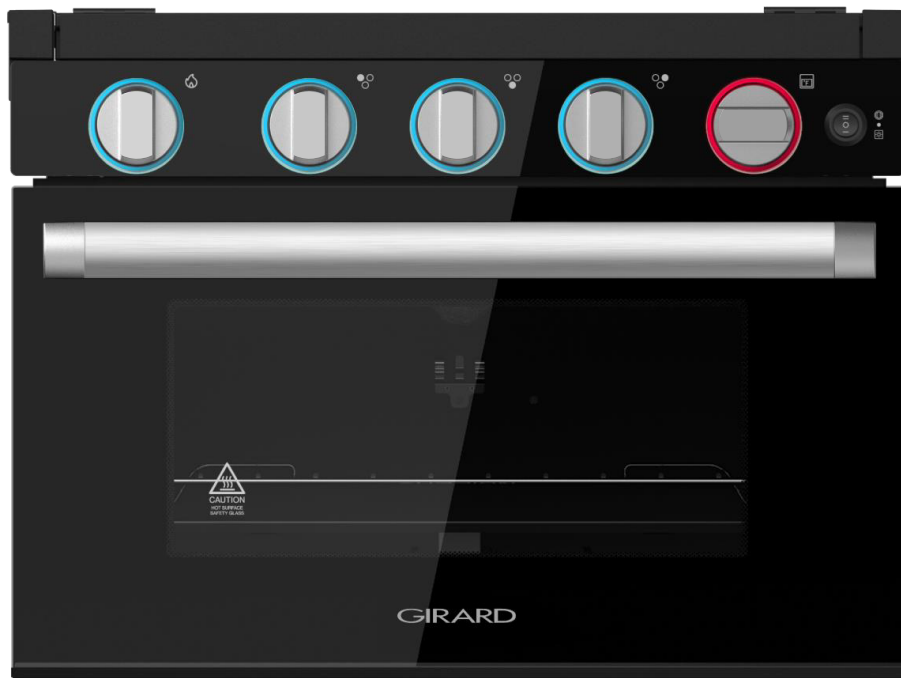

* Picture shown here is for reference only.

Thank you for purchasing this Girard product. Before operating your new appliance, please read these instructions carefully. This user manual contains information for safe use, installation and maintenance of the appliance.

Please keep this user manual in a safe place for future reference. This will ensure safe use and reduce the risk of injury. Be sure to pass on this manual to new owners of this appliance.

The manufacturer does not accept responsibility for any damages due to not observing these instructions.

WARNING: If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or death.

- **Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any appliance.**
- **WHAT TO DO IF YOU SMELL GAS:**
 - **Do not try to light any appliances.**
 - **Do not touch any electrical switches.**
 - **Do not use any phone in your recreational vehicle.**
 - **Clear the recreational vehicle of all occupants.**
 - **Turn off the LP container valve or main container.**
 - **Immediately call your gas supplier for instructions.**
 - **If you cannot reach your gas supplier, call the fire department.**
- **Have the gas system checked and leakage source corrected by a qualified installer, service agency, manufacturer, dealer or the gas supplier.**

Table of Contents

Table of Contents	2
Explanation of Symbols	3
Important Safety Instructions	3
General Safety Warnings	3
Cooktop Safety Warnings	4
Oven Safety Warnings	5
Product Overview	5
Light Control	6
Installation	6
What's in the Box.....	6
Tools Required (Not Provided)	7
Cabinet Cutout Instructions.....	7
Oven Installation	7
Gas Connection.....	8
Electrical Connection	9
Wiring Diagram.....	9
Glass Cover Replacement	9
Leak Check.....	9
Operation	10
Lighting the Cooktop.....	10
Turning Off Cooktop	11
Lighting the Oven.....	11
Turning Off the Oven	11
The Burner Flame	12
Slow Cooking.....	12
Cooking Advice	12
Preheating	12
Baking Cakes.....	12
Cooking Pizza	12
Cooking Fish and Meat.....	13
Cleaning and Maintenance	13
The Oven Door	14
Replacing an Oven Light	15
Replacing the Control Knob LED	15
Storage	16
Troubleshooting	16
Specification	16

Explanation of Symbols

This manual has safety information and instructions to help you eliminate or reduce the risk of accidents and injuries. Always respect all safety warnings identified with these symbols. A signal word will identify safety messages and property damage messages, and will indicate the degree or level of hazard seriousness.

DANGER

Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate personal injury, or property damage.

Important Safety Instructions

Warning and important safety instructions appearing in this guide are not meant to cover all possible conditions and situations that may occur. Common sense, caution, and care must be exercised when installing, maintaining, or operating the appliance.

Always contact the manufacturer about problems or conditions you do not understand.

Read and follow all instructions before using this appliance to prevent the potential risk of fire, electric shock, personal injury or damage to the appliance as a result of improper usage of the appliance. Use appliance only for its intended purpose as described in this guide.

If an external electrical source is utilized, the appliance must be electrically grounded in accordance with state or other codes or, in the absence of such codes, with the National Electrical Code, ANSI/NFPA 70. Do not attempt to adjust, repair, service or replace any part of your appliance unless it is specifically recommended in this guide. All other servicing should be referred to a qualified service technician.

General Safety Warnings

WARNING

- Improper installation, adjustment, service or maintenance can cause injury, property damage or death. Refer to this manual. For assistance or additional information, consult a qualified installer, service agency, manufacturer or the gas supplier.
- Avoid using your appliance or any other appliance if you smell gas. Do not assume that the smell of gas in your RV is normal. Any time you detect the odor of gas, it is to be considered life threatening and corrected immediately. Extinguish any open flames including cigarettes and evacuate all persons from the vehicle. Shut off gas supply at LP gas bottle.
- If the user of this appliance fails to maintain it in the condition in which it was shipped from the factory or if the appliance is not used solely for its intended purpose or if appliance is not maintained in accordance with the instructions in this manual, then the risk of a fire and/or the production of carbon monoxide exists which can cause personal injury, property damage or loss of life.

WARNING

EXPLOSION OR FIRE

- Shut off all gas appliances and pilot lights when refueling gasoline tanks, LP tanks or when vehicle is in motion.
- Girard gas operated cooking appliances are for use with LP gas only, and for installation in recreation vehicles only (e.g. travel trailers, motor homes, tent campers, etc.).

WARNING

CARBON MONOXIDE POISONING

- NEVER use this appliance as a space heater to heat or warm the room. Doing so may result in carbon monoxide poisoning and overheating of the oven.
- A window or air vent should be open slightly while using any cooking appliance. Gas flames consume oxygen which must be replaced to assure proper combustion.
- DO NOT store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- DO NOT operate the appliance if it is damaged or not working properly.
- Never attempt to repair the appliance yourself. Any repairs to or installation of this appliance must be performed by a qualified installer, service agency or the gas supplier and in accordance with the instructions in this manual. Service of your appliance by a non-approved service person or agency could result in failure of the integrity of the appliance and could lead to property damage, serious injury or loss of life.
- Have your dealer show you where the main gas shut-off valve is located and how to shut it off in an emergency.
- Use your appliance only for its intended use.
- Children should be taught that the appliance is not a toy. They should not be allowed to play with the controls or any other parts of the appliance. Do not allow anyone to stand or sit on top of the appliance. Not only can this damage the appliance, but personal injuries could result.
- Do not store items of interest to children in cabinets above or near the appliance. Children climbing on the appliance to reach items could be seriously injured.
- All control knobs must be turned off when not in use. Fire and/or burning hazard may occur if a burner is accidentally left on.

- If any burner should extinguish (after initially lighting or due to accidental blow-out), turn all burner knobs off and wait five (5) minutes before again attempting to light the burner.
- DO NOT store flammable materials on, in, or near the appliance. Any fumes can create an explosion and/or fire hazard.
- Do not wear loose fitting clothing or long-hanging sleeved clothing while using the appliance. If they contact the open flame of the burner, they could ignite and cause severe burns.
- Use only dry potholders to remove hot utensils. Using damp potholders on hot surfaces could result in burns to hands. Do not use a towel or bulky cloth for a pot holder. The cloth could contact open flame and catch fire.
- Never heat an unopened container. Pressure build-up within the container can cause it to explode.
- Do not use water on grease fires. Never pick-up a flaming pan. Smother a flaming pan with a lid or flat pan. Flaming grease outside the pan can be extinguished with baking soda or a multipurpose dry chemical fire extinguisher.
- This appliance is intended to be built-in to a cabinet structure only and is not intended for attachment to the building structure.
- The appliance must be isolated from the gas supply piping system by closing its individual manual shutoff valve during any pressure testing of the gas supply piping system at test pressures equal to or less than ½ psi (3.5 kPa).

Cooktop Safety Warnings

- Do not place pans onto glass surface. Raise cover into full open position before operating burners. Let cooktop cool before closing glass cover.
- If the cooktop is near a window, proper precautions should be taken to prevent curtains from blowing over burners creating a fire hazard.
- Keep the area around the cooktop clean and clear of any combustible materials, gasoline or other flammable vapors and liquids. Not doing so can cause an explosion and/or fire.
- Do not leave children alone or unsupervised in area where cooktop is being used. The top burners, burner grates and other areas near the burners become hot enough to cause severe burns.
- Keep the cooktop clean. The build-up of grease and food boil-over and/or spillage can create a fire hazard.
- Turn pan handles inward or toward back of cooktop and out of the way of people walking past cooktop and/or out of the reach of children. Do not turn handles to where they are over the burners.
- Never leave top burner(s) unattended.
 - For such reasons as down drafts that could be created by opening and closing of cabinet doors or doors within the RV or by positive or negative air pressures affecting burners due to improper installation. (See Installation section) The burner could extinguish resulting in gas escaping into the RV. Remember, gas flow to each burner is controlled manually, you must turn gas flow “ON” and “OFF”.
 - A boil over could occur and the spill could ignite.
- Flame size
 - Never extend the flame beyond the outer edge of the utensil. A higher flame simply wastes heat and energy.
 - Correct flame size is determined by utensil size and material, what you are cooking and whether or not you are cooking with liquid.




- To prevent damage to the cooktop, top burners, or top grate, never operate a top burner without a pan in place. The top burners, especially the high input burner, should not be operated on high for an extended period of time. The high setting should be used only to start the food cooking or to bring liquids to a boil, then reduce the flame to a lower setting to continue cooking. Use the low flame setting to keep food warm. Remember, a gas range heats quicker than an electric range, therefore, experiment with various settings until you feel comfortable cooking with gas.
- Never use cookware which extends beyond one inch of the grate (maximum pan size 10" diameter). Never place cooking utensil on grate to where it rests over two operating top burners. This will cause excessive heat buildup, which could result in damage to the grate, top burner(s) and cooktop.
- Verify sufficient gas supply before attempting to light any top burner. Air in the gas supply line will significantly delay burner ignition, and a burner may light unexpectedly as the air in the line clears out and is replaced by LP gas, this unexpected ignition may burn you. Air may be introduced into the supply line when the vehicle gas bottle is replaced, during servicing of other gas appliances, etc.
- DO NOT touch top burners, burner grates, or other areas near top burners during and after use. Do not let clothing or other flammable materials to contact top burners or areas near top burners until they have had sufficient time to cool.
- Make sure the utensils you use are large enough to contain food and avoid boil overs and spillovers. Heavy splattering or spillovers left on the cooktop can ignite and burn you.
- Be sure that glass cooking utensils are safe for use on the cooktop. Only certain kinds of glass utensils are suitable for surface or top burner use without breaking due to the sudden changes in temperature.
- Grease is flammable. Never allow grease to collect around top burners or on cooktop surface. Wipe spillovers immediately.
- Use care when lighting a top burner by hand. If the burner lights unexpectedly, or your hand is close to the burner, you may be burned.
- DO NOT drop pans on the porcelain surface. Cracks or chips in the porcelain surface may result.
- DO NOT leave an empty utensil, or one which has boiled dry, on a hot top burner. The utensil could overheat and damage the utensil or the cooking appliance.

Oven Safety Warnings


- DO NOT touch any inner surfaces of the oven or oven door, or the wire rack inside, or any utensils inside the oven during and after use until these areas have had sufficient time to cool. You could be burned or injured. During and after use, do not let clothing or other flammable materials contact these areas until they have had sufficient time to cool.
- DO NOT touch the outer surface of the oven door or the oven vent while the oven is in use. These areas may become hot enough to cause burns. During and after use, do not let clothing or other flammable materials contact these areas until they have had sufficient time to cool.
- DO NOT cover the ventilation holes in the Flame Spreader Rack (shelf above oven burner). The air circulation inside the oven will be interrupted and cooking times will vary from normal, food may be burned or undercooked.
- DO NOT use oven as a storage area.
- If oven pilot should extinguish after initial lighting or due to accidental blowout, turn oven knob off and wait five (5) minutes before again attempting to light oven.
- Always place oven racks in desired location while oven is cool. If rack must be moved while oven is hot, do not let potholder contact hot heating element in oven.
- Use care when opening the oven door, let hot air or steam escape before removing or replacing food.
- NEVER cover any slots, holes or passages in the oven bottom or cover an entire rack with materials such as aluminum foil. Doing so

blocks airflow through the oven and may cause carbon monoxide poisoning. Aluminum foil linings may also trap heat, causing a fire hazard.

Oven Vent

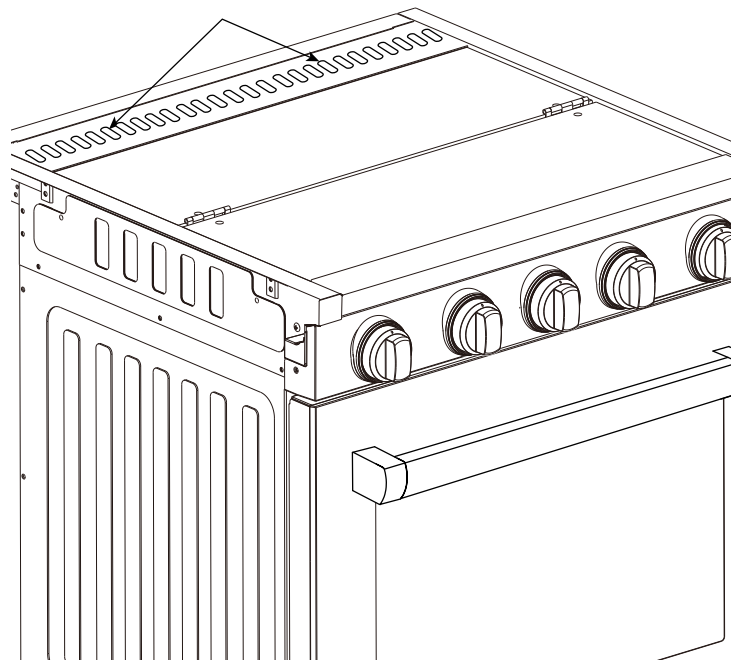


Product Overview

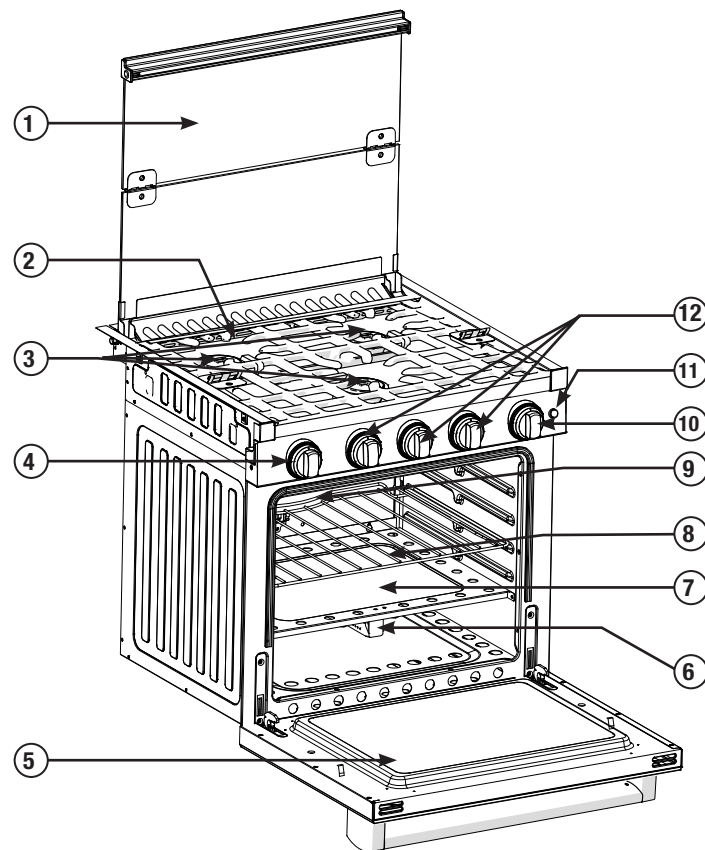

Item	Description
①	Glass Cover
②	Grate
③	Cooktop Burner
④	Ignition Knob
⑤	Oven Door
⑥	Oven Burner
⑦	Flame Spreader Rack
⑧	Cooking Rack
⑨	Oven Light
⑩	Oven Control Knob
⑪	Light Switch
⑫	Top Burner Control Knobs

Light Control

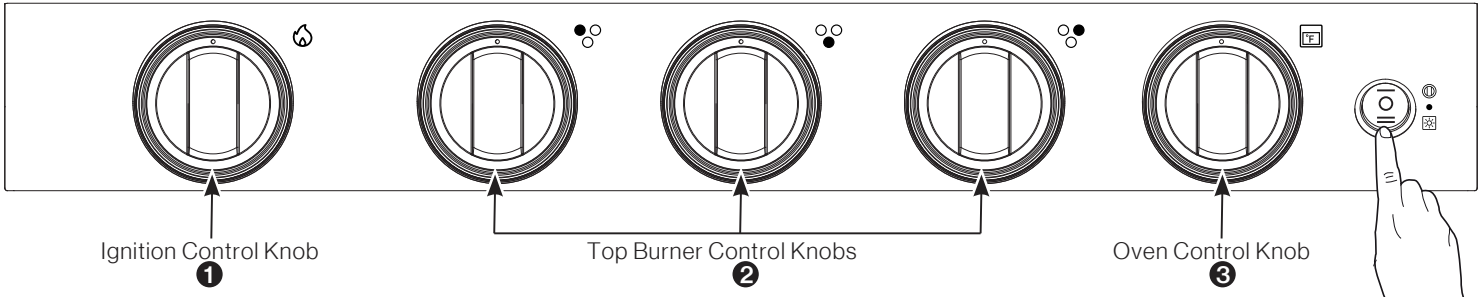

Position	Meaning
— (⊙)	All control knob lights are on: - Knob ❶ will only display Blue color when switch activated. - BLUE light is a decoration light while all control knobs are in the OFF position.
•	— All control knob lights and oven light are off.
= (⊗)	All control knob lights and oven light are on: - Knob ❶ will only display Blue color when switch activated. - BLUE light is a decoration light while all control knobs are in the OFF position. - Oven lamp is on.

NOTE: RED light is treated as an operation indicator light. When a top burner control ❷ or oven knob ❸ is turned on, the KNOB LEDS will turn RED.

Installation

WARNING

FIRE, EXPLOSION, BURN INJURY CARBON MONOXIDE POISONING

- The cooking appliance must be completely separated and/or sealed from other air moving or air consuming devices such as, but not limited to furnaces, microwave ovens clothes dryers, cooling fans and doors or drawers in common cabinets. Failure to do so will affect the appliance(s) combustion air supply by creating either a negative or positive draft.
- NEGATIVE DRAFT caused by air moving appliances may draw the top burner flame down into or toward the cooktop resulting in cooktop damage, burn hazard, explosion possibility and/or carbon monoxide build up.
- POSITIVE DRAFT may blow out the top burner flame during use resulting in an explosion and/or fire hazard and/or injury to the occupants of the vehicle.
- DO NOT operate the appliance in excessive windy conditions as this may cause a negative or positive draft.

WARNING

Installation of this appliance must be made in accordance with the written instructions provided in this manual. No agent, representative or employee of Girard or other persons has the authority to change, modify or waive any provision of the instructions contained in this manual.

The installation must conform with local codes or in the absence of such codes, refer to the latest edition of:

In the U.S.A.:

- a. Standard for Recreational Vehicles NFPA 1192
- b. National Fuel Gas Code ANSI Z223.1/NFPA 54

In Canada, the installation must conform with:

- a. Standard CAN/CSA Z-240.4.2-08, Installation Requirements for

- Propane Appliances and Equipment in Recreational Vehicles.
- b. Any applicable local codes and regulations

What's in the Box

Make sure you have all the following items included in the packaging. If any item is damaged or missing, contact your dealer.

- Range Oven x 1
- Cooktop Grate x 1
- Cooking Rack x 1
- User Manual x 1
- Warranty Manual x 1

Tools Required (Not Provided)

Part	Description
	Safety Goggles
	Gloves
	Adjustable Wrench (Qty 2)
	Tape Measure
	Pencil
	Phillips Screwdriver
	Cutting Knife
	Level
	#8-15 x ¾" wood type screw (Qty 4)

Cabinet Cutout Instructions

For proper operation of your cooking appliance, the cabinets must be properly constructed and squared with respect to the counter top and the cabinet face.


For proper operation of these units, the cabinet must be level and include a separator/support shelf under the range.

NOTES: When planning the location, consider curtains or other combustible materials installed around the appliance so as not to create a fire hazard.

The minimum horizontal distance(s) from sides and back of appliance to adjacent vertical combustible walls extending above the top panel:

Item	Dimension
A	7¼" Min. (184mm Min.)
B	8" Min. (203mm Min.)

NOTE: These distances shall be from the burner center of the appliance.

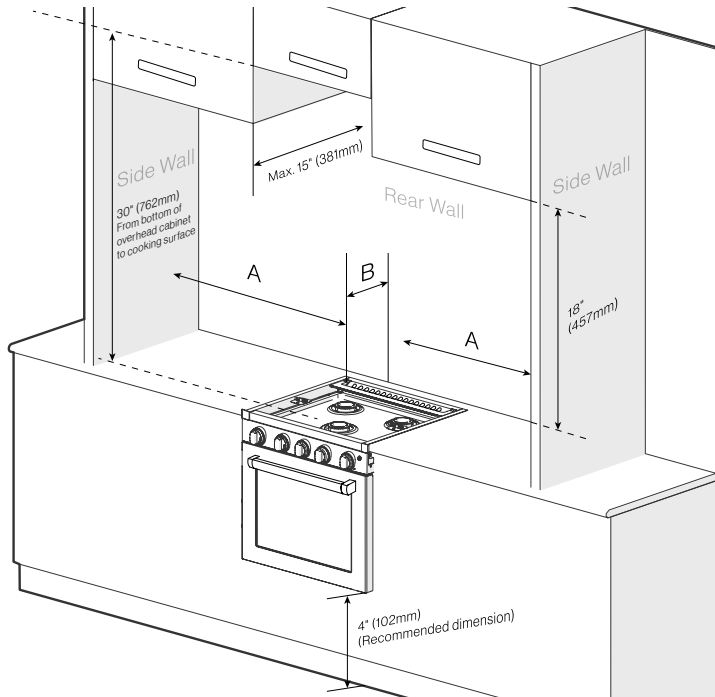


⚠ WARNING

The minimum vertical distance to combustible material above the range cooking top is 30" (762mm), provided the overhead construction does not extend 15" (381 mm) from the rear wall. The recommended distance between the floor and the bottom of the cutout opening is 4" (102mm).

NOTE: If installing a range hood or microwave hood combination above the cooking surface, follow the range hood or microwave hood combination installation instructions for dimensional clearances above the cooktop surface.

Cabinet and counter cutout dimensions:


Item	Dimension
A	17¾" (451mm)
B	20⅛" (511mm)
C	16⅛" (410mm)
D	15/16" (23mm) max.
E	1½" (38mm) max.
F	45/16" (110mm)
G	39/16" (90mm)

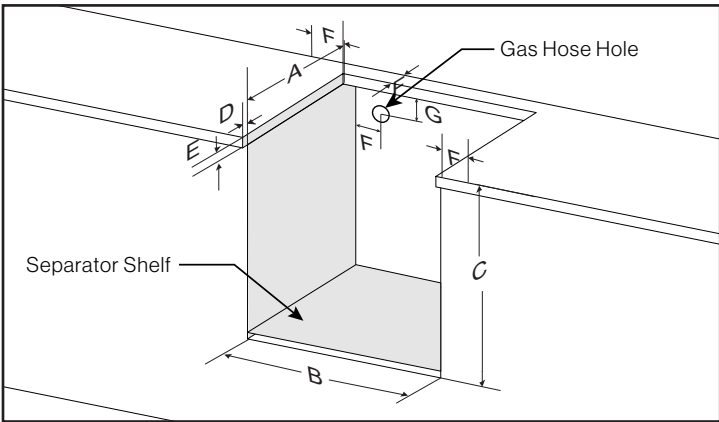


Oven Installation

When the cabinet has been prepared according to the dimensions given and the gas line is in place.


1. Take your range oven out of the carton and place on a flat surface. Remove the packing materials.
2. Hold the baffle and pull upward to release the top glass cover assembly from the oven. (Fig. 1)

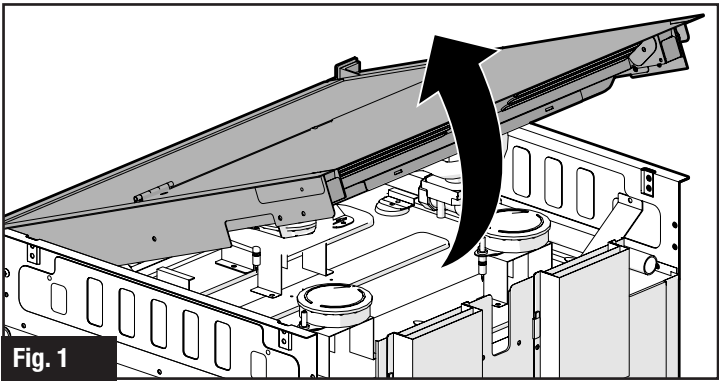


3. Push towards the rear of the oven and lift to remove the top glass cover from the oven. (Fig. 2)

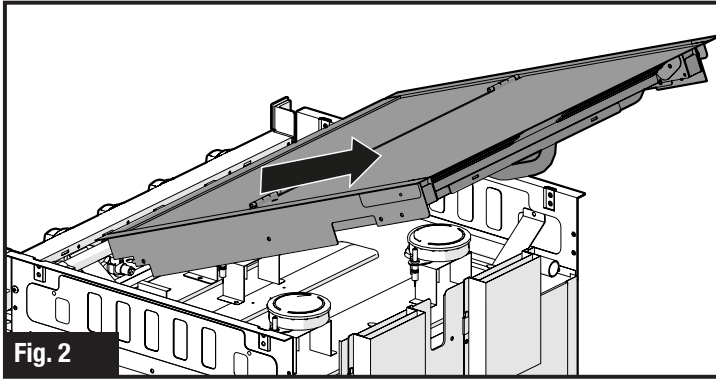

4. Slide the range oven into the cabinet opening. Verify that the oven is level from side to side and front to rear. (Fig. 3)

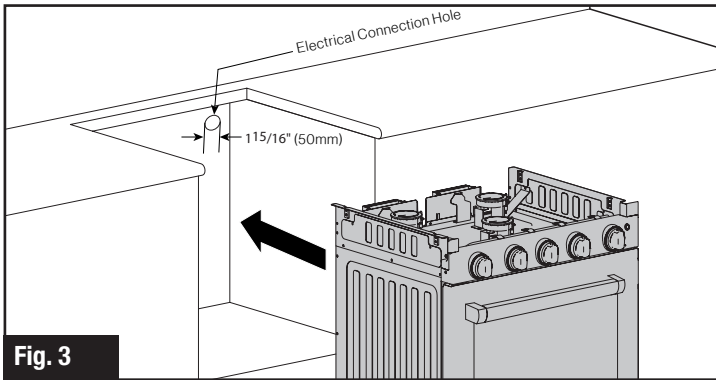

5. Fix the range oven in the cabinet opening on both left and right using four screws (Recommend #8-15 x 3/4" wood type, not provided) on both left and right (2 screws each side). (Fig. 4)

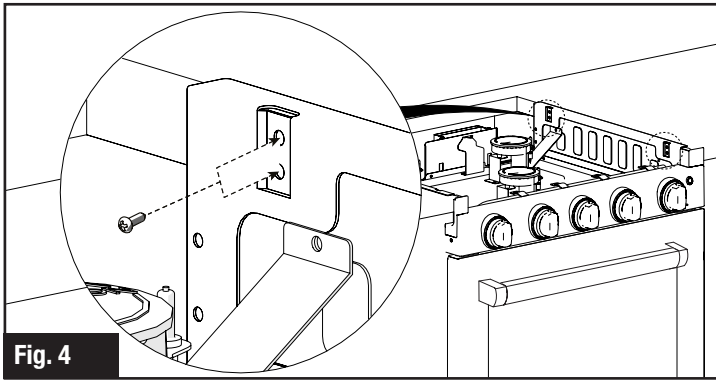


Gas Connection

⚠ WARNING

Gas supply pipe must be installed with clearance from knives contacting or cutting gas lines.


Connect a propane supply line with a 3/8" Flare Female connection to the cooktop in the upper left rear corner of the cabinet. (Fig. 5) Tighten the gas line joint to the cooktop using 2 wrenches.

IMPORTANT: Leave adequate space around the gas supply pipe in case of bend or damage during installation. Make sure the gas supply pipe cannot contact any moving parts after installed. Be sure all openings in the cabinets around the gas line are sealed at time of installation.

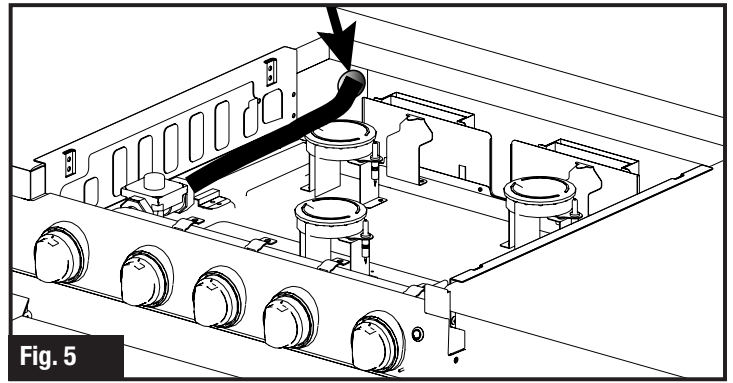


Pressure Check

1. Turn LP gas off to the appliance.
2. Remove the Screw with the sealing gasket from the pressure test port on the range. (Fig. 6)

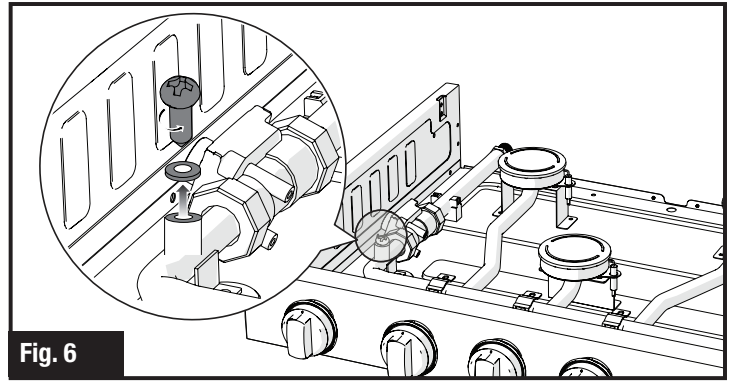

3. Using the rubber tube from the pressure check measuring device, slide the rubber tube down over the gas pressure test port. The rubber tube should seal around the pressure test port on the range.
4. Turn on the LP gas to the appliance.
5. The pressure gauge tester should measure between 10" WC to 13.8" WC. (Fig. 7)

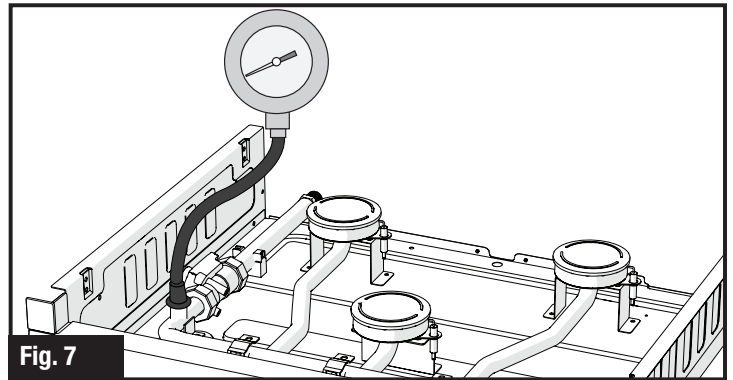

6. Turn off the LP gas to the appliance.
7. Remove the rubber tube of the pressure check measuring device.
8. Replace the screw with the gasket from step 2. Before replacing the screw, inspect the rubber gasket seal for any signs of damage. Replace seal if damaged.
9. Tighten the screw to 1.3 Nm to 1.7 Nm.

NOTE: Ensure the product is gas leak checked after the pressure check test is completed by also testing the pressure check port screw. If any leaks are detected around the pressure check port screw and gasket, a new one can be purchased. Call your service center for a replacement.

Electrical Connection

⚠ CAUTION

PRODUCT DAMAGE HAZARD

- Connect to 12V DC service only.
- Connect only to protected circuit fused for not more than 15 Amps.
- DO NOT hi-pot range unless electronic ignition system has been disconnected.

Connect a positive 12V power supply wire to the range oven red 12V light wire and a negative 12V power supply wire to the range oven black 12V light wire. (Fig. 8)

NOTE: Ensure to connect the wires with the correct polarity. Red is “+” and Black is “-”.


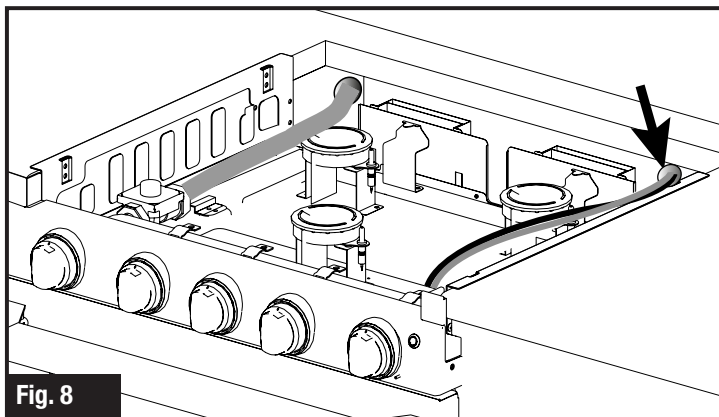


Fig. 8

Wiring Diagram

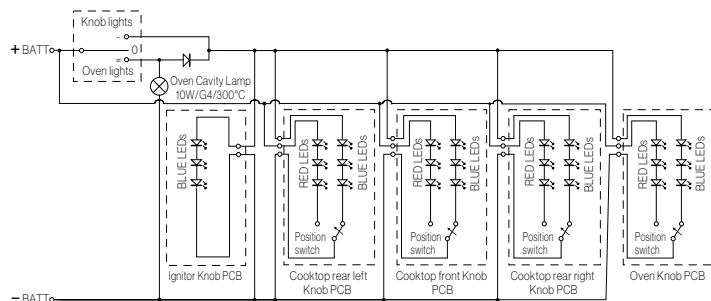

Glass Cover Replacement

1. Align the top glass cover assembly tabs x 2 with the slots on the back side of the console and place it into the top of the range cooktop. (Fig. 9)

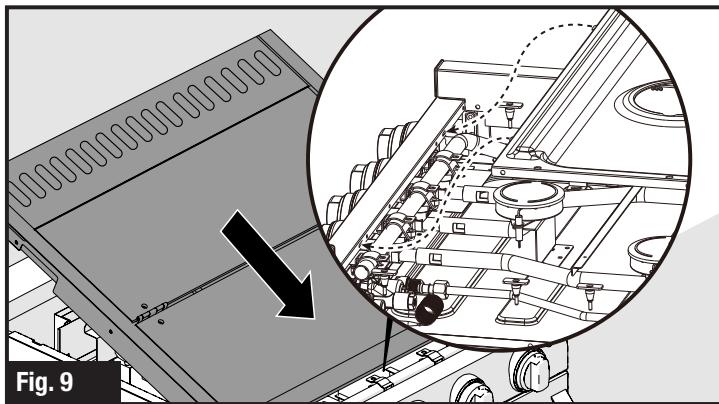


Fig. 9

2. Press the backside of the top glass cover and you will hear a click noise. The top glass cover is now locked into place. (Fig. 10 and Fig. 11)

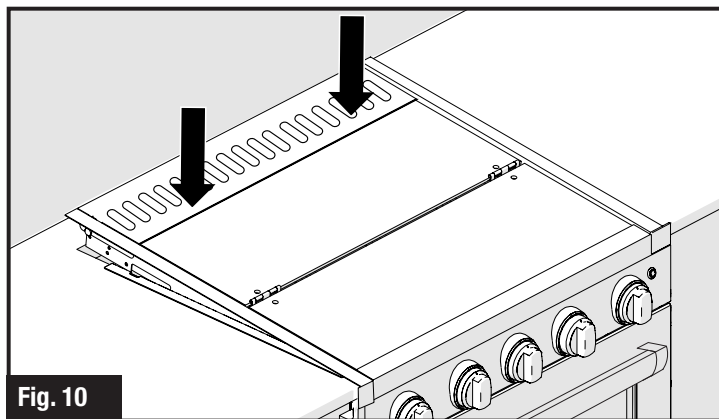


Fig. 10

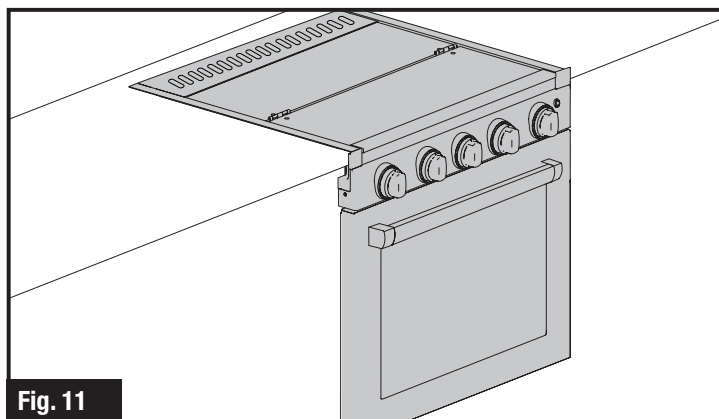


Fig. 11

Leak Check

Leak testing of the appliance shall be conducted according to the manufacturer's instructions.

⚠ WARNING

FIRE OR EXPLOSION

- Extinguish all open flames.
- NEVER leak test when smoking. Never use a flame.
- Do not use the appliance until connection has been leak tested and does not leak.
- Pressure/Leak test using 11-13.8 WC pressure.

⚠ WARNING

- Gas leaks may occur in your system and result in a dangerous situation. Always perform a leak test for possible leaks according to the manufacturer's instructions after installation and before any operation.
- Gas leaks may not be detected by smell alone. Gas suppliers recommend you purchase and install a UL approved gas detector.

1. Make sure all control knobs are in the **OFF** position.
2. Apply a gas leak detection liquid to the connections. Any gas leaks will be indicated by bubbles.
3. If a gas leak is detected, tighten the loose joint, or replace the faulty part with a replacement part recommended by Girard authorized retailer.

Operation

⚠ WARNING

Keep your arms and face away from being directly above the cooking area while in operating the appliance.

⚠ DANGER

- The top glass cover must be kept open when lighting and using the cooktop.
- Do not attempt to light more than one burner at a time.

Lighting the Cooktop

Before lighting, check and make sure all the control knobs are in the **OFF** position. Make sure the main gas tank valve is opened.

Standard Ignition

1. Lift at the front to open the cooktop glass cover and fold back until the glass is not covering any of the cooking surface. The top glass cover must be kept open when lighting and using the cooktop. (Fig. 12)

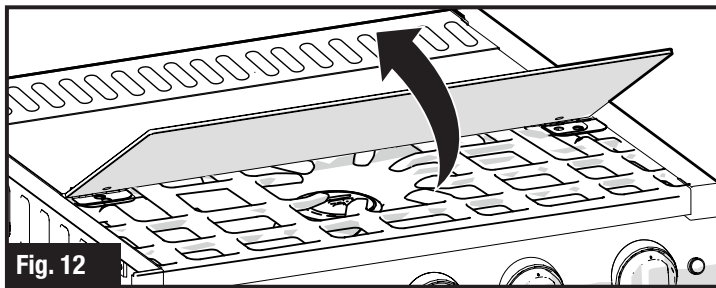


Fig. 12

2. Push and turn the appropriate burner control knob counterclockwise to the 🔥 position. (Fig. 13)

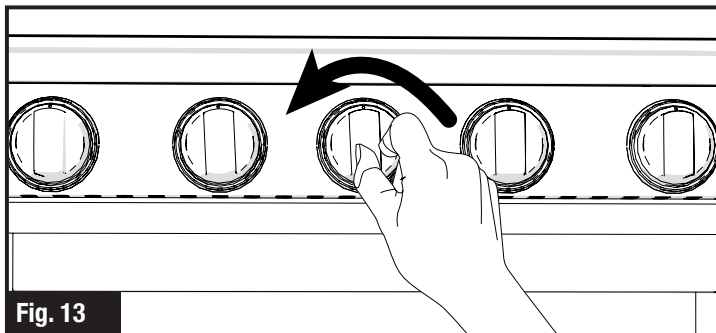


Fig. 13

3. Turn the ignition knob clockwise repeatedly until the burner is lit. (Fig. 14)

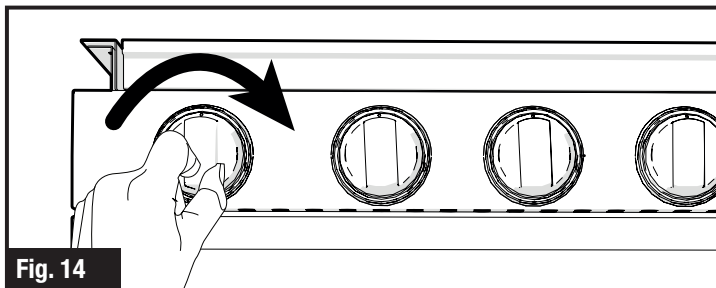


Fig. 14

4. Rotate the burner control knob to adjust the flame to desired level.
5. Repeat steps 2 and 5 to light the other burner(s) as required.

If the burner does not ignite

In the event of failure to light the burner within 5 seconds, immediately turn the control knob clockwise to the **OFF** position. Wait at least 5 minutes and repeat the igniting procedure. If ignition still not occur, use a gas lighter or a match to light the burner. Refer to the 'Manual Ignition' section.

Manual Ignition

⚠ WARNING

Use care when lighting the burners by hand. If a burner lights unexpectedly, or your hand is too close to the burner, you could be burned.

In the event of failure to ignite the burner in standard ignition, you may light the burner manually by following the steps below:

1. Turn the appropriate burner control knob counterclockwise to the 🔧 position. (Fig. 15)

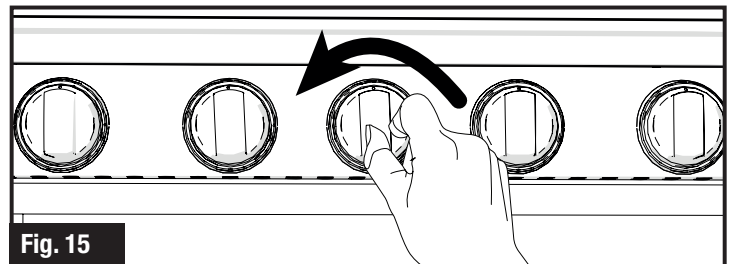


Fig. 15

2. Immediately strike and place a burning long wooden match or a gas lighter near the burner to light. (Fig. 16)

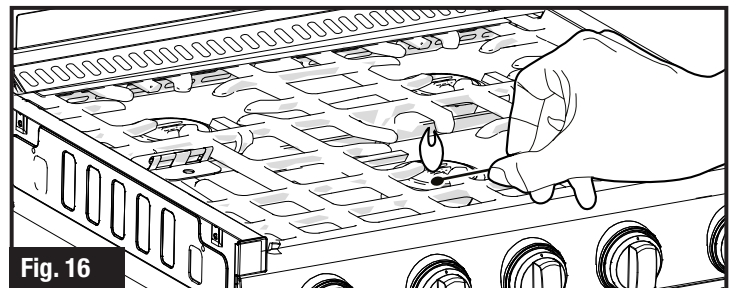


Fig. 16

3. Repeat steps 1 to 2 to light the other burner(s) as required
4. Rotate the burner control knob to adjust the flame to desired level. (Fig. 17)

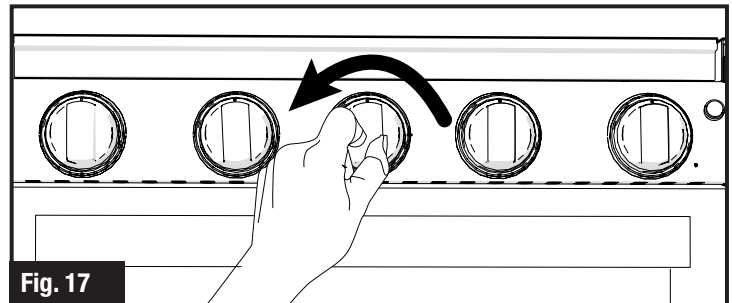


Fig. 17

If the Flame Goes Out

WARNING

Risk of Fire!

If the flame goes out accidentally, gas will escape. Never leave the gas burner unattended during operation. Ensure that there are no drafts that can affect the burner flame.

Immediately turn the control knob to **OFF** position. Wait at least 5 minutes and light the burner again.

Turning Off Cooktop

WARNING

Always turn off the gas tank valve when refueling or traveling.

To turn the cooktop burners off, rotate the control knobs clockwise to the **OFF** position. Do not close the glass top until the cooktop has cooled.

Lighting the Oven

NOTE: Before the oven burner will operate, the oven pilot must be lit.

Before lighting, check and make sure all the control knobs are in the **OFF** position. Make sure the main gas tank valve is opened.

1. Pull the oven handle to open the door. If you smell gas **STOP!** Refer to the installation section and follow the instructions as listed for the appliance. (Fig. 18)

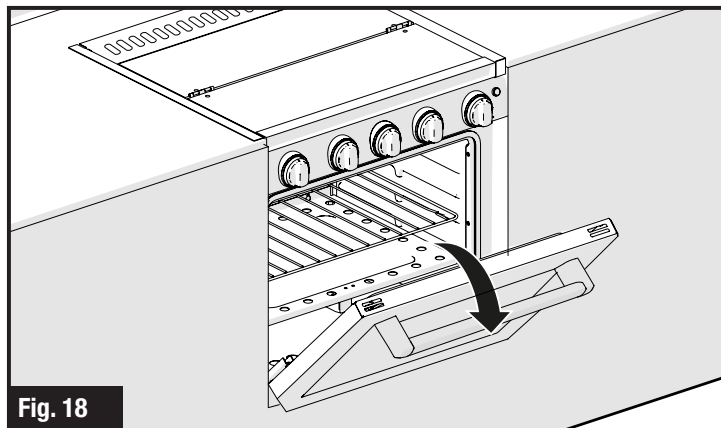


Fig. 18

2. Push and turn the oven control knob counterclockwise to the  position. (Fig. 19)

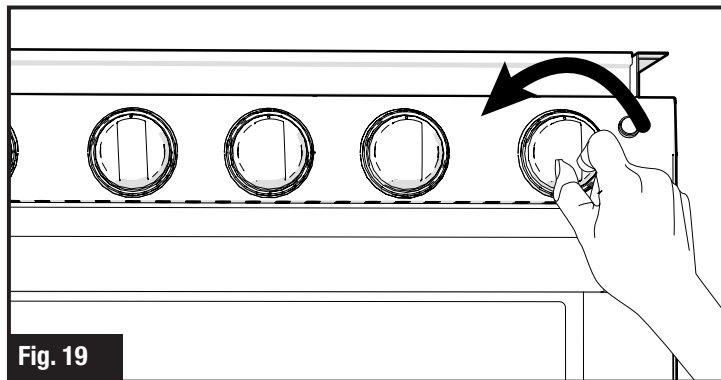


Fig. 19

3. Keep the oven control knob pushed in and rotate the ignition knob clockwise repeatedly until the oven burner pilot flame is lit. (Fig. 20)

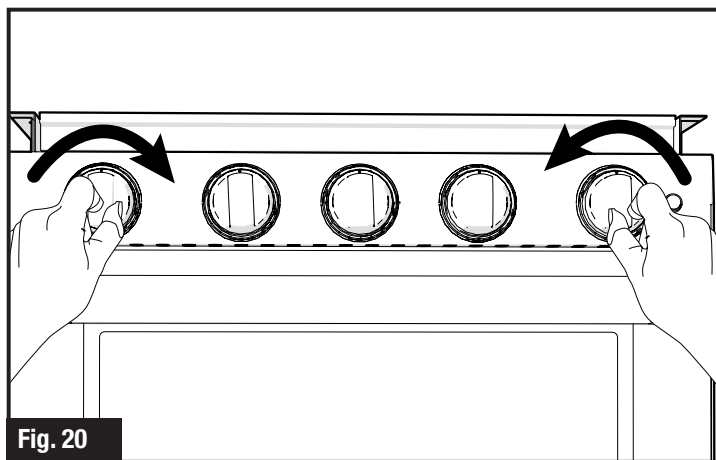


Fig. 20

4. Once the oven burner pilot flame is lit, keep the oven control knob pushed in for about 5 seconds until the pilot flame becomes steady.
5. Rotate the oven control knob to the desired oven temperature.

If the flame goes out during the lighting process

WARNING

Risk of Fire!

If the flame goes out accidentally, gas will escape. Never leave the gas burner unattended during operation. Ensure that there are no drafts.

Immediately turn the control knob to the **OFF** position. Wait at least 5 minutes before trying to re-light the oven burner.

Turning Off the Oven


WARNING

Always turn off the gas tank valve when refueling or traveling.

To turn off the oven, rotate the oven control knob clockwise to the **OFF** position.

The Burner Flame

Keep your arms and face away from being directly above the cooking area.
Flames should appear similar to the good flame shown in diagram below.

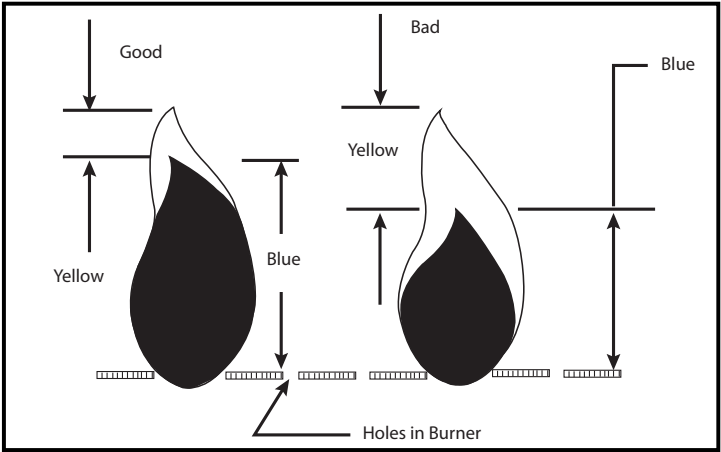

A good flame should be blue with a yellow tip.
Some yellow tips on flames up to 1" (25.4mm) in length are acceptable as long as no carbon or soot deposits appear.
If flames are excessively yellow and irregular, the oil residue may not be completely burned off, or the venturi may be clogged or may not be properly positioned over the orifices.

Slow Cooking

The power of the side burners is lower than the center burner, we recommend you use the side burners for slow cooking purpose.

Cooking Advice

The oven offers a wide range of alternatives which allow you to cook any type of food in the best possible way. With time you will learn to make the best use of this versatile cooking appliance and the following directions are only a guideline which may be varied according to your own personal experience.

WARNING
Food Poisoning Hazard

- Do not let food sit in oven more than one hour before or after cooking.
- Doing so can result in food poisoning sickness.

Pastry is too dry	Increase the temperature by 50°F and reduce the cooking time
Pastry dropped	Use less liquid or lower the temperature by 50°F
Pastry is too dark on top	Place it on a lower rack, lower the temperature, and increase the cooking time.
Cooked well on the inside but sticky on the outside	Use less liquid, lower the temperature, and increase the cooking time.
The pastry sticks to the pan	Grease the pan well and sprinkle it with a dusting of flour or use greaseproof paper

Preheating

Preheating the gas oven doesn't just heat the air in the oven but the walls and the door, which ensures that the oven will quickly return to that temperature when the door has been opened and then closed again.
Based on the cooking temperature to be set, the preheating time may vary. The suggested minimum preheat time is 15 minutes.

Baking Cakes

When baking cakes, always place in the oven after it has been preheated (about 15 minutes). The temperature is normally around 350°F. Do not open the door while the cake is baking in order to prevent it from dropping.
In general:

Cooking Pizza

- For tasty crispy pizzas:
- Preheat the oven for at least 15 minutes.
 - Place the pizza pan on the rack supplied with the oven. If the dripping pan is used, this will extend the cooking time, making it difficult to get a crispy crust.
 - Do not open the oven door frequently while the pizza is cooking;
 - If the pizza has a lot of toppings (three or four), we recommend you add the mozzarella cheese on top halfway through the cooking process.


Cooking Fish and Meat

When cooking white meat, fowl and fish, use temperature settings from 335°F to 375°F.


For red meat that should be well done on the outside while tender and juicy in the inside, it is a good idea to start with a high temperature setting (375°F~425°F) for a short time, then turn the oven down afterwards.

In general, the larger the roast, the lower the temperature setting. Place the meat on the center of the grate and place the dripping pan beneath to catch the drippings.

Make sure that grate is inserted so that it is in the center of the oven. If you would like to increase the amount of heat from below, use the low rack heights. For savory roasts (especially duck and wild game), dress the meat with lard or bacon on the top.

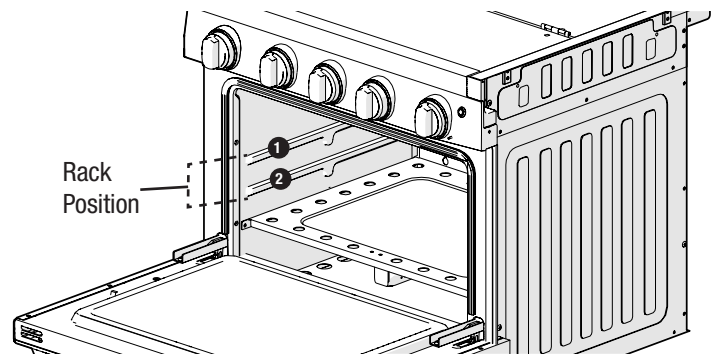

17" Range Oven

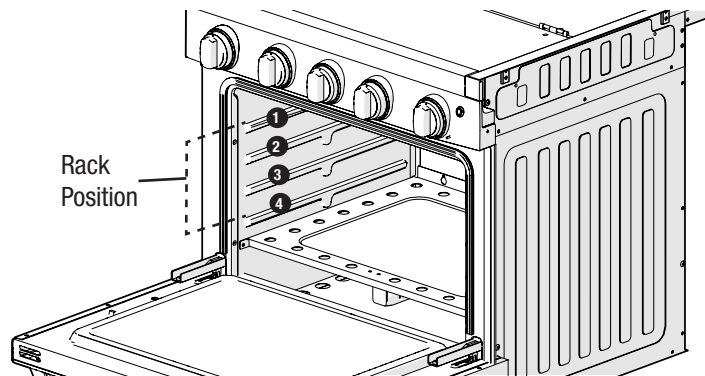

21" Range Oven

Cleaning and Maintenance

- Make sure all the control knobs are off and the appliance is cool before cleaning.
- Make sure all the appliance surfaces, burner grates and burners are cool before cleaning or disassembling.
- DO NOT use bleach or rust removers on the cooktop or burner grates.
- DO NOT obstruct the flow of combustion and ventilation air.
- Keep the appliance area clear of combustible materials, gasoline and other flammable vapors and liquids.
- Clean oven with oven cleaner only. Follow directions on the container.
- Never use a wire brush or metallic item for cleaning burner ports or orifices. Brush may "shed" bristles that may lodge in the orifice or burner ports and cause a fire or explosion.
- Clean all surfaces as soon as possible after boilovers or spillovers.
- Use warm soapy water only to clean the burner grates, cooktops, painted surfaces, porcelain surfaces, stainless steel surfaces and plastic items on your range or cooktop. Do not use grit or acid-type cleaners. Do not use cleaners with ammonia. Cleaners of these types are corrosive and could damage component parts in the range.
- DO NOT use steel wool, or abrasive cleaners, or acid type cleaners such as chlorine bleach on your cooktop or grate systems. They will damage your range or cooktop. Use only non-abrasive plastic scrubbing pads.
- DO NOT allow foods containing acids (such as lemons or tomato juice, or vinegar) to remain on porcelain or painted surfaces. Acids may remove the glossy finish. Wipe up egg spills when cooktop is cool.
- DO NOT wash warm porcelain surfaces. Allow these areas to cool before cleaning. You could burn yourself or the porcelain could crack.
- Pitting and discoloration will result if spills are allowed to remain for any length of time on stainless steel.
- DO NOT allow spillovers to remain on the burner caps. The caps could become permanently stained.
- When cleaning around the burners use care to prevent damage to the electrode (if so equipped). If a sponge or cloth should catch the metal igniter electrode, it could damage or break the electrode. If this occurs the burner will not light.


The Oven Door

WARNING


When removing the door:

- Do not place excessive weight on an open oven door or stand on an open oven door as, in some cases, it could cause the range to tip over, break or damage the door to the extent that the range would be unsafe to use, or cause serious injury to the user.
- When opening the oven door, allow steam and hot air to escape before reaching in oven to check, add or remove food.
- Make sure oven is cool and power to the oven has been turned off before removing the door. Failure to do so could result in electrical shock or burns.
- The oven door is heavy and fragile. Use both hands to remove the oven door. The door front is glass. Handle carefully to avoid breaking.
- Grasp only the sides of the oven door. Do not grasp the handle as it may swing in your hand and cause damage or injury.
- Failure to grasp the oven door firmly and properly could result in personal injury or product damage.
- To avoid injury from hinge bracket snapping closed, be sure that both levers are securely in place before removing door. Also, do not force door open or closed - the hinge could be damaged and injury could result.


1. Be sure to read the above **WARNING** before attempting to remove oven door.
2. Open the door all the way. (Fig. 21)

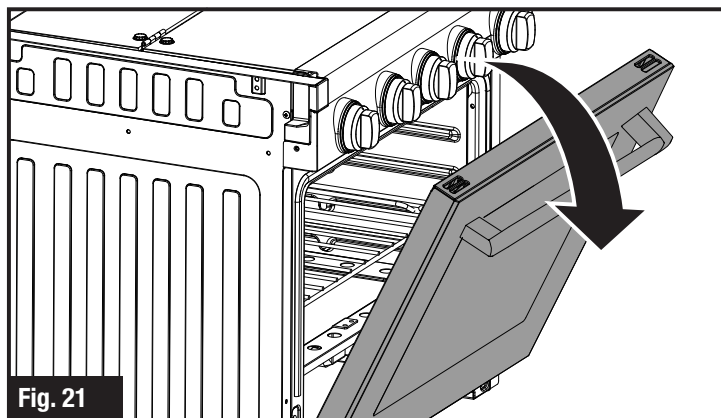




3. Flip levers on hinges (one on each side) toward you. (Fig. 22)

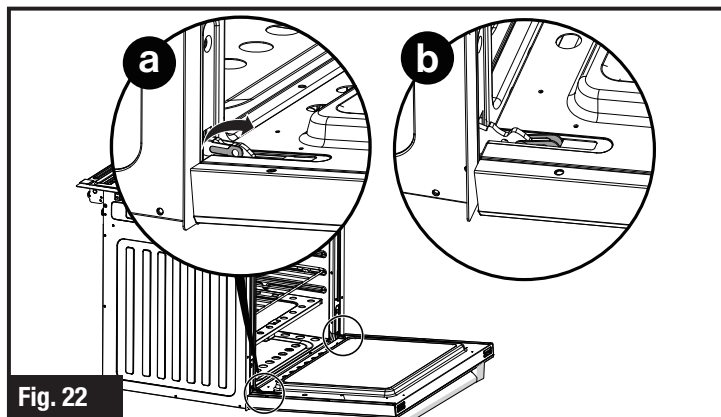

4. Close the door until it stops. It will be about halfway open. (Fig. 23)

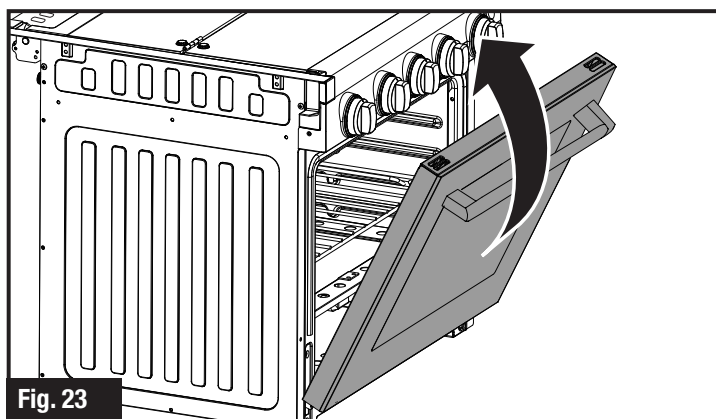


5. Holding the door firmly on both sides and using both hands, pull the door straight out of the hinge slots. (Fig. 24, Fig. 25 and Fig. 26) Hold firmly, the door is heavy.

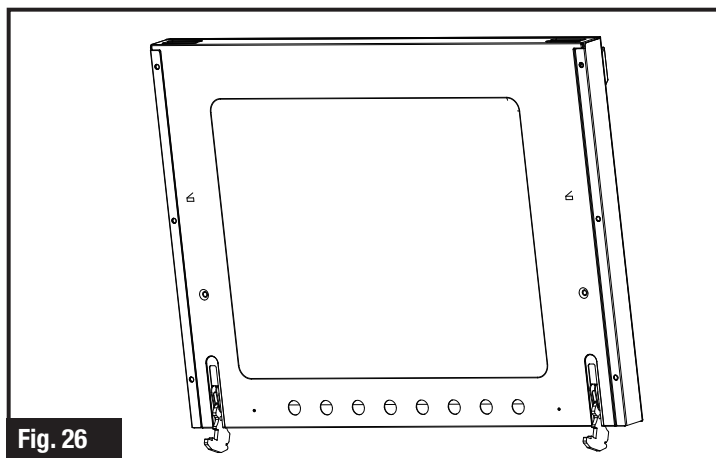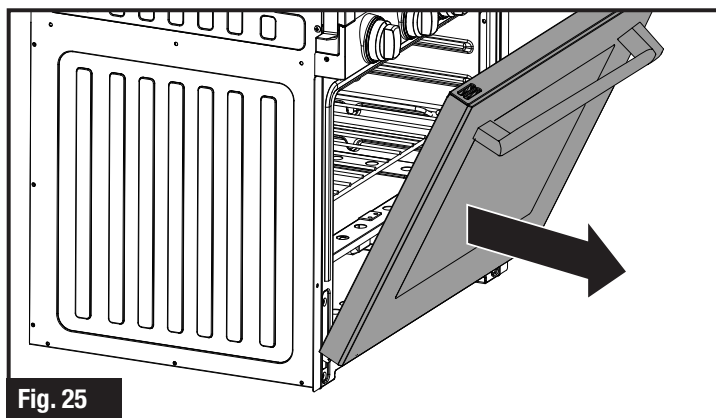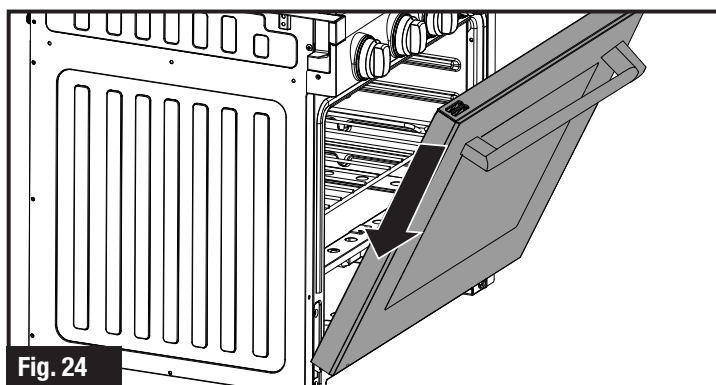

6. Place the door on a flat surface that is protected so the door does not damage the material of the surface.

Replacing an Oven Light


1. Disconnect the oven from the power supply by means of the switch used to connect the appliance to the electrical mains, or unplug the appliance if the plug is accessible.
2. Remove the glass cover of the lamp-holder. (Fig. 27)

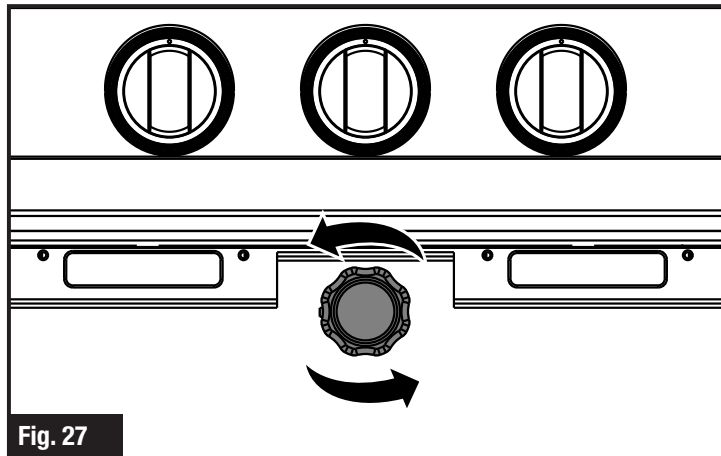


3. Remove the lamp and replace with a lamp resistant to high temperatures (300°C / 572°F) with the following characteristics:
 - Voltage: 12V
 - Wattage: 10W
 - Type: G4
 - Lamp Type: Halogen
 4. Replace the glass cover.
 5. Reconnect the power to the oven.
- To reorder the Girard oven light bulb replacement, please contact your service center for assistance.

Replacing the Control Knob LED


1. Disconnect the oven from the power supply by means of the switch used to connect the appliance to the electrical mains, or unplug the appliance if the plug is accessible.
2. Grasp and pull on the control knob with the broken LED light. (Fig. 28)

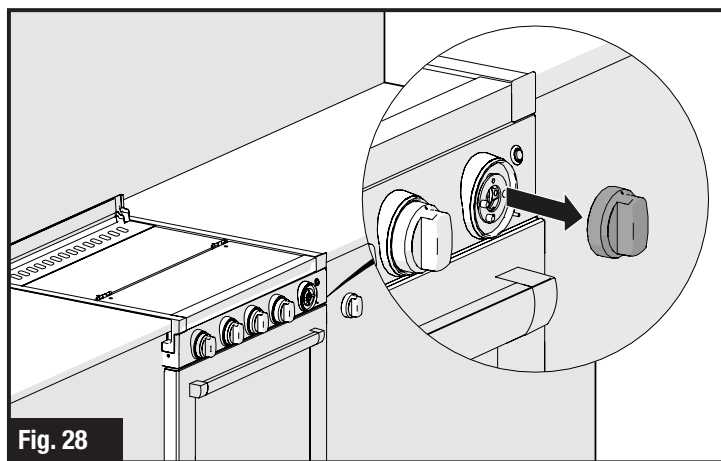

3. Remove the two screws holding the LED light using a Phillips screwdriver. (Fig. 29)

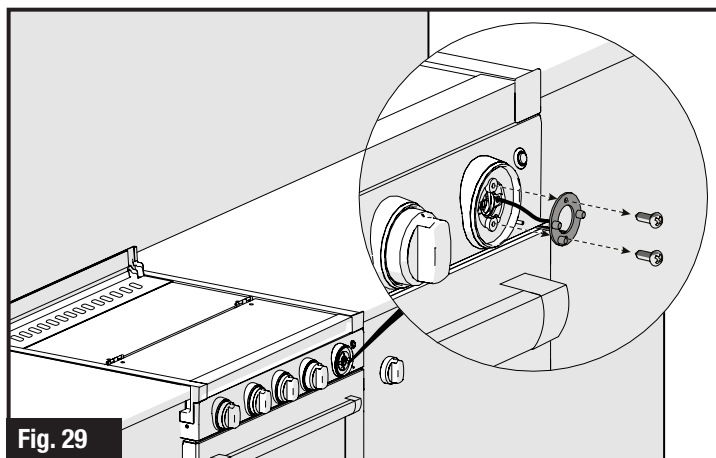

4. Remove the LED assembly and disconnect the wire from the base of the LED assembly. (Fig. 30)

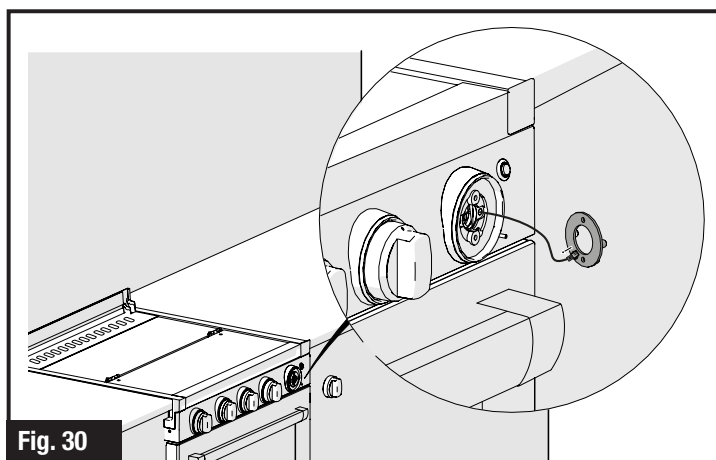

5. Plug the wire harness connector into the new LED assembly.
6. Reattach the LED assembly to the console with the 2 screws removed in step 3. Ensure the wires are not pinched during this process.
7. Reattach the control knob by aligning the stem of the control into the opening in the control knob housing and pushing it back into position.

Storage

Dry all surfaces and burner box, then spray surfaces with cooking oil substance to preserve the surface from rusting during long term storage. Wipe off oil coating before reuse.

Troubleshooting

Before calling for service, review this list. It may save you both time and expense. This list includes common experiences that are not the result of defective workmanship or material in your appliance.

Problem	Possible Causes / Solution
Surface burners do not light	Surface Control Knob has not been completely turned to  position. Push in and turn the Surface Control knob to  position until burner ignites and then turn control to desired flame size.
	Ensure gas supply valve is open.
	Burner ports or slots are clogged. With the burner off, use a small-gauge wire or needle to clean ports or slots.
	Low gas supply level in cylinder.
Surface burner flame burns half way around	Moisture is present on the burner, dry burner thoroughly.
	Burner ports or slots are clogged. With the burner off, clean ports with a small-gauge wire or needle to clean ports or slots.
	Moisture is present after cleaning. Lightly fan the flame and allow burner to operate until flame is full. Dry the burners thoroughly.
Surface burner flame is orange	Dust particles in main line. Allow the burner to operate a few minutes until flame turns blue.
	In coastal areas, a slightly orange flame is unavoidable due to salt air.
Control LED only stays BLUE	The igniter knob control will not change color (Far Left control knob). All other knobs will change to RED when the control is turned on;
Control knob stays RED at OFF position	Knob LED PCB Hall components fail to sense the magnet. Contact your service center.

Specification

Technical Specifications	
Optional Power	Gas power
BTU/HR	Left and Right Burner: 6500 BTU
	Front Burner: 8000 BTU
	Oven: 7100 BTU
Fuel / Power	Propane
Inlet Pressure	10" WC Min to 13.8" WC Max
Power Input	12V DC < 2 Amp
Inner Volume of the Oven	35L

This appliance conforms with the directives: ANSI Z21.57a-(2012) Rec / CAN1-1.16-M79 (R2016)



GIRARD PRODUCTS. LLC.

Girard Products LLC.

- 1361 Calle Avanzado, San Clemente, CA 92673, USA
- Toll Free: 1-574-537-8900 • Email: gptech@girardrv.com

www.greenrvproducts.com



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.