




98GCK-49(B_{, black} OR W_{, white})


Switch Control with Wired Motion Sensor

Revision: 02202019JM

98GC781(B), (W)
Awning/LED
Rocker Switch

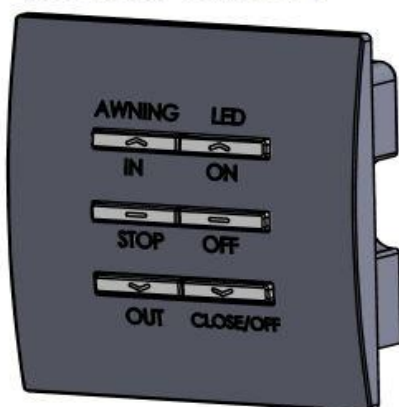

98GC780(B),(W)
Wired Motion Sensor

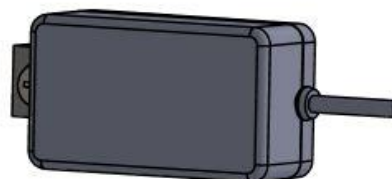

RV AWNING PRODUCTS

1361 CALLE AVANZADO, SAN CLEMENTE, CA 92673 (800) 382-8442 FAX (949)276-5500

www.girardrv.com



Girard Systems awnings may be operated in light wind and rain conditions. When periods of heavy rain and or high wind are expected the awning must be closed. Never leave the awning open and unattended.

Damage caused by wind and rain is not covered by warranty.

All awnings must be closed prior to moving the vehicle for any reason. As an extra safety precaution, a visual check that every awning is fully closed is required.

Damage caused by failure to comply with these instructions is not covered by warranty.

Before using your awning, ensure that the area into which the awning will be deployed is free of obstructions (Trees, walls, pillars, posts, other vehicles etc.)

Damage caused by collisions with any of the above or similar is not covered by warranty.



CONTENTS

Description-Specification	3
Wall Switch 98GC781(B), (W)	4
98GC781(B), (W) Mounting Diagram	5
98GC781(B), (W) Button description	6
Wind sensitivity Adjustment	7
Wired Motion Sensor 98GC780(B), (W)	8
98GC780(B), (W) Installation View	9
Wiring Diagram	10

Description

The 98GCK-49 is a combination Standard Wall Switch (98GC781" B" or "W") and Hard Wire Motion Sensor (98GC780" B" or "W") kit, it can be ordered in either Black or White.

The 98GCK-49 kit is used for a Single DC awning with LED. The Motion Sensor and Wall Switch communicate using RS485 protocol. The 98GCK-49 also includes an Ignition Retract-Lock function to retract the awning if the engine is ON. See wiring diagram to see how to wire this function.

Specification

- Operating Voltage: 11 VDC ~14VDC
- Current: Up to 10A
- LED light control
- RS485 communication to operate the motion sensor
- Maximum run time is 2 minutes
- Operating Temperature 0C~50C

98GC781(B), (W)

Wall Switch

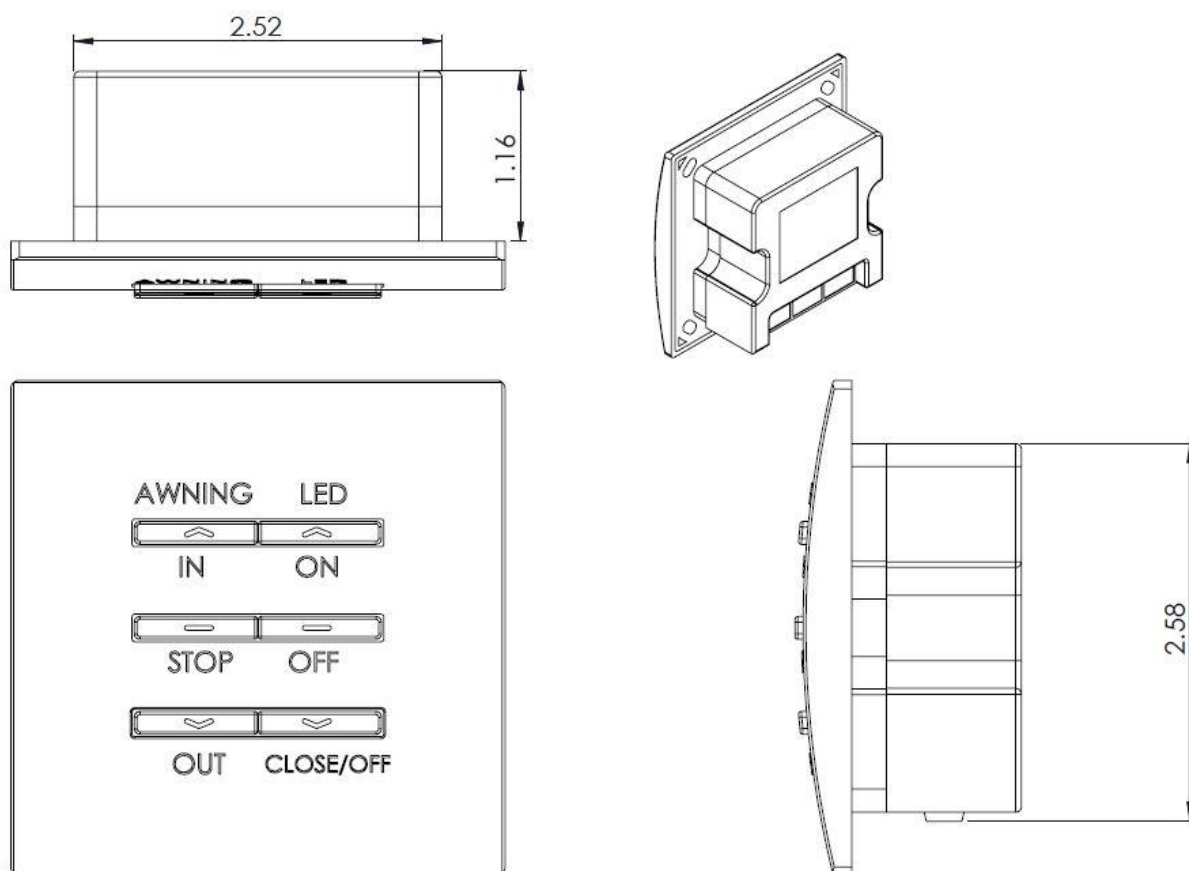


Fig. 1

Mounting Diagram:

The required opening to install this wall switch is 2.6-inch x 2.6-inch X 1.25-inch depth.

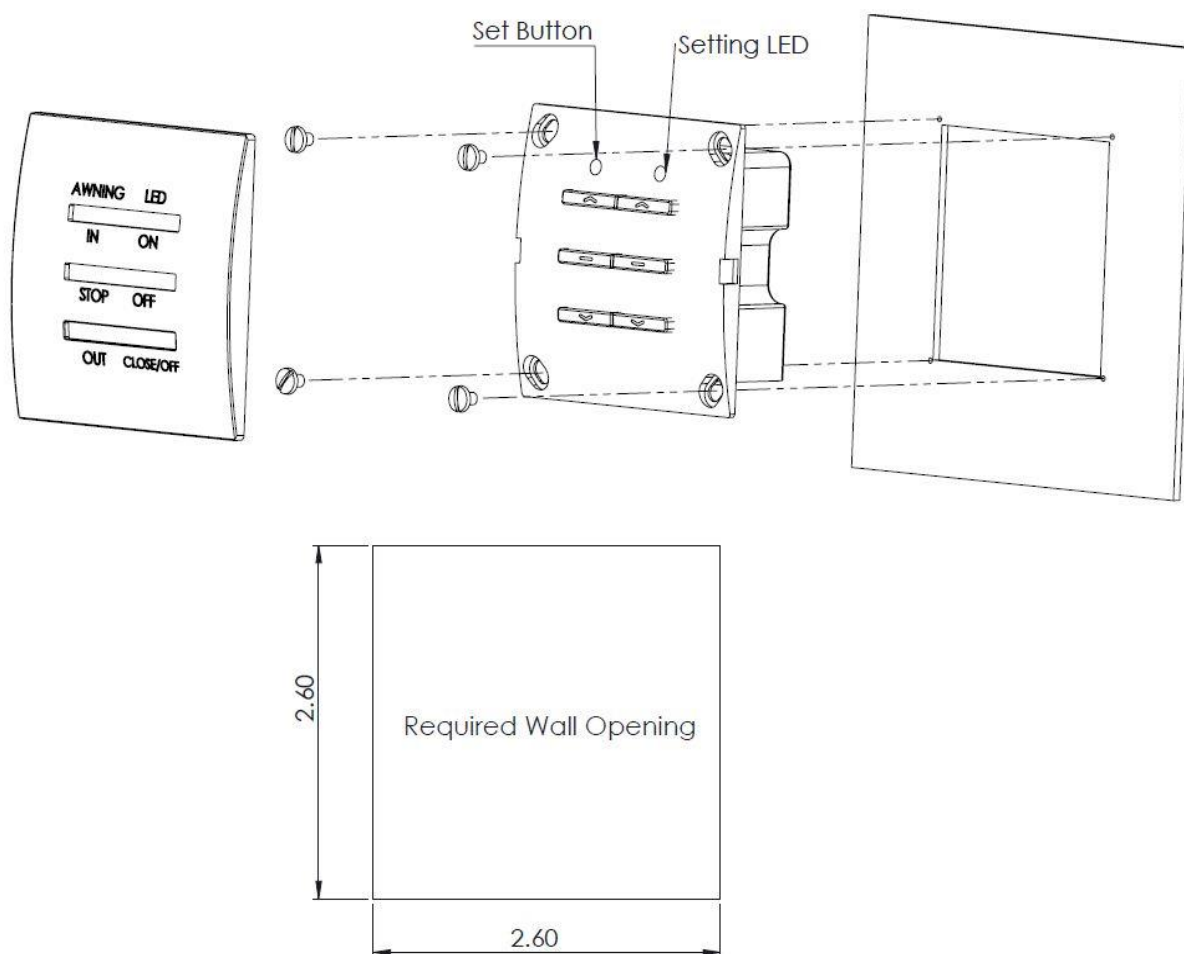


Fig. 2

Buttons Description:



IN

IN Button retract the awning



STOP

STOP Command



OUT

OUT Button Extend the awning



ON

TURNS ON LED LIGHT



OFF

TURNS OFF LED LIGHT



CLOSE/OFF

Close the Awning and Turn OFF the LED Light



Wind sensitivity Adjustment:

This unit has a factory preset wind sensitivity setting. If assistance is needed please contact Girard technical support department at 1-800-382-8442 7:30 AM - 3:30 PM PST Monday - Friday.

Reverse Motor Direction:

1. The direction of the motor can be reversed without the need of changing the wiring by pressing the IN and OUT buttons of the wall switch simultaneously for at least 6 seconds until hear a beep.

98GC780(B), (W)

Wired Motion Sensor

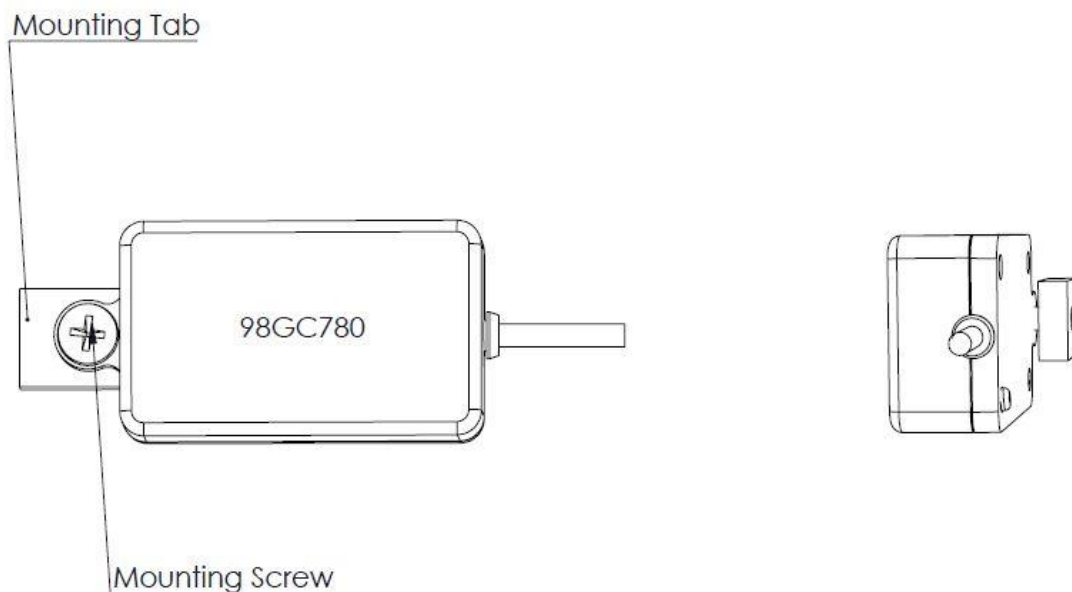


Fig. 3

This wired motion sensor communicates directly to the DC motor Controller 98GC781(B), (W) by RS485 Protocol.

Attach the motion sensor to the lead rail using the mounting tab, see figure 3 above.

Motion Sensor Installation view:

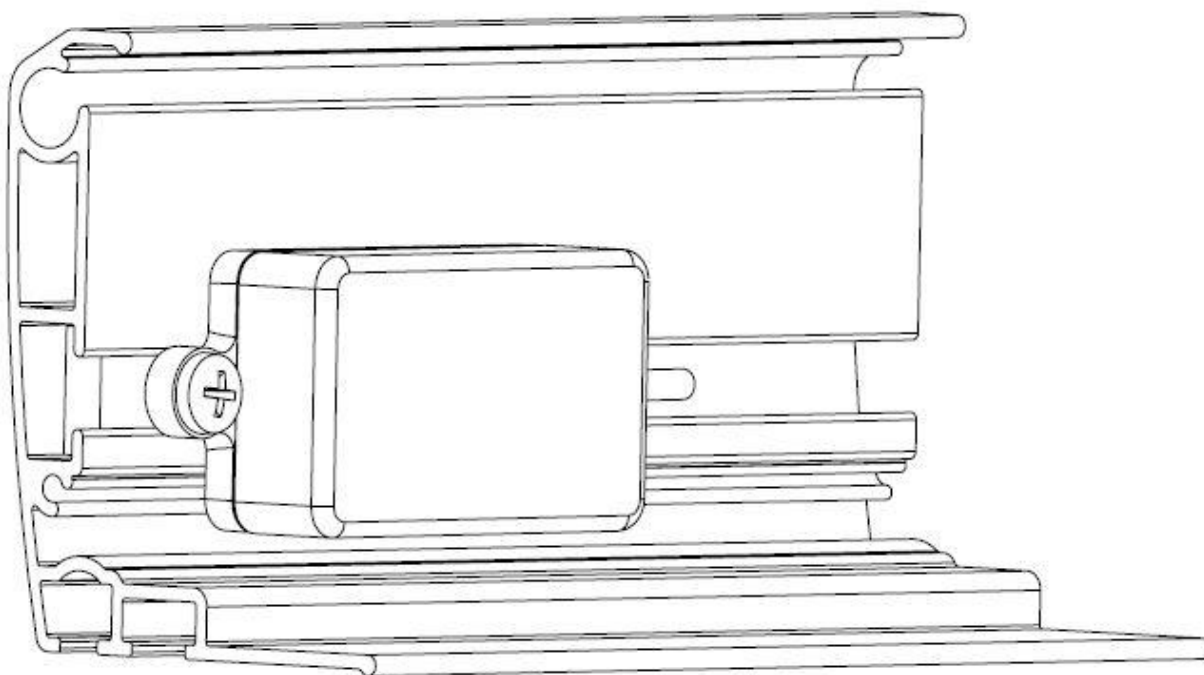


Fig. 4

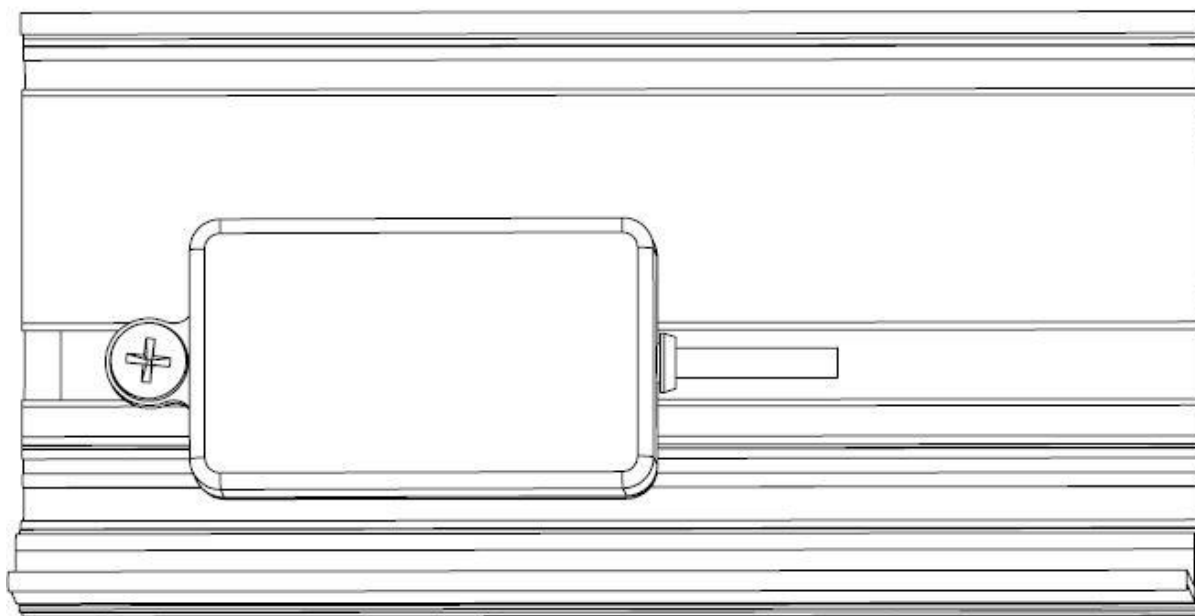


Fig. 5

Wiring Diagram:


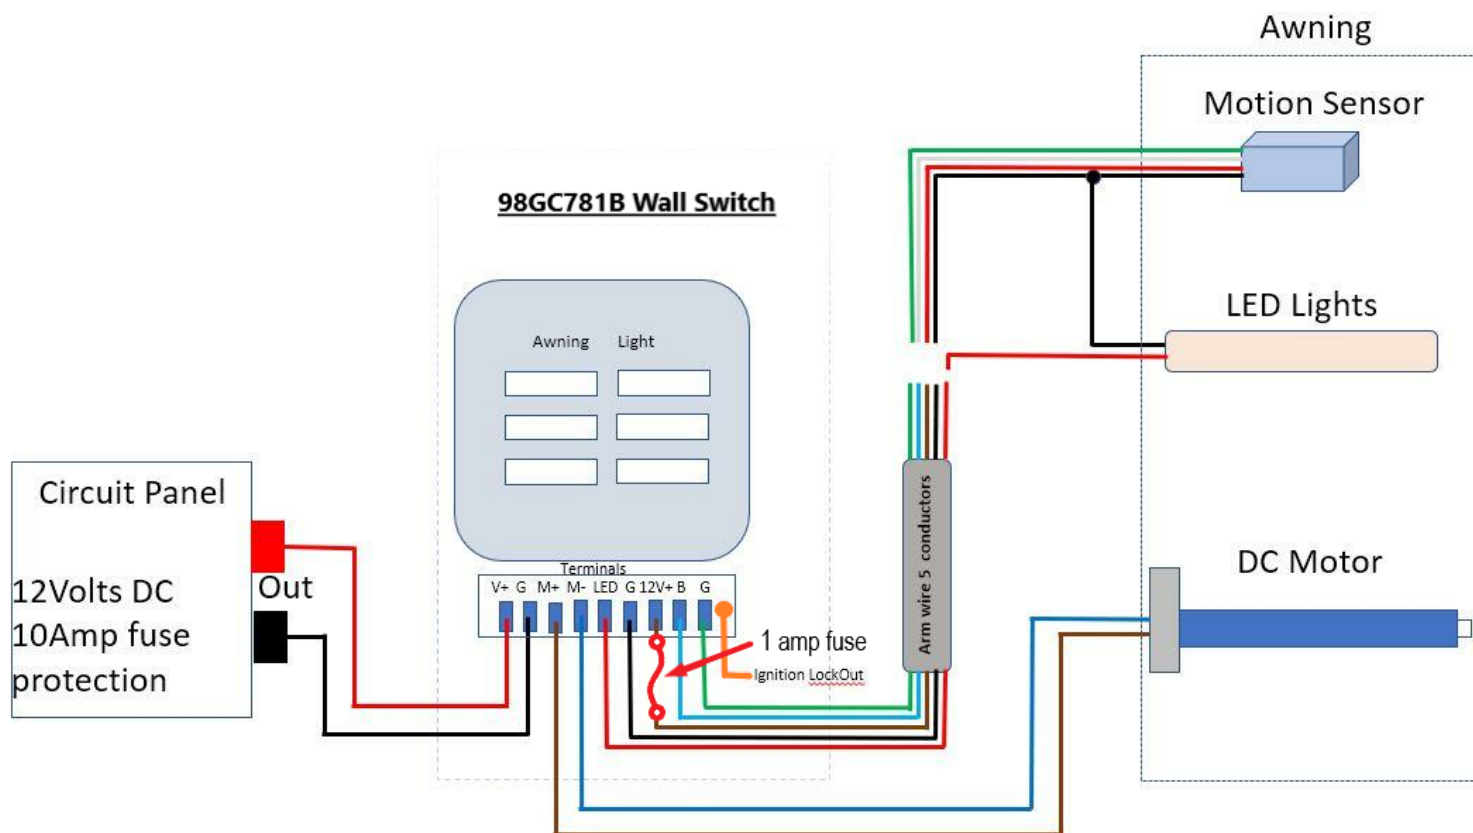


Fig. 6



For inquiries or assistance with these devices please call Girard Systems TOLL FREE on 800-382-8442 between 7:30am and 3:30pm P.S.T.

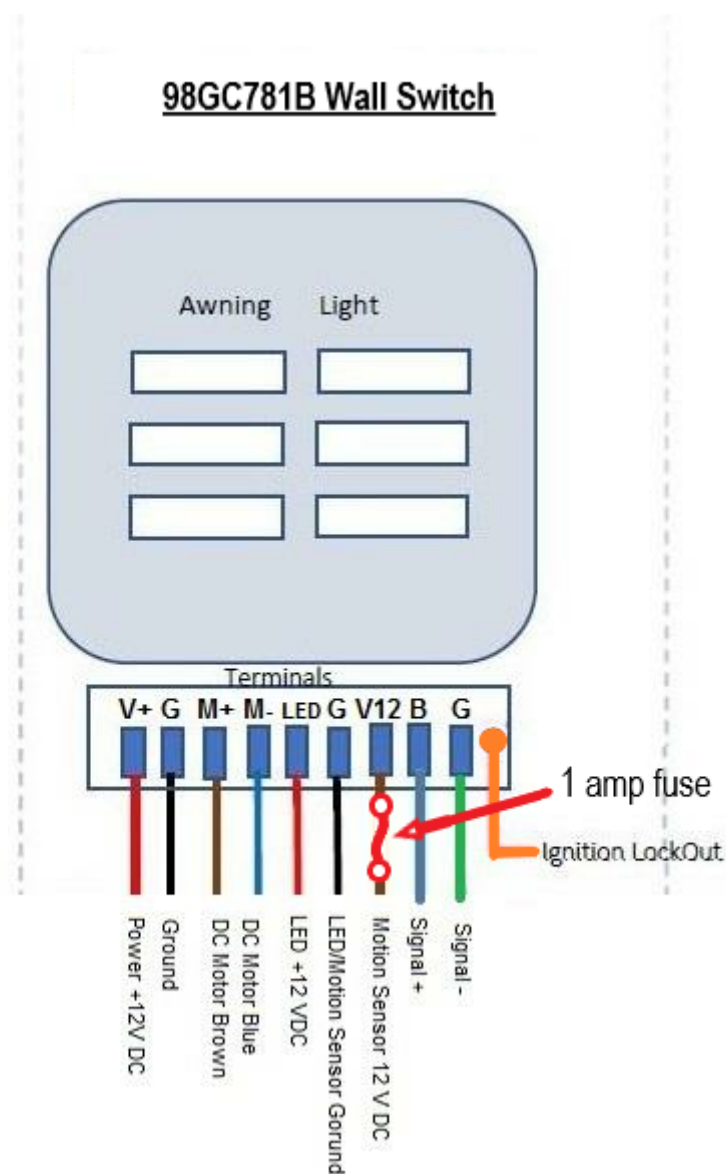

This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.