




WIRELESS REMOTE


PROGRAMMING INSTRUCTIONS

Use these instructions to establish communication between remote unit and receiver when either are replaced.

Step 1 – Remove the access cover from the side of the remote and plug in the coiled telephone cord.

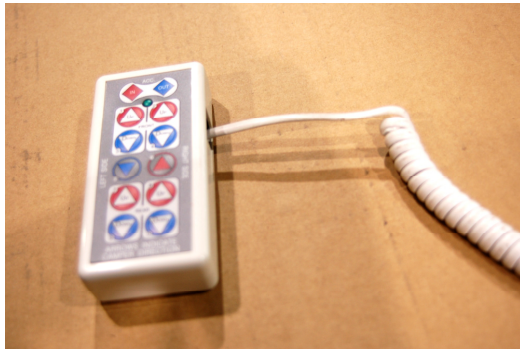


Step 2 – Plug the other end of the coiled cord into the left side phone style jack on receiver.

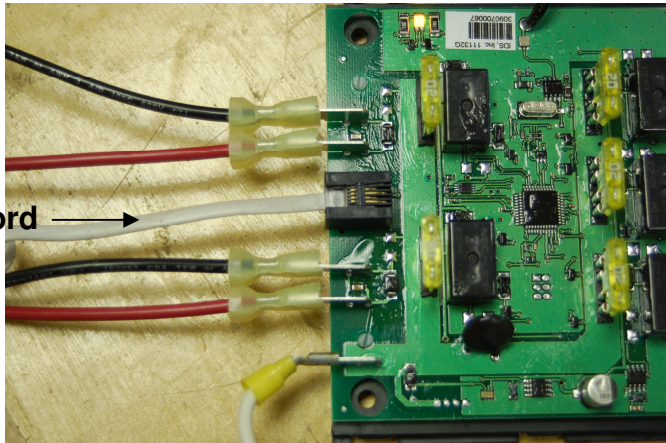


Coiled cord →

Step 3 – Simultaneously press the ALL UP & ALL DOWN buttons, (buttons 5&6). A green light will appear on the remote.

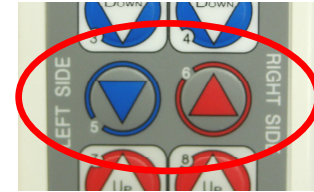

Step 4 – Press button # 8 five times, then press button # 0 five times.

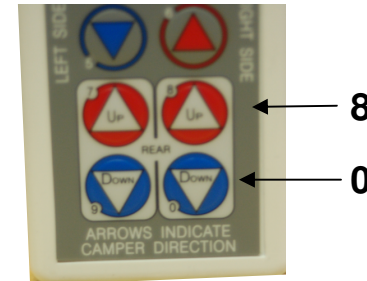

Step 5– Simultaneously press the ACC IN & OUT buttons. A green light will appear on the receiver.



Step 6– Remove coiled cable and check to see that receiver is responding to remote in wireless mode.



This manual is provided courtesy of RV Tech Cheat Sheet



Professional resources for the whole RV industry — *free*.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

[Join our free Facebook group →](#)



Follow proper safety practices. If in doubt, consult a professional RV technician.