



powered by  **BM PRO**

HELP GUIDE


Zero Point Calibration Sequence




powered by  **BM PRO**



CONTROLLER

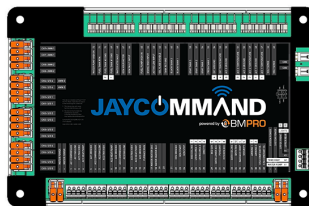

NODE

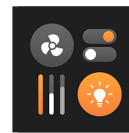

APP




SWITCH


SYSTEM COMPONENTS

This guide outlines the instructions to perform a Zero point calibration on a compatible leveling system.


1. Go to the Motor Settings page by pressing the "Settings" icon  in the top right of the Home Page.

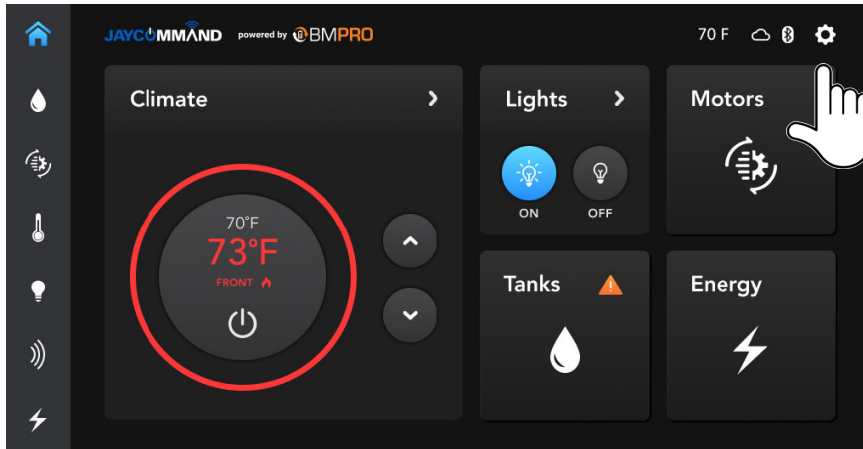


2. Click the Motor Settings.
This is available on selected models.

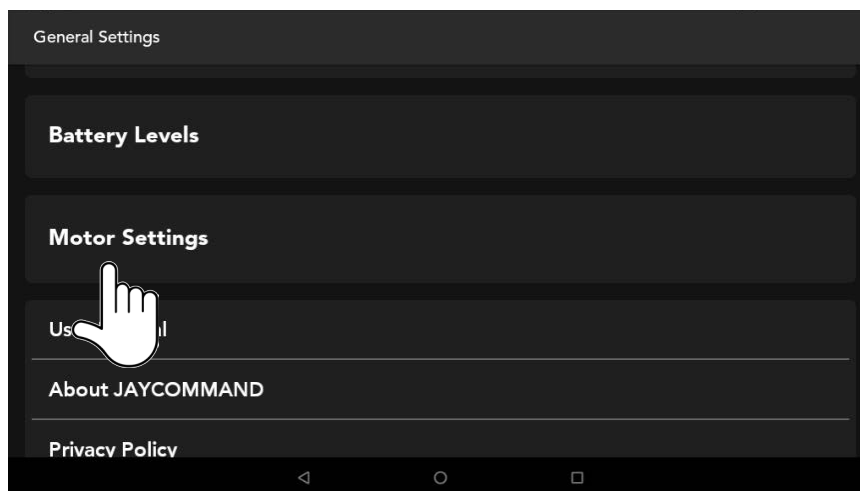

3. Click the "START" button.
This puts the leveler in the Zero calibration mode which will be indicated by the status message "Calibration Active"
Note: Click and hold this button for half a second to activate the function.

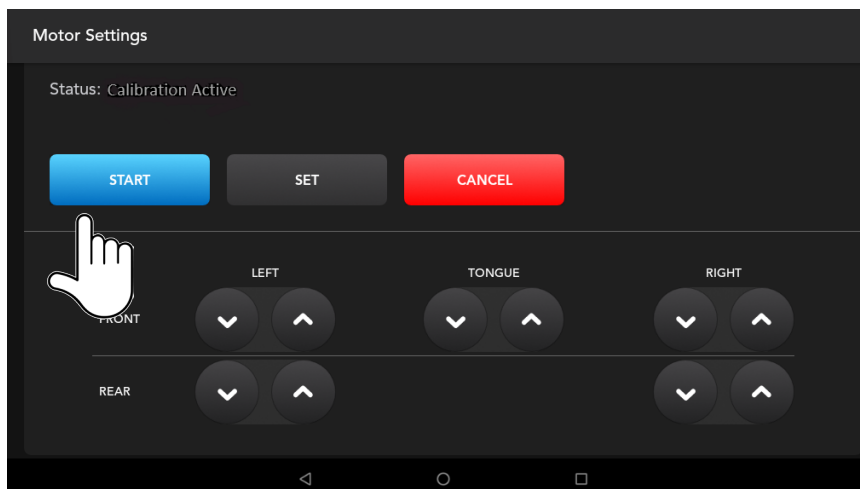


4. Move Jacks until RV is level.

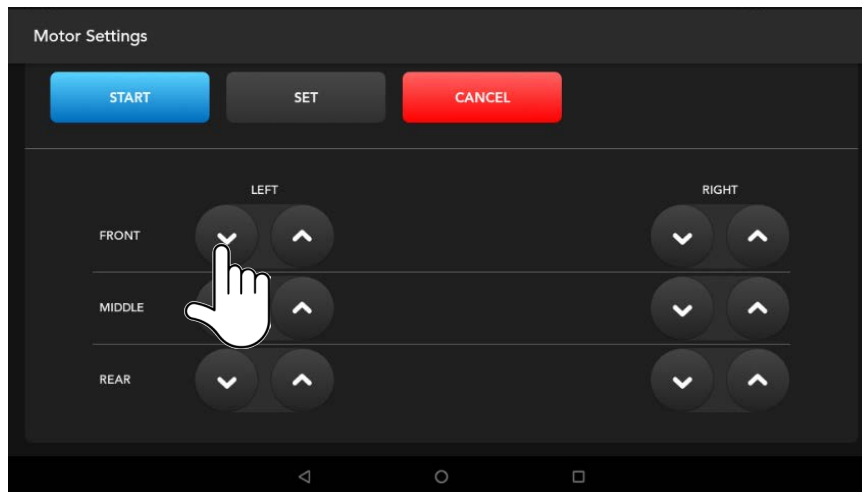


POWERING YOUR ADVENTURES.

5. Set the Zero point by Clicking and holding the "SET" button.
Note: Press and hold this button for half a second to activate the function.

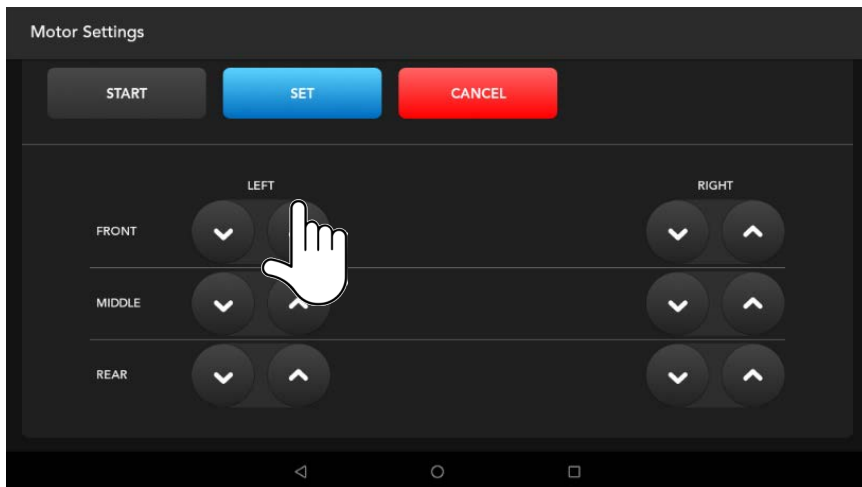

The leveler will take a few seconds to calibrate and the status will return to "Idle" when complete.

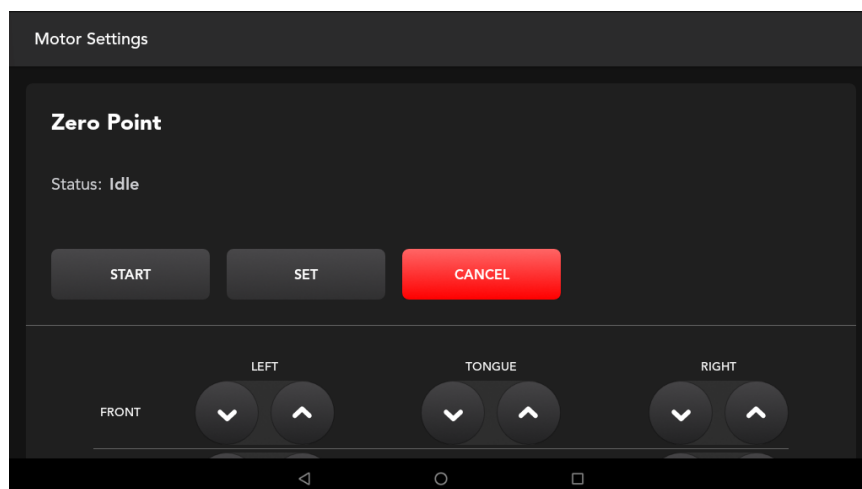



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.