


Resetting NCSP3 and NCSP35

- 1) Press and hold the Power Button until the display gives you an option on screen to *Power Off* - press this.
- 2) Once the display is completely black, exit the vehicle and find the BCM.
- 3) Remove the cover of the BCM to expose the green board.
- 4) Press and hold the Reset button for 2 Seconds and let go.
- 5) Press and hold the Power button until the display shows light.

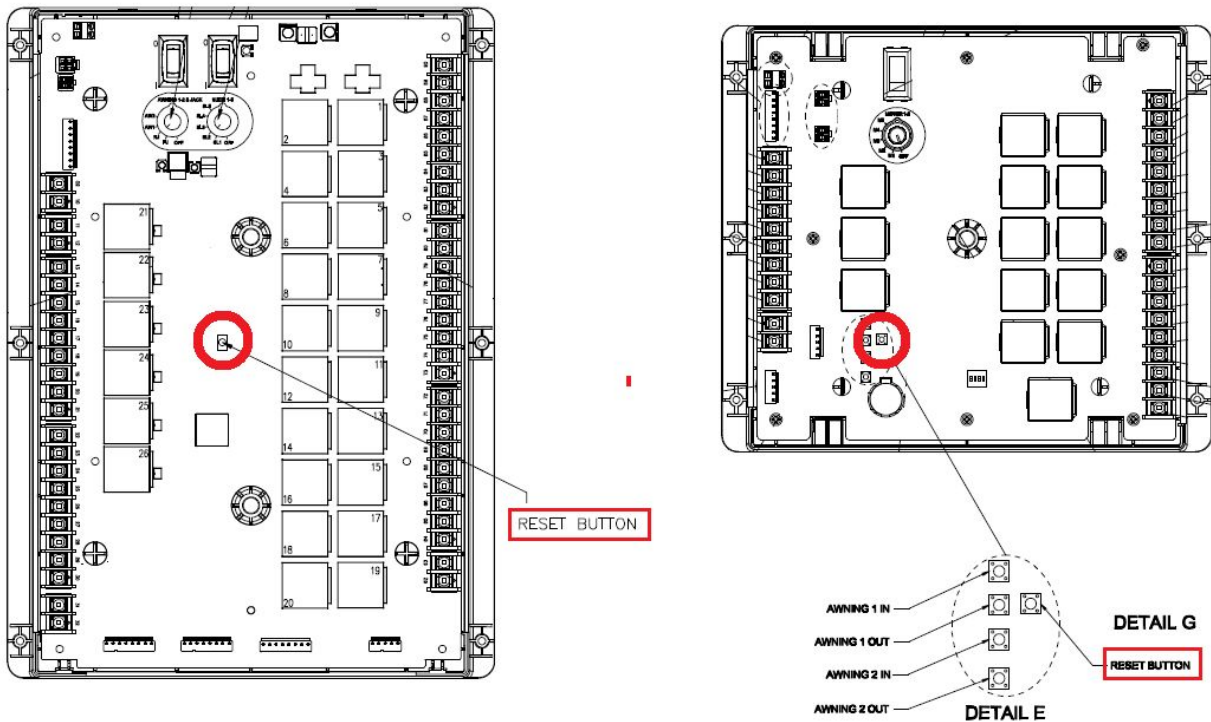



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.