



Bilge Auto/Man Wiring Diagram (VJD2-U__B body)

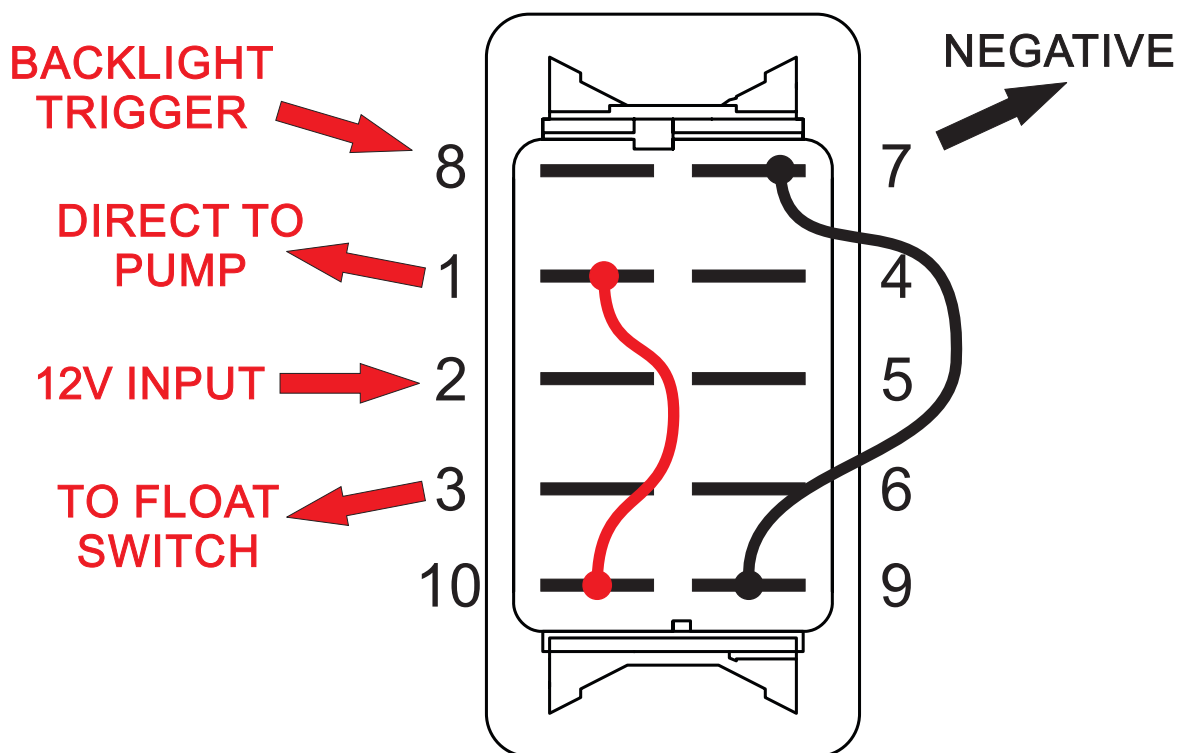

One jumper required between terminals 1 and 10 (positive)
One jumper required between terminals 7 and 9 (negative)

The oval indicator will illuminate when the pump is running, whether that be via the DOWN (manual) mode, or in the UP (auto mode), AND the float switch floats.

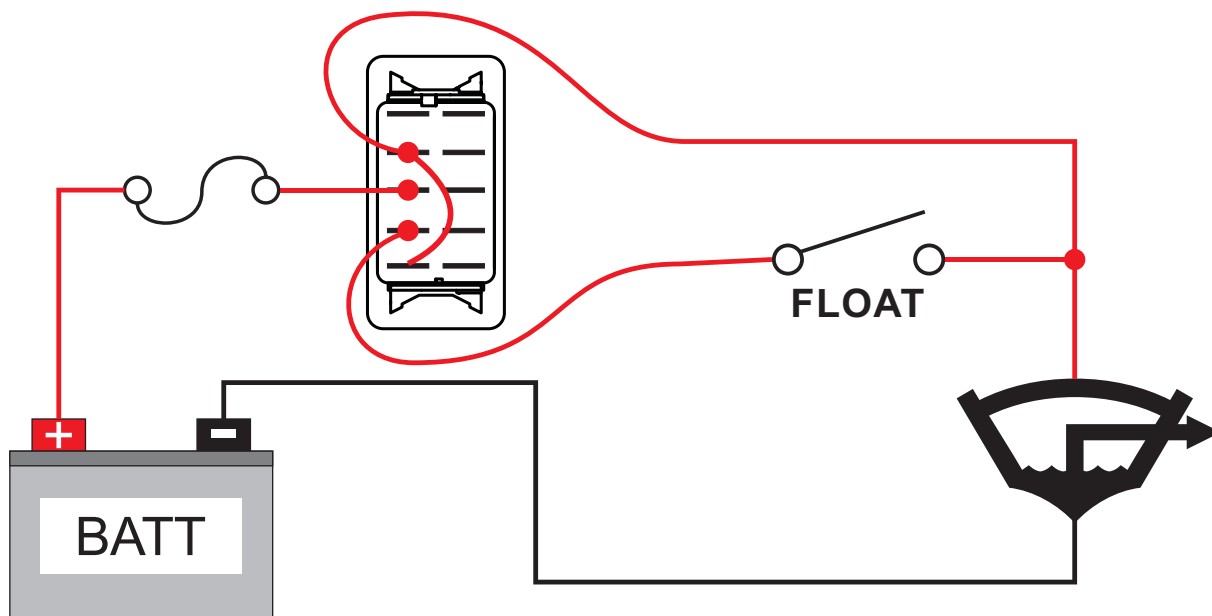



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.