


8" WD Rack, ball heights in drop and rise position

The distance between each increment on the adjustable shank is 1-1/2".

The distance between the highest setting in drop position and the lowest setting in the rise position is 3-7/8" (shown below in blue).

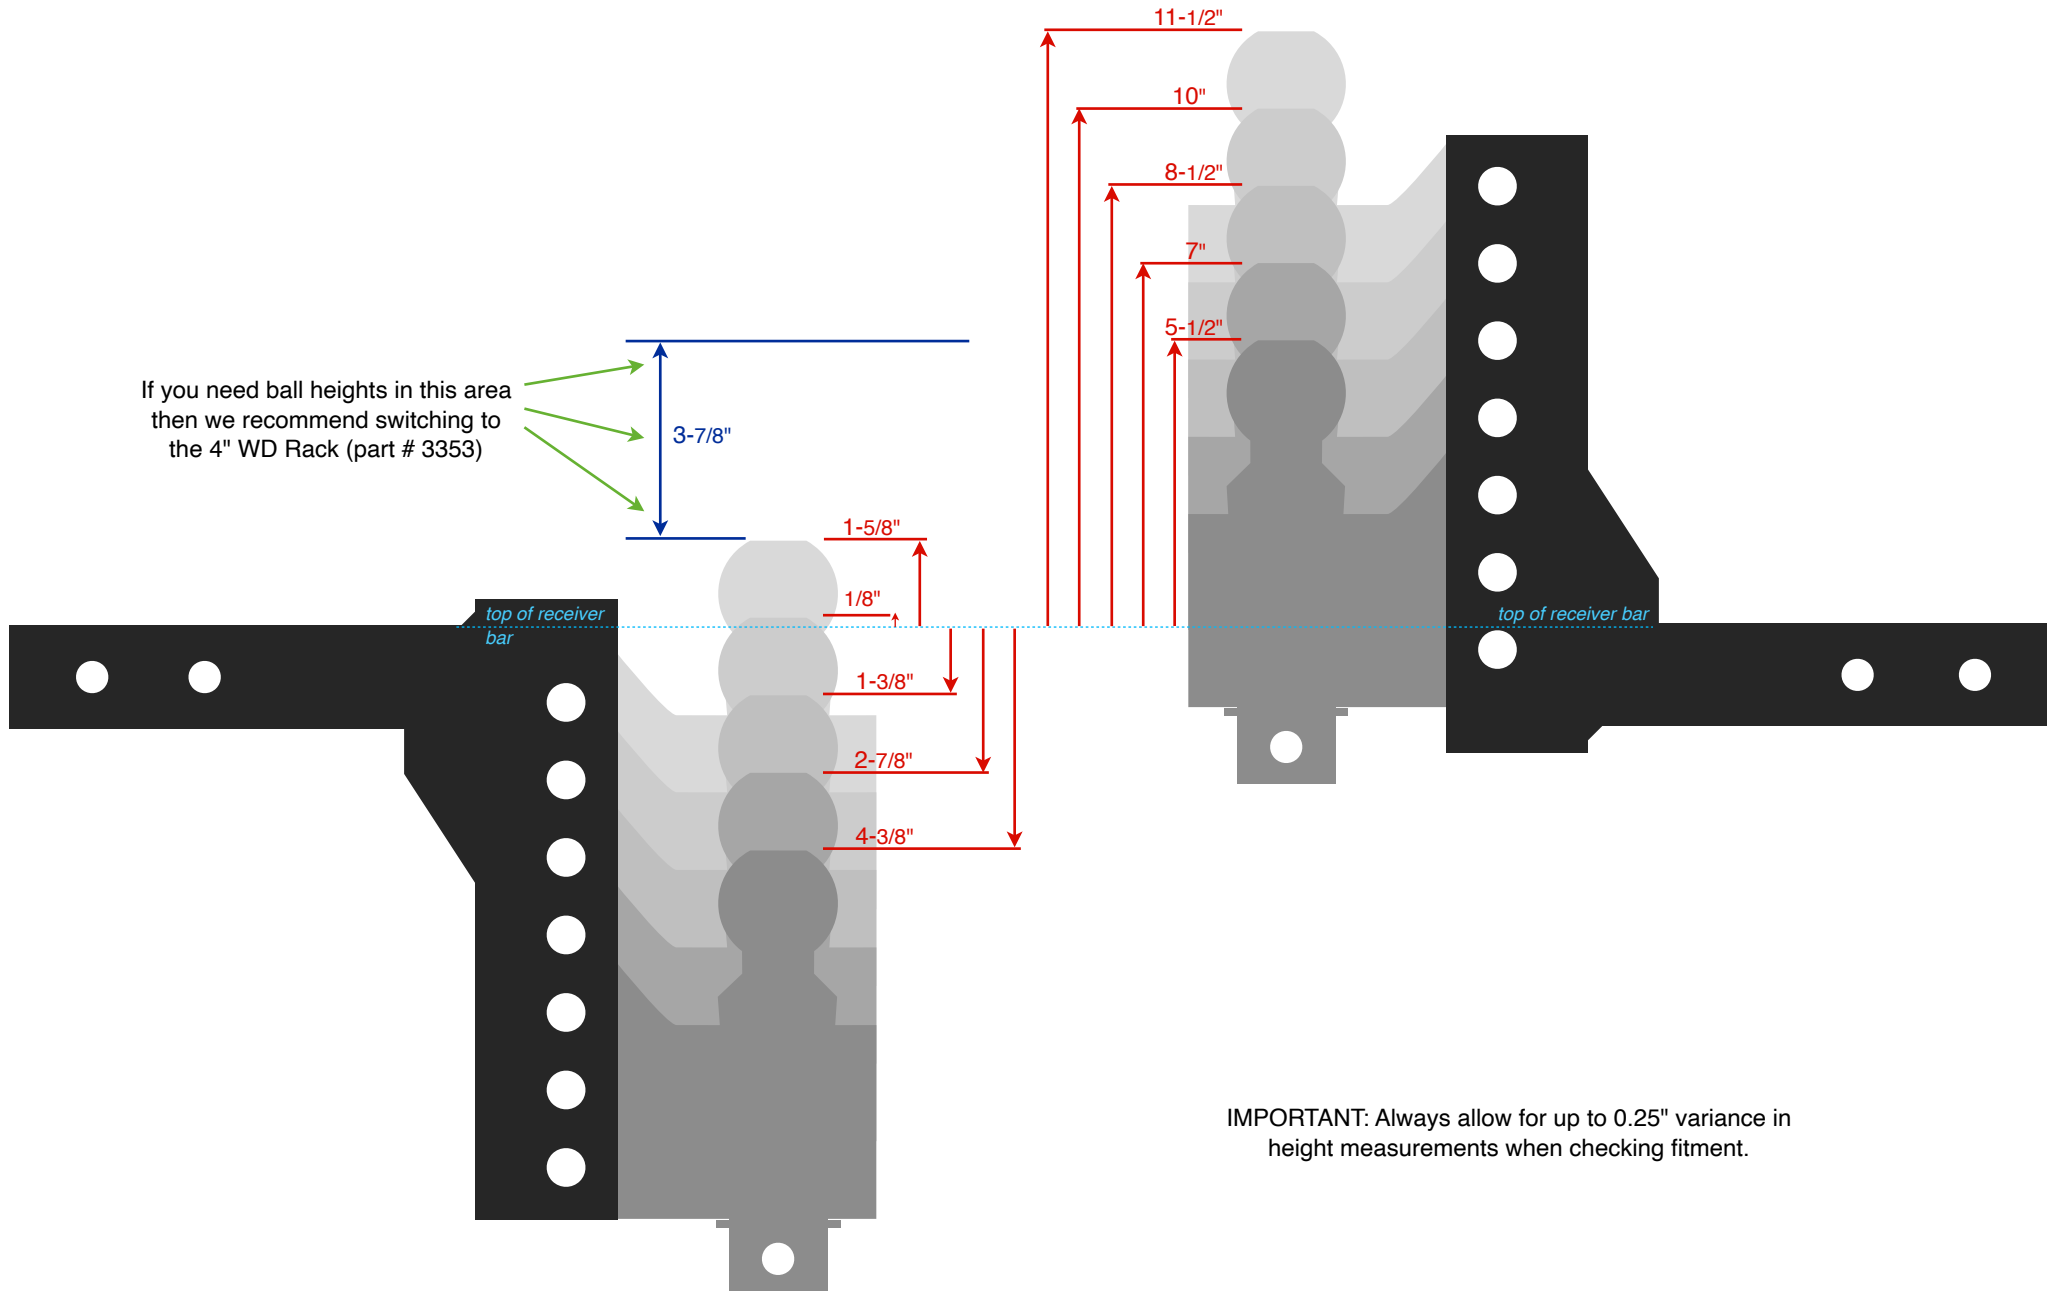

IMPORTANT: Always allow for up to 0.25" variance in height measurements when checking fitment.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.