


AUTOMATIC BATTERY RECONNECT - BCC UPGRADE

JUNE 19, 2003

INSTALLATION INSTRUCTIONS

1. Remove the cover from the Battery Control Center.
2. Locate the four-pin plug from the Battery Disconnect, which is along the left side of the large isolator relay.
3. Pull this four-pin plug and socket apart.
4. Connect the two four-pin plug and socket from the new module to the respective plugs.
5. Locate and pull the four-pin plug from the printed circuit board. Plug the short jumper harness into the board connector.
6. Plug the harness from the coach into the four-pin plug on the short jumper harness.
7. Slide the new module along side the isolator relay to secure it.
8. Replace the cover on the Battery Control Center.

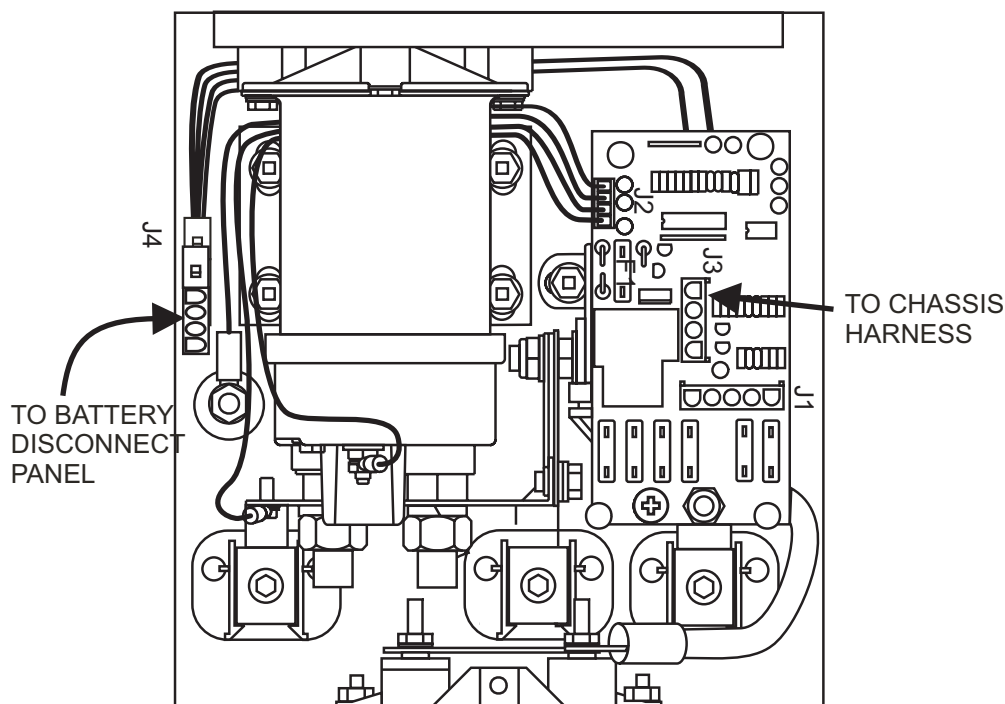

TESTING

1. With the ignition off, disconnect the coach battery using the Disconnect Switch in the coach.
2. Be sure the battery is disconnected, by turning on a known working light. It should **not** be ON.
3. Turn ON the ignition switch.

Intellitec

131 Eisenhower Lane North
Lombard, IL 60148
630.268.0010 / 1.800.251.2408



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.