

# BATTERY CONTROL CENTER - MINI GAS

## SERVICE MANUAL



### Product Description

The Battery Control Center is a centralized power switching, fusing and distribution center. Power from the main and the auxiliary batteries is fed into the Battery Control Center. The full power of both batteries is available within the box. The system consists of two (2) Battery Disconnect Relays, a bi-directional battery charging circuit, an auxiliary start function to provide a "jump start" from the auxiliary battery, ignition power switching, and a fog light relay circuit.

### CAUTION:

All servicing of the Battery Control Center should be done only by a qualified Service Technician. Inadvertent shorts inside the Battery Control Center could result in severe damage and/or injury.

**TOOLS REQUIRED:** Low current Test Light, Accurate Voltmeter, (digital read-out preferred).

**TO REMOVE COVER:** Gently lift the cover catches, located on each side of the box, and pull them outward and towards yourself. The cover may then be lowered to allow easy access to the fuses and circuitry.

**Intellitec**

1485 Jacobs Rd.  
Deland, FL 32724  
386.738.7307

# **BATTERY CONTROL CENTER - MINI GAS**

## **SERVICE MANUAL**

### **How The Battery Control Center Works**

#### ***Battery Disconnect***

The Battery Disconnect relays are used to disconnect the batteries during periods of storage or during service. The disconnect relays operate by momentarily applying 12 volts to the solenoid coil in either of two directions, (+12 volts on the "S" terminal and ground on the "I" terminal for opening) and (+12 volts on the "I" terminal and ground on the "S" terminal for engaging). The actuation voltage is supplied from the highest voltage of either the auxiliary or main battery through F19. The voltage is supplied to the momentary switches mounted in the coach and then fed back to the relays in the box. (See Battery Disconnect schematic, Figure 2).

#### ***Charging Circuit***

The charging circuit, (which utilizes an isolator solenoid to connect the two batteries together for charging) will charge both batteries if either battery is being charged. It operates by sensing the voltage on the Main and Auxiliary batteries. If either voltage goes above 13.3 volts (the minimum necessary to fully charge a battery) for more than 14 seconds, the isolator solenoid will pull in, charging both batteries. If, while the ignition is on, the voltage falls below 12 volts for more than 4 seconds, the isolator relay will open keeping all of the alternator's outputs available for the chassis functions. If the ignition is off and the auxiliary battery voltage should drop below 12.8 volts (voltage of a fully charged battery) for 4 seconds, the isolator relay will open, preventing the coach loads from discharging the Main battery. (See Charging Circuit/Aux Start schematic, Figure 3).

#### ***Auxiliary Start***

The Auxiliary Start function is used to provide a "jump start" from the Auxiliary battery in the event that the Main battery does not have sufficient charge to start the engine. It operates by momentarily connecting the Main and the Auxiliary batteries together through the isolator relay. This function is accomplished by pressing the dash-mounted switch, which applies 12 volts to the isolator relay coil. The switch power is supplied by fuse F17. (See Charging Circuit/Aux Start schematic, Figure 3).

#### ***Ignition Switched Power***

The ignition circuits are switched by three relays to supply power to the horn, rear heater, power windows and the power seat. The power for these relay coils comes from the ignition switch through J4, pin 11. (See Charging Circuit/Aux Start schematic, Figure 3).

#### ***Fog Light Relay***

The Fog Light relay supplies 12 volts to the fog lights, when the coach is so equipped. To operate the fog lights, 12 volts from the ignition is fed to a dash-mounted fog light switch and is applied to the relay's coil, through pin 12 of J4. The fog light's power comes from the Main battery through fuse F13. It is switched by the relay and is routed from the printed circuit board through plug J4, pin 9. (See Fog Light schematic, Figure 4).

**Intellitec**

1485 Jacobs Rd.  
Deland, FL 32724  
386.738.7307

# **BATTERY CONTROL CENTER - MINI GAS**

## **SERVICE MANUAL**

The Battery Control Center is built in two layers, the printed circuit board and the relays. The box has been designed so that nearly ALL trouble shooting can be done without the removal of the printed circuit board. Read and understand the trouble shooting procedure first before EVER removing the printed board. The printed circuit board must be removed to repair the relays on the lower level.

### **Checking Fuses**

Once the outer box cover has been removed, ALL the fuses in the box are located on the printed circuit board and are easily visible for testing and replacement. The fuses can be checked either visually or with a test light.

To check the fuses visually: Remove the suspected fuse using the fuse tool supplied in the box and examine for damage to the fusing element.

To check using a test light: Ground the test light to the test ground terminal, J20, provided on the board. (See printed circuit board illustration, Figure 1) **Note: *This ground terminal should never be used for any other purpose.*** Check for power on both sides of the fuse. If applicable, make sure Battery Disconnect Relays and fog light switches are on when checking fuses.

### **Checking the Battery Disconnects**

The Battery Disconnect relay terminals are available at test points on the printed circuit board, making it unnecessary to remove the board for testing. These test points are located near the left edge of the board and are labeled. Each "S" terminal is available through a 1/4" spade connector, so that the test light can be clipped to it. There is a ground terminal at the bottom of the group that can be used for a test light ground.

To engage a relay, momentarily apply +12 volts to the "I" terminal, TP1 or TP2, and the "S" terminal, J19 or J21, is grounded. To open the relay, momentarily apply +12 volts to the "S" terminal and the "I" terminal is grounded.

### **Isolator Relay**

A push button to test the isolator relay is provided on the board to manually actuate the relay. It is located near the upper right corner of the board and labeled "AUX START" (See Figure 1). The coach must be unplugged and the engine and generator need to be off for at least ten minutes, to allow the isolator electronics to turn off the relay drive. Pressing this button should close the isolator relay, which can be detected by the clicking sound of the relay.

### **Circuit Breakers**

The converter circuit breakers, which are in parallel, carry the current between the Auxiliary battery and the converter. If the coach is not being supplied 120 volts AC, the current is flowing from the battery to the converter. If the coach is being supplied 120 volts AC, the converter is usually charging the batteries and the current will flow from the converter to the batteries. If there is a fault or overload between the converter and the batteries, the circuit breakers will open as indicated by the reset buttons being popped out. To reset the breakers, turn off the 12 loads and push the buttons in until they latch.

**Intellitec**

1485 Jacobs Rd.  
Deland, FL 32724  
386.738.7307

# **BATTERY CONTROL CENTER - MINI GAS**

## **SERVICE MANUAL**

### ***Printed Circuit Board Removal***

In the event that the printed circuit board needs to be removed, the following procedure should be followed:


- 1) Remove the negative wires from both batteries to prevent injury to individuals and the equipment. *Be sure that these wires stay clear of the battery posts.* Remove power to the converter.
- 2) Remove the cover of the Battery Control Center to expose the board.
- 3) Pull chassis harness plugs from connectors, J2, J4, and J5.
- 4) Note the locations of wires connected to Faston connectors, J9 through J12, and J15 through J18, located along the lower edge of the board next to J5. It is best to write down the wire positions and colors so that they can be re-connected correctly.
- 5) Pull relay harness plug from J1.
- 6) Note the locations of wires connected to output Faston connectors, J6, J7, J8, and J13, located along the upper edge of the board. It is best to write down the wire positions and colors so that these wires can be re-connected correctly.
- 7) Remove the 1/4" hex head bolt located near the center-right side of the board.
- 8) Remove the four #8 hex head screws located in the four corners and center of the board.
- 9) Remove the board.

### ***Printed Circuit Board Replacement***

Replace the board in the reverse order from the removal. Be sure to tighten the 1/4" hex head bolt going through the board, for it provides the power connection to the battery feed. Failure to properly tighten this bolt will lead to failure.

# BATTERY CONTROL CENTER - MINI GAS

## SERVICE MANUAL

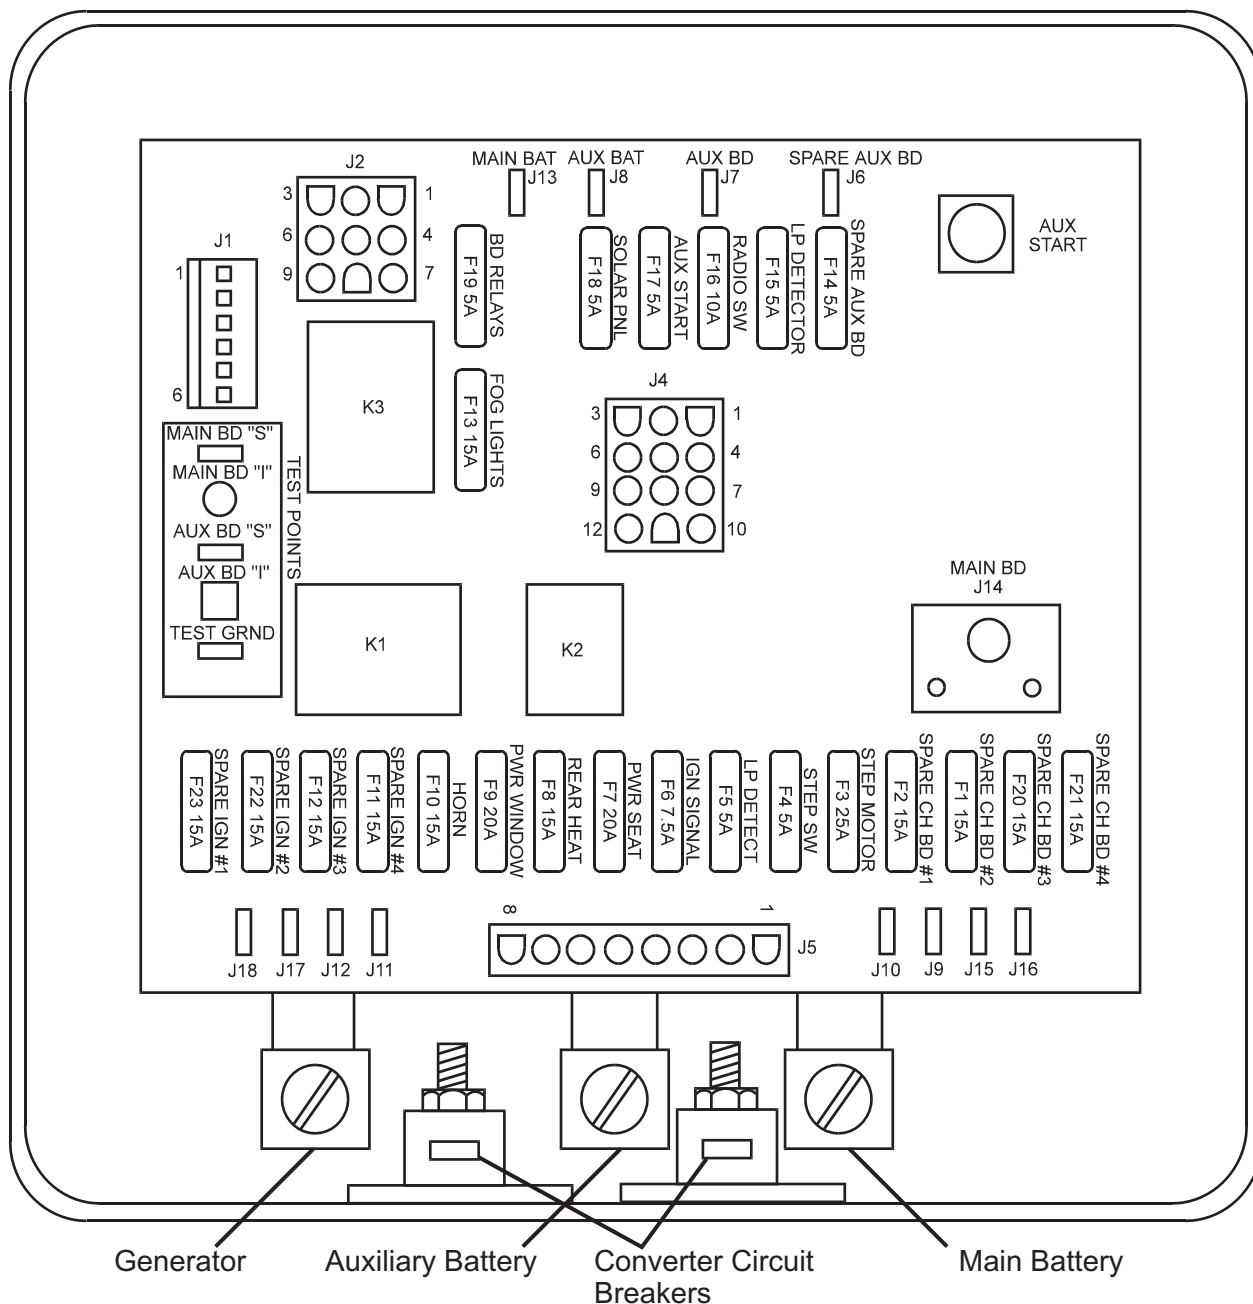

**Pictorial View  
Figure 1**

# **BATTERY CONTROL CENTER - MINI GAS**

## **SERVICE MANUAL**

### **Trouble Shooting - Battery Disconnect**

#### **A. Both relays fail to operate.**

1. Batteries may be dead. Check for voltage at the top end of F19 which is the feed from the higher of either the auxiliary or main battery. (F19 is located at the top left center of the printed circuit board). The voltage on F19 should be at least 11 volts. If the voltage is less, charge either battery. If the voltage is more than 11 volts, continue.
2. F19 may be blown. Check for voltage at the top of F19, using a test light. This voltage should be the same as at the bottom end. Replace fuse F19, if the voltage is not the same.
3. Ground lead to switches may be open. Check for ground and 12 volts on the "I" and "S" test points on the printed circuit board of the Disconnect Relay, while an assistant presses the Battery Disconnect switch in the coach.

#### **B. One relay fails to operate.**

1. Wiring or switch may be faulty. To check the operation, have an assistant operate the Battery Disconnect switch inside the coach. Check for voltage on the "I" and ground on the "S" terminal at the test points on the printed circuit board.
2. Disconnect Relay may be faulty. If at least 11 volts is available on the "I" or "S" terminal and the relay fails to operate, replace the relay.

#### **C. Main battery relay fails to operate.**

1. Ignition may be on. Check to be certain that the switched-ignition is 0 volts.
2. Interlock relay may be faulty. Check for 12 volt power feeding switch at plug J2 pin 8.
3. There may not be 12 volt power to the switch. If there is not 12 volts check fuse F19.

#### **D. Coach functions operate when coach is plugged in, but not from the battery.**

1. Circuit breakers feeding converter may be open. Reset circuit breakers in box.

# **BATTERY CONTROL CENTER - MINI GAS**

## **SERVICE MANUAL**

### **Trouble Shooting - Charging Circuit**

#### **A. Auxiliary battery does not charge.**

1. The isolator relay may not be closing. Operate the engine at a high idle for at least twenty (20) seconds and check the chassis battery voltage. The voltage must be at least 13.3 volts before the isolator activates. Check the alternator, if the voltage is less than 13.3 volts.

Check for voltage on the coil terminal of the isolator relay. This voltage is available on J1-5. If there is **no** voltage on the coil, replace the printed board. If there is voltage on the coil, check for voltage between the main and auxiliary batteries. If the voltage is more than 0.1 volts replace the relay.

#### **B. Main battery continues to drain.**

1. Isolator relay may be bad. Check for voltage on the solenoid coil lead which is available on J1-5, when the engine is off. If there is no voltage, replace the relay.

#### **C. Main battery doesn't charge from converter.**

1. The converter is not putting out at least 13.3 volts. Check converter, turn off excess 12 volt loads if necessary.
2. Converter circuit breakers in Battery Control Center open. Reset breakers are located on lower edge of box.

### **Auxiliary Start**

#### **A. Auxiliary Start fails to operate.**

1. Fuse 17 may be blown. Check F17.
2. The Auxiliary battery may be dead. Charge battery.
3. Isolator relay may be defective. To test the relay, press the "AUX START" switch on printed circuit board while measuring the voltage between the two batteries. (The isolator relay should "click" indicating that it is closing.) If the voltage is more than 0.1 volt, replace the relay.
4. Switch or wires may be faulty. Check for 12 volts at J4 pin 2, while pushing switch. If there is not 12 volts, check wiring, if OK, replace the switch.

# **BATTERY CONTROL CENTER - MINI GAS**

## **SERVICE MANUAL**

### **Trouble Shooting - Ignition Relay**

#### **A. The horn, electric step, power window, rear heater, or the power seat fail to operate.**

1. Check for 12 volt ignition power coming into printed circuit board on plug J4, pin 11.
2. Check respective fuse.
3. Check for faulty wiring from the ignition switch.
4. Replace the printed circuit board.

### **Fog Light Relay**

#### **A. Fog Lights fail to operate.**

1. Bulbs are burned out. Replace.
2. Ignition is not on.
3. No 12 volt power. Check fuse F13.
4. No power from the fog light switch. Check for voltage at J4, pin 12.
5. No 12 volt power to fog lights. Check for voltage at J4, pin 9.
6. Fog light relay has failed. Replace printed circuit board.

# BATTERY CONTROL CENTER - MINI GAS

## SERVICE MANUAL

### Fuses

The fuses used on the Battery Control Center are standard, plastic "ATO", blade (automotive) type. There are 23 positions for fuses on the board. These are fed from five main sources, the Disconnect-Switched Main Battery, the Ignition-Switched Main Battery, the Disconnect-Switched Auxiliary Battery and the Auxiliary Battery.

The 23 fuses and their size are as follows:

|                                                     |     |         | <b>Connector<br/>Pin-Out</b> |
|-----------------------------------------------------|-----|---------|------------------------------|
| <b><u>Disconnect-Switched Main Battery</u></b>      |     |         |                              |
| Spare                                               | F20 | 15 Amp  | J15                          |
| Spare                                               | F21 | 15 Amp  | J16                          |
| Spare                                               | F1  | 15 Amp  | J9                           |
| Spare                                               | F2  | 15 Amp  | J10                          |
| Step Motor                                          | F3  | 25 Amp  | J5-1                         |
| Step Switch                                         | F4  | 5 Amp   | J5-2                         |
| LP Detector                                         | F5  | 5 Amp   | J5-3                         |
| Power Seat                                          | F7  | 15 Amp  | J5-5                         |
| <b><u>Ignition-Switched Main Battery</u></b>        |     |         |                              |
| Ignition Signal                                     | F6  | 7.5 Amp | J5-4                         |
| Rear Heater                                         | F8  | 15 Amp  | J5-6                         |
| Power Window                                        | F9  | 20 Amp  | J5-7                         |
| Horn/Leveling Jacks                                 | F10 | 15 Amp  | J5-8                         |
| Spare                                               | F11 | 15 Amp  | J11                          |
| Spare                                               | F12 | 15 Amp  | J12                          |
| Spare                                               | F22 | 15 Amp  | J17                          |
| Spare                                               | F23 | 15 Amp  | J18                          |
| <b><u>Fog Light</u></b>                             | F13 | 15 Amp  | J4-9                         |
| <b><u>Disconnect-Switched Auxiliary Battery</u></b> |     |         |                              |
| Spare                                               | F14 | 15 Amp  | J6                           |
| LP Detector                                         | F15 | 5 Amp   | J4-4                         |
| Radio Switch                                        | F16 | 10 Amp  | J4-1                         |

# **BATTERY CONTROL CENTER - MINI GAS**

## **SERVICE MANUAL**

### ***Fuses***

#### **Auxiliary Battery**

|                 |     |       |      |
|-----------------|-----|-------|------|
| Auxiliary Start | F17 | 5 Amp | J4-2 |
| Solar Panel     | F18 | 5 Amp | J4-3 |

#### **Battery Disconnect**

|                          |     |       |      |
|--------------------------|-----|-------|------|
| Battery Disconnect Relay | F19 | 5 Amp | J2-7 |
|--------------------------|-----|-------|------|

### ***Circuit Breakers***

There are two, 30 Amp type III (manual reset), circuit breakers mounted in the box. They are connected to the Auxiliary battery through the Disconnect relay. These breakers are intended to connect to the converter and fuse panel within the Auxiliary. These circuit breakers are located at the bottom of the box, near the front edge. To reset the breakers, press the buttons on the ends

### ***Plugs - Pins & Functions***

#### **J1 - 8 pin in-line (KK-156)**

| <b>Pin</b> | <b>Function</b>                |
|------------|--------------------------------|
| 1          | Main BD "I" terminal           |
| 2          | Main BD "S" terminal           |
| 3          | Auxiliary BD "S" terminal      |
| 4          | Auxiliary BD "I" terminal      |
| 5          | Isolator Relay "hot" terminal  |
| 6          | Isolator Relay ground terminal |

# **BATTERY CONTROL CENTER - MINI GAS**

## **SERVICE MANUAL**

### **Plugs - Pins & Functions**

**J2 - 9 pin Mate-N-Lok Mating Housing Amp 1-480706-0**

| Pin | Function                                    | Fuse |
|-----|---------------------------------------------|------|
| 1   | Main BD "I" terminal                        |      |
| 2   | Main BD "S" terminal                        |      |
| 3   | Auxiliary BD "S" terminal                   |      |
| 4   | NC                                          |      |
| 5   | NC                                          |      |
| 6   | Auxiliary BD "I" terminal                   |      |
| 7   | Auxiliary BD power, (Aux. Bat.)             | F19  |
| 8   | Main BD power, (Aux. Bat.), ignition switch |      |
| 9   | BD Relay ground                             |      |

**J4 - 12 pin Mate-N-Lok Mating Housing AMP 1-480708-0**

| Pin | Function             | Fuse |
|-----|----------------------|------|
| 1   | Radio Switch         | F16  |
| 2   | Aux Start Switch     | F17  |
| 3   | Solar Panel          | F18  |
| 4   | L. P. Det. (Aux.)    | F15  |
| 5   | NC                   |      |
| 6   | Ground               |      |
| 7   | NC                   |      |
| 8   | NC                   |      |
| 9   | Fog Lights           | F13  |
| 10  | Aux Start Relay Coil |      |
| 11  | Ignition Relay Coil  |      |
| 12  | Fog Light Relay Coil |      |

# **BATTERY CONTROL CENTER - MINI GAS**

## **SERVICE MANUAL**

### ***Plugs - Pins & Functions***

**J5 - 8 pin Mate-N-Lok Mating Housing AMP 640586-1**


| <b>Pin</b> | <b>Function</b>     | <b>Fuse</b> |
|------------|---------------------|-------------|
| 1          | Step Motor          | F3          |
| 2          | Step Switch         | F4          |
| 3          | L. P. Det. (Main)   | F5          |
| 4          | Ignition Signal     | F6          |
| 5          | Power Seat          | F7          |
| 6          | Rear Heater         | F8          |
| 7          | Power Window        | F9          |
| 8          | Horn/Leveling Jacks | F10         |

# BATTERY CONTROL CENTER - MINI GAS

## SERVICE MANUAL


BATTERY CONTROL CENTER

COACH SWITCH PANEL

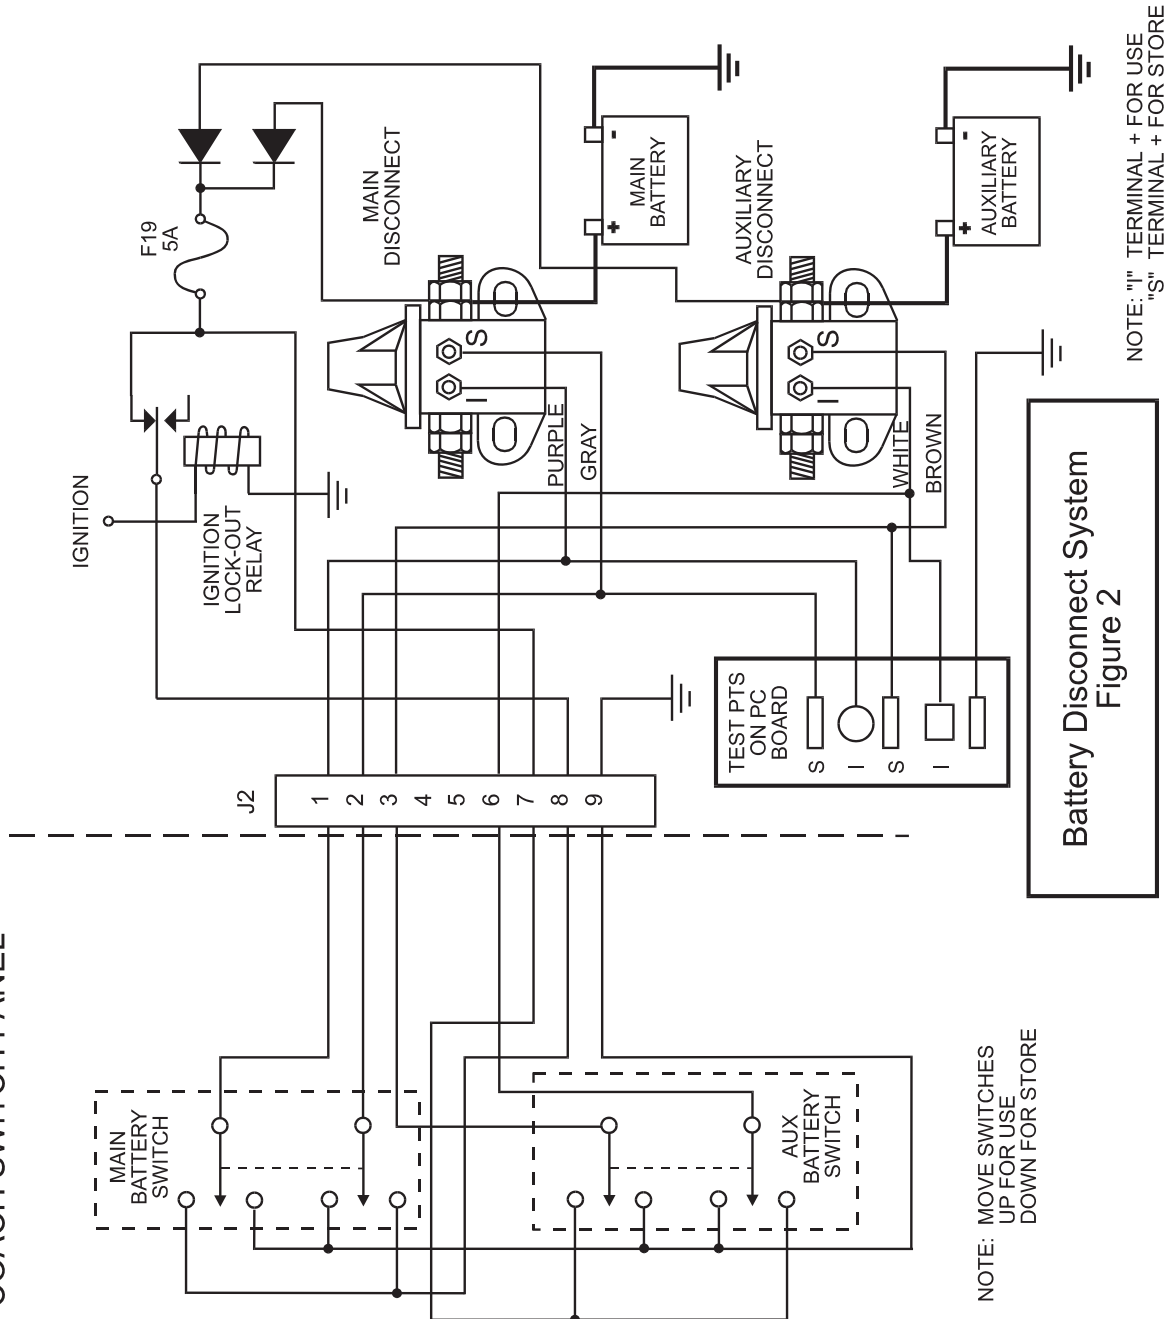

# BATTERY CONTROL CENTER - MINI GAS


## SERVICE MANUAL

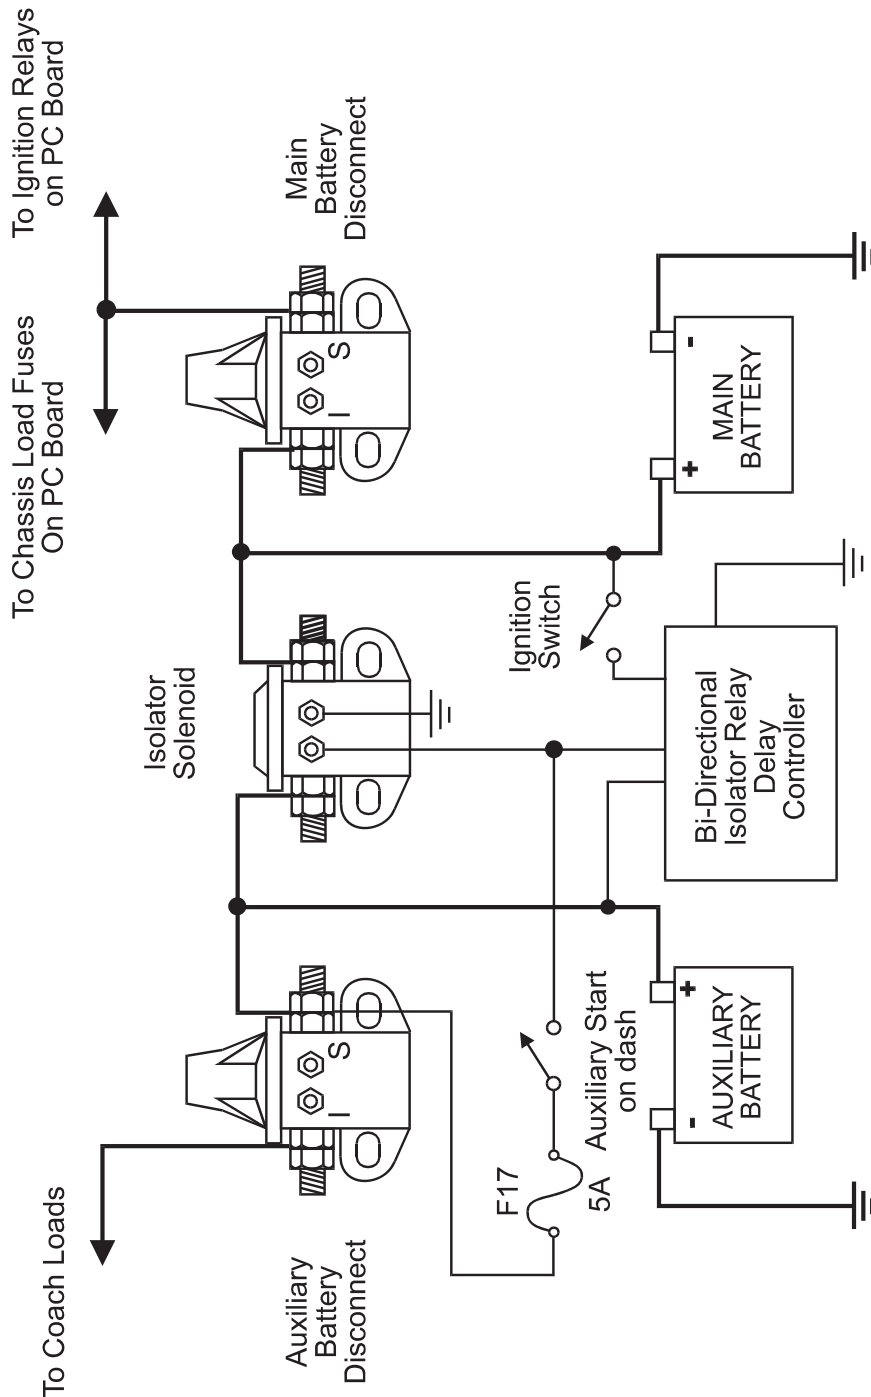

Charging/Auxiliary  
Start System  
Figure 3

# BATTERY CONTROL CENTER - MINI GAS


## SERVICE MANUAL

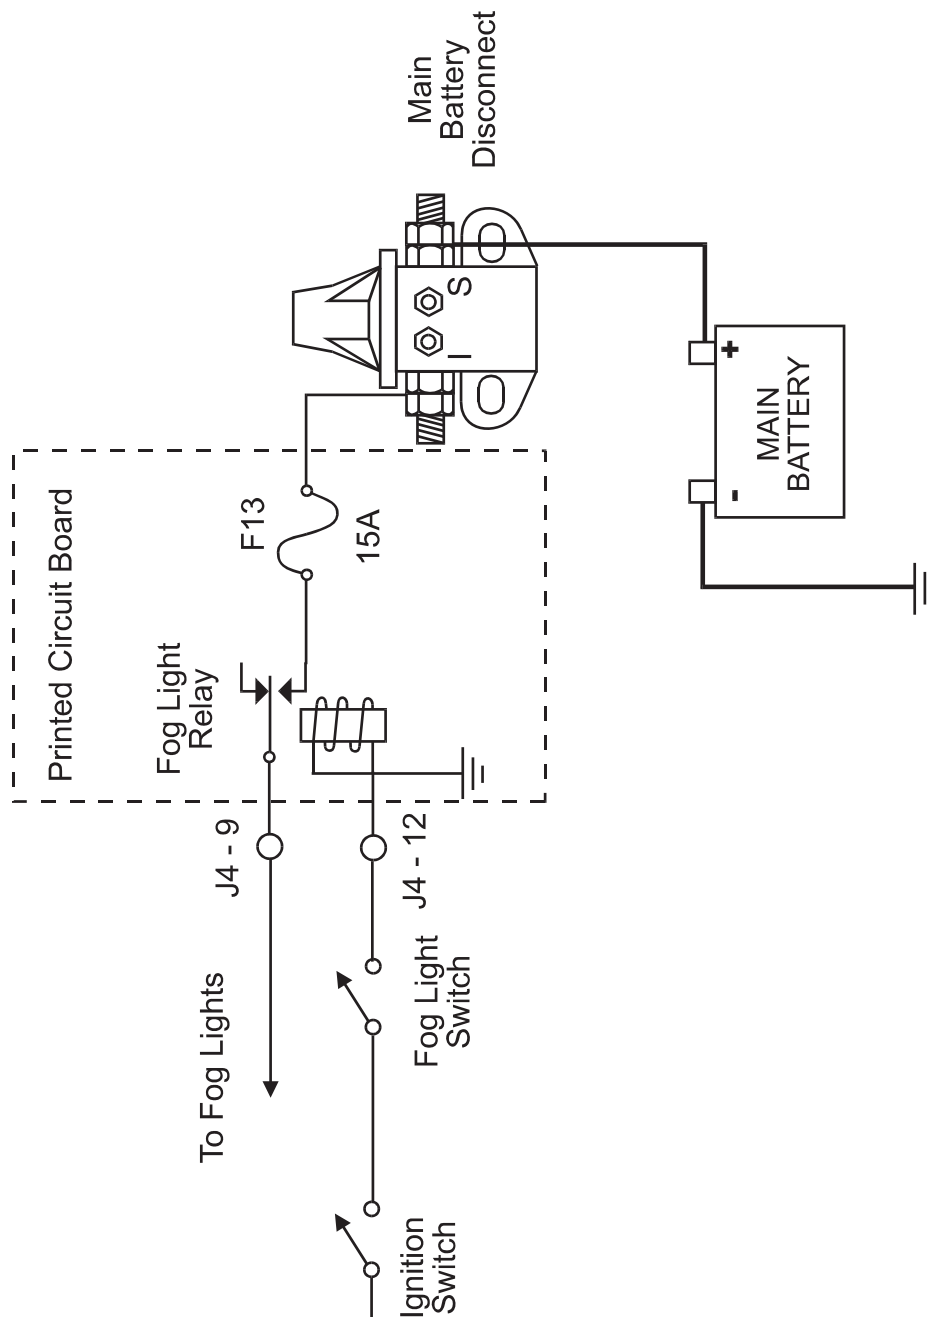

Fog Light Relay  
Circuit  
Figure 4

# BATTERY CONTROL CENTER - MINI GAS

## SERVICE MANUAL

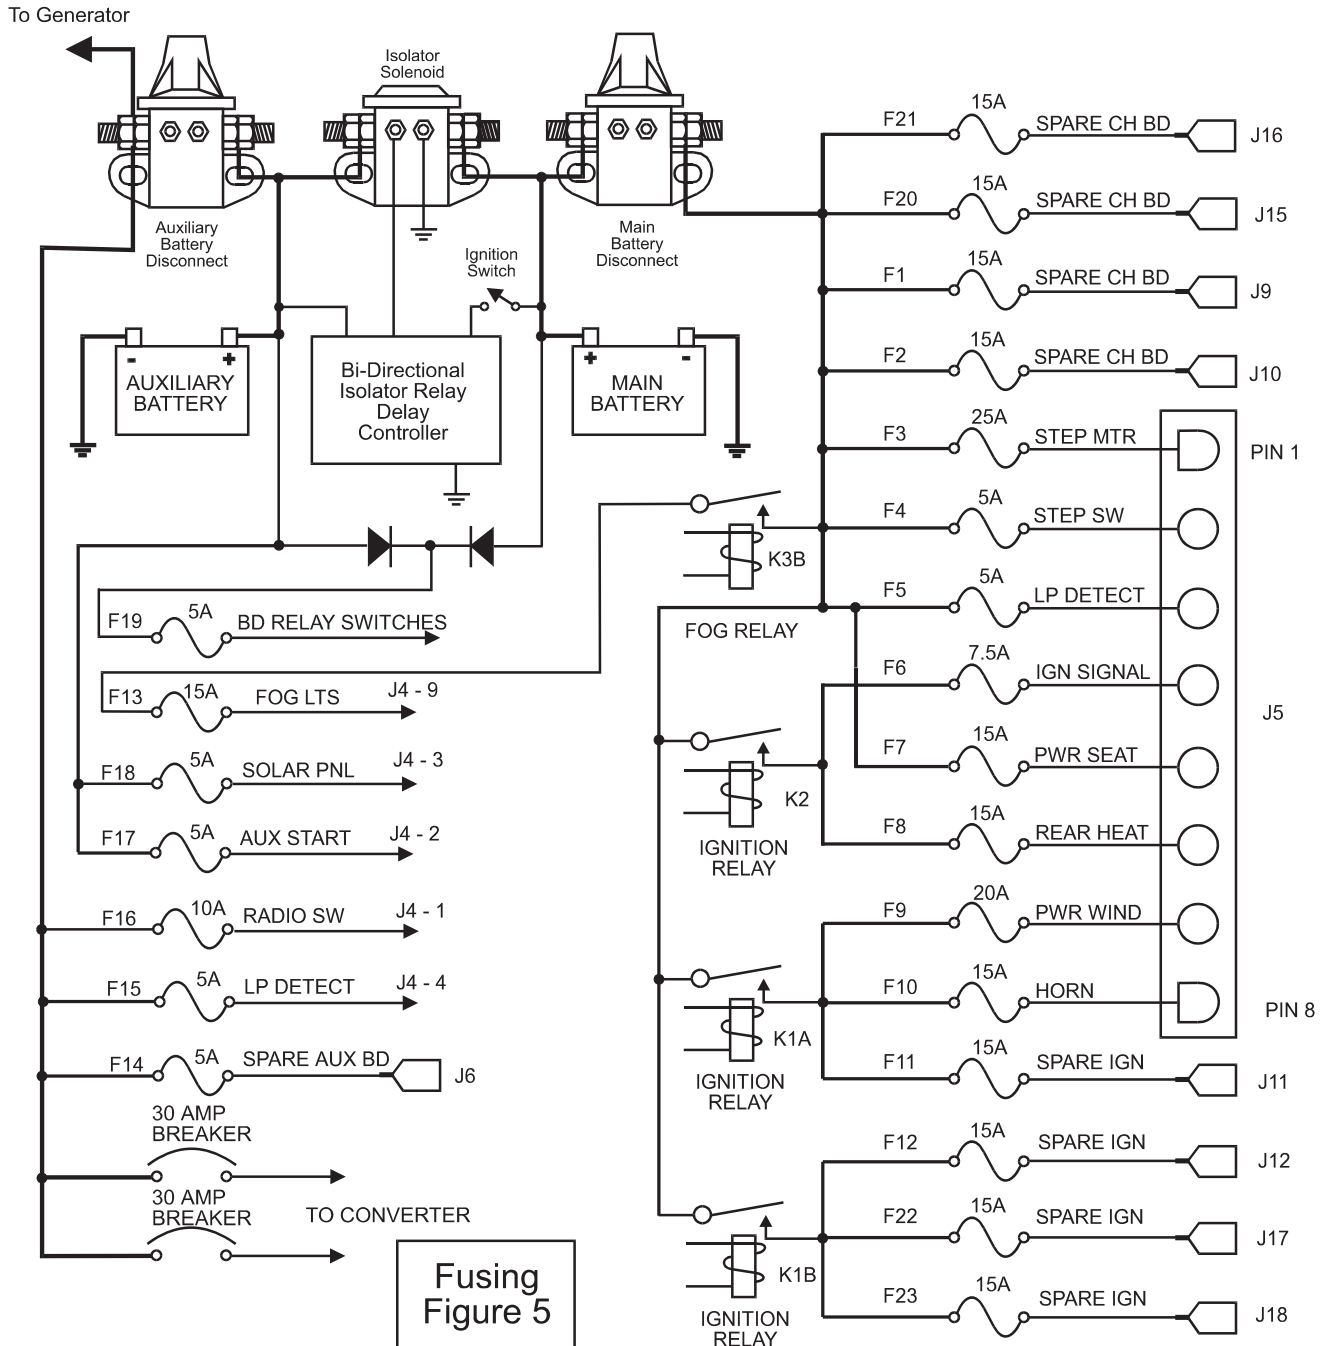

**Intellitec**

1485 Jacobs Rd.  
Deland, FL 32724  
386.738.7307

---



---

# This manual is provided courtesy of **RV Tech Cheat Sheet**



**Professional resources for the whole RV industry — free.**

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.

---



---

**[rvtechcheatsheet.com/manuals](https://rvtechcheatsheet.com/manuals)**

**Find thousands more RV manuals, wiring diagrams and parts lists**

**RV techs:** share fixes, ask questions and learn from each other.

**Join our free Facebook group →**

---



---

Follow proper safety practices. If in doubt, consult a professional RV technician.