

Battery Disconnect

Meet the remote battery disconnect that makes sure a RV's batteries are alive, well and ready for the road.

Battery Disconnect is an easy-to-install system that will allow RV owners to disconnect coach and chassis batteries with just the touch of a switch. With **Battery Disconnect**, the owner can be sure the batteries are disconnected when his RV is not in use or being stored off-season. It is conveniently located inside the RV, and it's all remote.

The heart of the **Battery Disconnect** system is another Intellitec invention. A latching relay, capable of carrying heavy coach currents, draws power only when switched on or off; yet, it requires no power to stay open or closed. This sturdy relay is sealed against the environment and is designed for the toughest use.

Unwanted battery drain during storage, or when the RV is not in use, is not the only customer benefit of **Battery Disconnect**. Batteries are protected from overcharging when the RV is plugged in for an extended time. Battery Disconnect also prevents shorts or fire hazard while working on the 12 Volt electrical system.

Easy Installation

Installation detail is straightforward, easy-to-follow, and is simple enough that your customers can install it themselves. *(Shown on the reverse side of this sheet.)*

If help is needed, there is a toll-free number that you can call for assistance from Intellitec.

 **Intellitec**
1485 Jacobs Rd.
Deland, FL 32724
386.738.7307

Models and Specifications

There are four Battery Disconnect models in the product line. There is one that's right for every RV and every customer. **See model choices with part numbers as listed.**



Intended for remote disconnect of a single battery. Requires a relay, 20 ft. of cable, and a monitor panel with ON/OFF indicator.



Intended for remote disconnect of a single battery. Requires a relay, 20 ft. of cable, a monitor panel with ON/OFF indicator, and digital voltmeter.



Intended for remote disconnect of both coach and chassis batteries of motor homes. The BD2 system requires two relay, 25 ft. of cable, monitor panel with two ON/OFF indicators, and ignition interlock to prevent disconnection while engine is running.



Intended for remote disconnect of both coach and chassis batteries of motor homes. The BD3 requires two relays, 25 ft. of cable, and monitor panel with two ON/OFF indicators, digital voltmeter and ignition interlock to prevent disconnection while engine is running.

P/N 53-00066-000 Rev. C 032119



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.