

BATTERY GUARD

on 1995 GM Suburbans

INSTALLATION INSTRUCTIONS

Before beginning the installation of this system, please read all these instructions carefully. This will help to prevent mis-understandings that could cause problems with the installation.

Step 1. Disconnect the battery ground to prevent possible short circuits during installation.

Step 2. Cut the #10 gauge black with red stripe wire, coming from the positive post of the battery, approximately two inches from the battery post. *This wire will be spliced later in the installation.*

Step 3. Select a mounting location on the passenger wheel well, close to the firewall to mount the Battery Disconnect Relay. Mount the relay with grey cap facing downward, using two #10 self-tapping screws and washers.

Step 4. Mount the control box inside vehicle, using four #8 self-tapping screws. *(A suggested position is under the dash, on the firewall.)*

Step 5. Select a mounting position for the Reset switch on the dash, in a position that will make it clearly in view of the driver. Drill a 3/8" hole in the panel.

Step 6. Uncoil the harness and locate the three (3) pin plug. Connect it to the Reset switch, being sure that the latch on the plug faces the front of the switch. Mount the switch in the previously drilled hole (*step 5*) using the two nuts (*provided*). Install the knob.

Step 7. Route the wires from the switch to the Control box and plug the nine (9) pin plug into the connector on the Control box. *This plug is polarized to prevent it from being plugged in wrong.* Be sure that it is properly seated.

Step 8. Connect the "free end" of the orange wire from the 9 pin plug, to an ignition switched source, +12 volts. *This can usually be picked from the OEM fuse block.*

Step 9. Run the remaining four wires from the nine (9) pin plug to the relay, through a hole in the firewall and route them to the Disconnect Relay.

Step 10. Connect the white and brown wires to the small Disconnect Relay terminals, marked "I" and "S". Connect the white wire to the "I" terminal. Connect the brown wire to the "S" terminal. Connect the black wire to a good ground on the chassis, using a #8 self-tapping screw. Remove the 5 Amp fuse from it's holder. Insert the red wire into the back of housing on the relay. Reinstall the 5 Amp fuse.

Step 11. Connect the 2' long, two wire extension harness to the Battery Disconnect relay, using the ring lugs provided. Connect the red wire to the BATTERY IN terminal and the black wire to the BATTERY OUT terminal. *Tighten the lugs on the relay using two wrenches to be sure that the rear nut and stud does not turn.* Route the other end of this harness along the wheel well, forward to the battery. Secure in place using tape or plastic ties.

Step 12. Strip approximately 1/4" of insulation from the "free end" of the black with red stripe wire, coming from the vehicle harness (*step 1*). Connect this wire to the red wire, using the butt splice connectors (*supplied*).

Step 13. Strip approximately 1/4" of insulation from the free end of the black with red stripe wire, coming from the battery post. *(CAUTION: If ground wire was not disconnected in Step 1, this wire will be hot.)* Connect it to the black wire, using the butt splice connector (*not supplied*).

Step 14. Re-connect the ground wire to the Battery.

Intellitec

1485 Jacobs Rd.
Deland, FL 32724
386.738.7307

BATTERY GUARD

on 1995 GM Suburbans

INSTALLATION INSTRUCTIONS

SYSTEM TEST

The system is now ready for testing. To test:

Press the **TEST** button on the edge of the control box.

The Disconnect Relay should be disconnected and all power to the vehicle should be off. The LED on the RESET switch should be blinking at a rate of approximately once every two seconds.

Press the **RESET** button.

The Disconnect Relay should go on and the power to the vehicle should be restored.

Turn the ignition switch on. Press the TEST button.

The Disconnect Relay should click, but remain connected. If it disconnects, check to be sure that the orange wire is getting ignition switched, +12 volts. *(This step is very important to be sure that the system will not disconnect the battery while the ignition is on.)*

The installation is now complete.

BYPASS TERMINAL

There is a 1/4" slide-on connector on the Control box, marked "BYPASS". This terminal is connected directly to the battery through a 5 Amp fuse on the Disconnect Relay.

It will NOT be shut off by Battery Guard.

It is intended to be used to power limited accessories that want to remain hot, such as radio, or telephone memories and can provide for a connection from a solar panel to the battery.

Intellitec

1485 Jacobs Rd.
Deland, FL 32724
386.738.7307



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.