

BATTERY GUARD on GM Astro Vans

INSTALLATION INSTRUCTIONS

Before beginning the installation of this system, please read all these instructions carefully. This will help to prevent misunderstandings that could cause problems with the installation.

Step 1. Disconnect the battery GROUND to prevent possible short circuits during installation.

Step 2. Cut the 10AWG black wire w/red stripe that is coming from the positive post on the battery, approximately two inches from the battery post. *(This wire will be spliced later in the installation.)*

Step 3. Select a mounting location near the vehicle battery, for the Battery Disconnect Relay. *(It is recommended that the relay be mounted on the firewall above the battery.)* Mount the relay with the grey cap facing downward, using two (2) #10 self-tapping screws and washers.

Step 4. Mount the control box inside the vehicle, using four (4) self-tapping screws. *(Suggested position is under the dash, on the engine cowl.)*

Step 5. Drill a 3/8" hole,, in the lower, right-hand side of the dash for mounting the "reset switch".

Step 6. Uncoil the harness and locate the three (3) pin plug. Connect the 3-pin plug to the reset switch. Be sure that the latch on the plug faces the front of the switch. Mount the switch in the hole drilled in step 5. Use the two (2) nuts provided. Install the switch knob.

Step 7. Route the wires from the switch...to the Control box. Plug the nine (9) pin plug into the connector on the Control box. *(This plug is polarized to prevent it from being plugged in wrong.)* Be sure that it is properly seated.

Step 8. Connect the free end of the orange wire that is coming from the nine (9) pin plug into an ignition source. *(This can usually be picked from the OEM fuse block.)*

Step 9. Run the four (4) remaining wires, from the nine (9) pin plug on the relay, through a hole in the firewall and route them to the Relay.

Step 10. Connect white and brown wires to the small Disconnect relay terminals, marked "I" and "S". The white wire connects to the "I" terminal and the brown wires connects to the "S" terminal. Connect the black wire to a good ground on the chassis, using a #8 self-tapping screw. Remove the fuse from it's holder and insert the red wire into the back of the housing on the relay. Reinstall the 5 Amp fuse

Step 11. Strip approximately 1/4" of insulation from the "free end" of the black wire w/red stripe that is coming from the vehicle harness *(cut in step 1.)* Insert this wire into the large ring lug *(provided)* and securely crimp it. Put the ring lug on the large pose of the Disconnect Relay *(Opposite the fuse, on the side towards the driver's side of the vehicle.)* Secure the nut on the lug and tighten it. *Use two wrenches to be sure that the rear nut and stud does not turn.*

Step 12. Strip approximately 1/4" of insulation from the "free end" of the black wire w/ red stripe, coming from the battery post. **(CAUTION:** If GROUND wire was NOT disconnected during step 1, this wire will be HOT.) Slide this wire into the crimp connector on the "free end" of the wire, from the installation kit, and securely crimp it.

Step 13. Reconnect the GROUND wire to the Battery.

Intellitec

1485 Jacobs Rd.
Deland, FL 32724
386.738.7307

BATTERY GUARD on GM Astro Vans

INSTALLATION INSTRUCTIONS

SYSTEM TEST

The system is now ready for testing. To test, press the **TEST** button on the edge of the control box. The Disconnect Relay should be disconnected and ALL POWER to the vehicle should be OFF. The LED on the **RESET** switch should be blinking at a rate of approximately once every two seconds.

Press the **RESET** button.

The Disconnect Relay should go on and the power to the vehicle should be restored.

Turn the ignition switch on.

Press the **TEST** button. The Disconnect Relay should click, but remain connected.

If it disconnects, check to be sure that the orange wire is getting ignition switched, 12 volts.

(This step is very important to be sure that the system will not disconnect the battery while the ignition is on.)

The installation is now complete.

BYPASS TERMINAL

There is a 1/4" slide-on connector on the Control box, marked "BYPASS". This terminal is connected directly to the battery, through a 5 Amp fuse on the Disconnect Relay.

It will NOT be shut off by Battery Guard.

It is intended to be used to power limited accessories that want to remain hot, such as radio, or telephone memories and can provide for a connection from a solar panel to the battery.

Intellitec

1485 Jacobs Rd.
Deland, FL 32724
386.738.7307



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.