


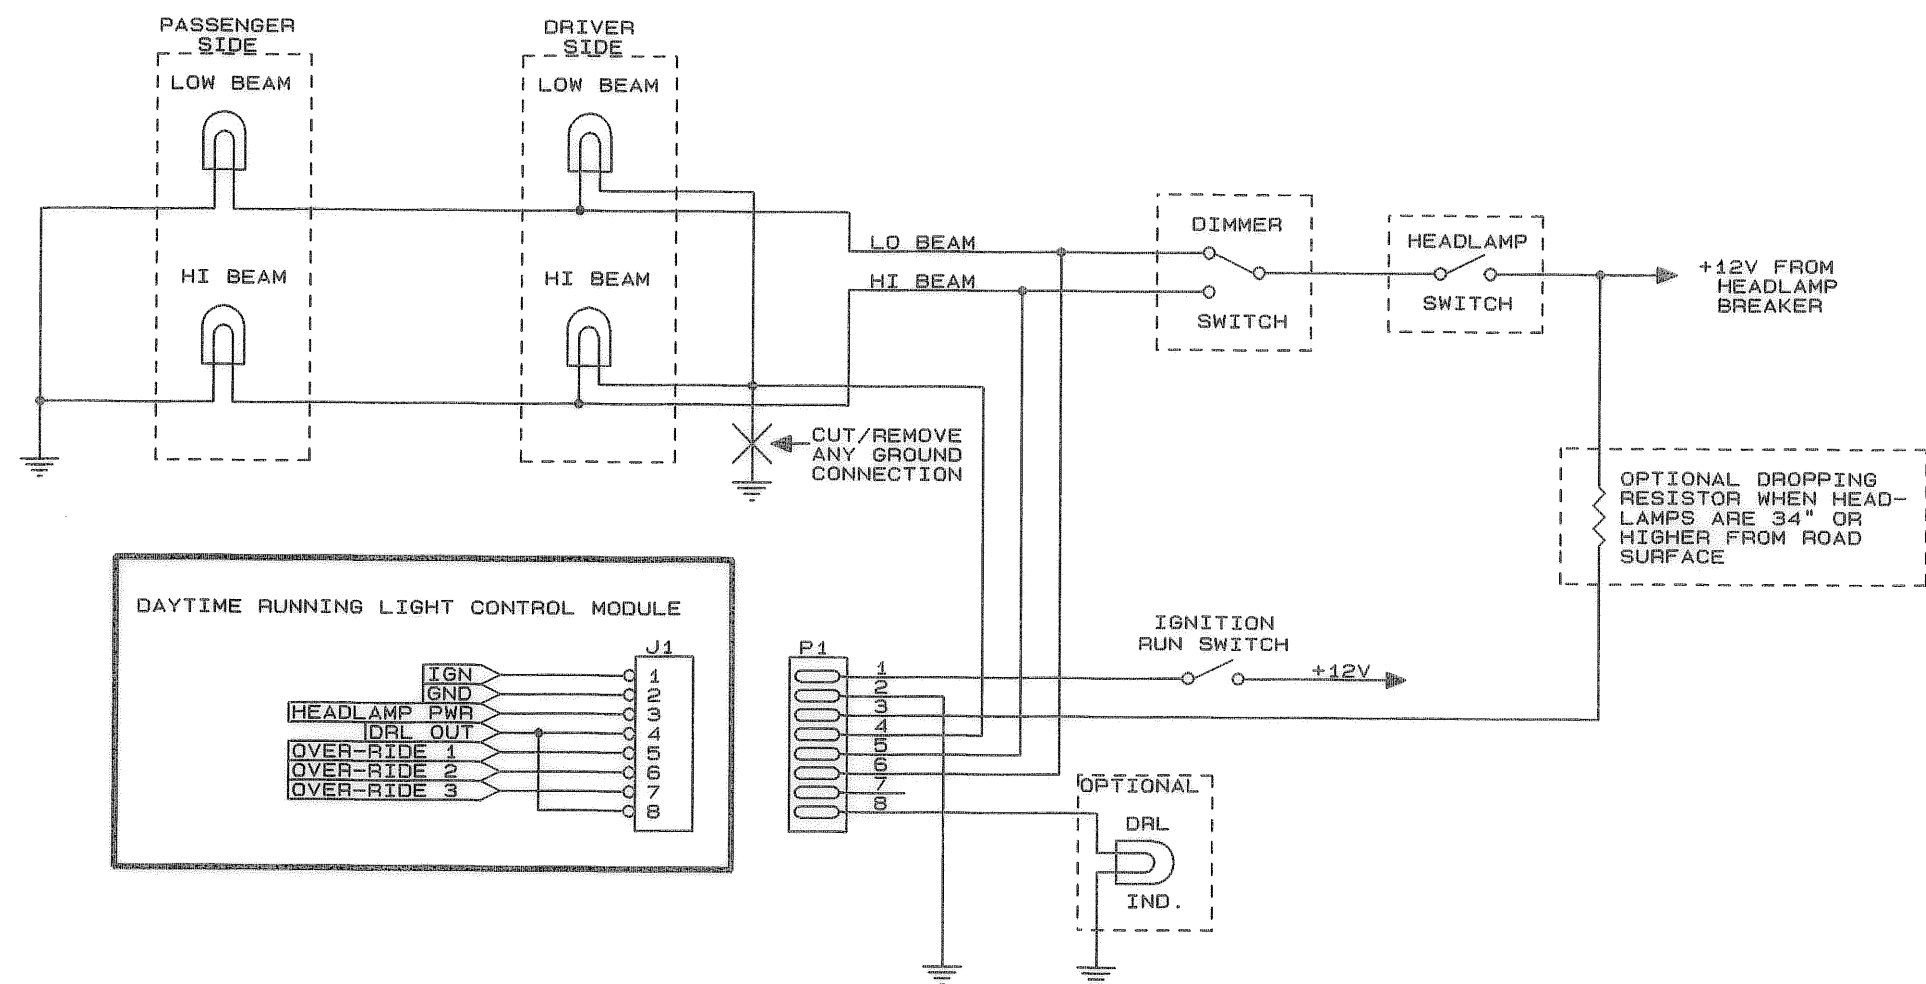

NOTES:

1. THE DAYTIME RUNNING LIGHT CONTROL AUTOMATICALLY WIRES THE HEADLAMPS IN SERIES AND TURNS THEM ON WHEN THE IGNITION SWITCH IS PLACED IN THE "RUN" POSITION. THE OPTIONAL DRL INDICATOR WILL ILLUMINATE.
2. OPERATION OF THE HEADLAMP SWITCH AUTOMATICALLY OVERRIDES THE DRL CONTROL AND CAUSES THE APPROPRIATE HI OR LO BEAM LAMPS TO ILLUMINATE. DEACTIVATION OF THE HEADLAMP SWITCH CAUSES THE DRL LAMPS TO ILLUMINATE AFTER APPROX. 1 SECOND.

Added and approved by:

INTELLITEC		
Electrical Systems		
Title		
DAYTIME RUNNING LIGHT CTRL WIRING DIAGRAM		
Size	Document Number	REV
B	53-00678-000	X1
Date:	February 24, 1995	Sheet 1 of 1



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.