



131 Eisenhower Lane N., Lombard, IL 60148  
630 268 0010 800 251 2408  
www.intellitescvs.com

## PMC Sealed Output Module with Short Circuit Protection and Lamp Dimmer Control

00-00888-600/610/604/614

The PMC Output Modules, 00-00888, are members of Intellitec's Programmable Multiplex Control family. They work in combination with the PMC CPUs and other standard, semi-custom, or custom I/O modules. These modules provide protected solid-state outputs eliminating the need to add fuses or circuit breakers on each output. In addition, the -604 and -614 modules provide the capability of dimming lights that are connected to outputs 5-10.

The modules provide power switching, circuit protection and distribution. Switching is accomplished via long life, field effect transistors instead of relays. Circuit protection is accomplished by using short circuit protected FETs and proprietary design elements. Each output will handle 10 Amps. The total module current is limited by the "I squared rule" on the following page.

The approximate module dimensions are 6.6" X 4.250" X 1.75" (16.8mm X 10.8mm X 4.4mm). These modules are water-proof and can be located where moisture may be present.

The 888 module can be set for module addresses, A-P. Using the chart on the next page, connect jumpers in the plug, J1.

### **PWM (PULSE WIDTH MODULATION) PROVIDES VARIABLE POWER**

The 888-600 and 610 modules do not have dimmable outputs.

The 888-604 and 614 modules provide the ability to dim lights from any Intellitec multiplex keypad or momentary switch input. Channels 5-10 on the -604 and -614 are dimmable outputs.


These modules dim the lights using pulse width modulation or PWM. Variable power is applied to the load by quickly turning the power on and off. Varying the duty cycle will vary the intensity of the lamp.

The six outputs coming out of J3(ch 5-10) will operate to dim lights. The four outputs coming out of J2 (ch 1-4) are not dimmable and can be used to power loads such as water pumps or fluorescent lights that should not be connected to variable voltage.

For the dimmable outputs, the output will latch on at the output module. To turn the output on, all that is required is that it's PMC channel be turned on momentarily. When the channel comes on, the output turns on and latches. When the channel turns off, the output remains latched until the channel turns on again, at which time the output turns off.

### **VERSION 00-00888-600 AND 610 non-dimmable**

The outputs on these units will operate as any other PMC output. To keep the output on, it's channel must be on.

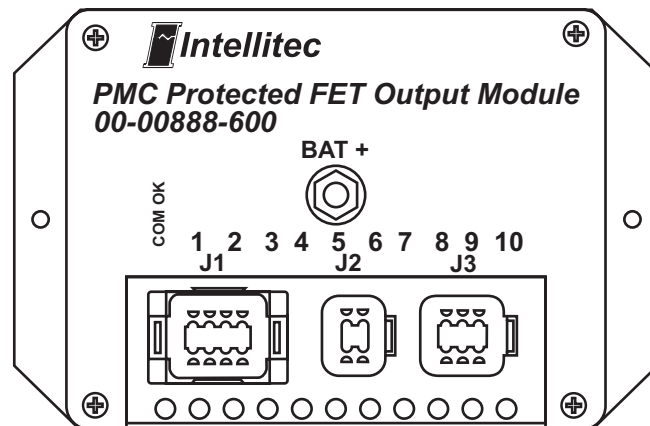

### **OPERATING EXAMPLE FOR DIMMABLE OUTPUT**

If the lighting output channel is B3 and a momentary push button is placed at D5 you could write a boolean such as B3=D5. When momentary button D5 is pressed and released the output associated with B3 will turn on at 100% intensity and remain on even though switch channel D5 is off. When D5 is pressed and released a second time, output B3 will turn off. This happens because the output is latched on and off at the module.

When button D5 is pressed and held, the output will begin to ramp up, increasing the lamp intensity. When the button is let go, the lamp will remain at that intensity. Pressing and holding the button a second time will cause the intensity to begin ramping down. When the button is released, the lamp will remain at that intensity. Pressing and releasing the button quickly will cause the output to toggle off. If power has been maintained at the module, the output will remember it's last intensity setting next time it is turned on.

### **PROGRAMMING A GLOBAL RESET OF LATCHED DIMMABLE CHANNELS**

Because the dimmable channels latch on or in other words can be on when the associated PMC channel is off, Intellitec has provided channel P1 as a global reset channel.

If one or more outputs on one or more modules is latched on, they can all be turned off by momentarily turning on PMC channel P1. This could be accomplished in two ways. A momentary push button on the Intellitec keypad could be set to channel P1. By pressing this button all latched outputs will turn off. An alternative would be to write a boolean that momentarily turns channel P1 on when another input is turned on.

### **LED DIAGNOSTIC INDICATORS**

A row of diagnostic LEDs has been provided on the module. The first LED will be on when the module receives a valid PMC communications signal. LEDs 2-11 will illuminate when their associated output is on.



131 Eisenhower Lane N., Lombard, IL 60148  
630 268 0010 800 251 2408  
www.intellitecsve.com

## PMC Sealed Output Module with short circuit protection and Lamp Dimmer Control

00-00888-600/610/604/614

### SPECIFICATIONS

#### Modules

Nominal Vehicle Voltage

#### Non-dimmable outputs

00-00888-600 00-00888-610

24V 12V

#### NOTES:

Outputs do not latch.  
The associated PMC channel must be kept ON to keep an output ON.

#### Dimmable outputs

00-00888-604 00-00888-614

24V 12V

Dimmable outputs 5-10, latch on and off when their associated PMC channel is momentarily turned ON.

For non dimmable outputs the associated PMC channel must be kept ON to keep the output ON.

### GENERAL CONNECTIONS

|      |                                              |             |
|------|----------------------------------------------|-------------|
| J1-1 | No Connection                                |             |
| J1-2 | Communications Signal + (from Master or CPU) | 16 Awg Min. |
| J1-3 | Communications Signal - (from Master or CPU) | 14 Awg Min. |

### CHANNEL DESIGNATIONS

| Channel | Connection | Type       | Rating        |
|---------|------------|------------|---------------|
| 1       | J2-1       | FET Output | 10 Amp Max ** |
| 2       | J2-2       | FET Output | 10 Amp Max ** |
| 3       | J2-3       | FET Output | 10 Amp Max ** |
| 4       | J2-4       | FET Output | 10 Amp Max ** |
| 5       | J3-1       | FET Output | 10 Amp Max ** |
| 6       | J3-2       | FET Output | 10 Amp Max ** |
| 7       | J3-3       | FET Output | 10 Amp Max ** |
| 8       | J3-4       | FET Output | 10 Amp Max ** |
| 9       | J3-5       | FET Output | 10 Amp Max ** |
| 10      | J3-6       | FET Output | 10 Amp Max ** |

#### "I SQUARED RULE"

\*\* Total module current is limited by the following.  
The sum of the current squared for each output may not exceed 350.

$$I_1^2 + I_2^2 + I_3^2 + I_4^2 + I_5^2 + I_6^2 + I_7^2 + I_8^2 + I_9^2 + I_{10}^2 < 350$$

**Failure to follow this rule may cause module failure.**

### MATING CONNECTIONS

#### Designator Function

|      |                           |
|------|---------------------------|
| Stud | Battery                   |
| J1   | Communication and address |
| J2   | Outputs                   |
| J3   | Outputs                   |

#### Connector

|                  |
|------------------|
| 1/4" Ring Term   |
| Deutsch DT04-8PA |
| Deutsch DT04-4P  |
| Deutsch DT04-6P  |

#### Mating Part #

|                   |
|-------------------|
| Deutsch DT06-08SA |
| Deutsch DT06-04S  |
| Deutsch DT06-06S  |

### MODULE SETTINGS

A module can be set for 1 of 16 addresses or A-P. This is done with wire jumpers from pin J1-4 to pins J1-5 through J1-8 as listed in the table shown here. This makes the method of setting the address waterproof.

#### 1 = connect to J1-4

This method of address setting vs dip switches or jumpers provides the additional advantage of having the module address set by the harness. Replacement parts do not require that the address be set prior to shipment.

J1- 4  
connected  
to J1- MODULE

| 8 | 7 | 6 | 5 | Address |
|---|---|---|---|---------|
| 1 | 1 | 1 | 1 | A       |
| 1 | 1 | 1 | X | B       |
| 1 | 1 | X | 1 | C       |
| 1 | 1 | X | X | D       |
| 1 | X | 1 | 1 | E       |
| 1 | X | 1 | X | F       |
| 1 | X | X | 1 | G       |
| 1 | X | X | X | H       |

J1- 4  
connected  
to J1- MODULE

| 8 | 7 | 6 | 5 | Address |
|---|---|---|---|---------|
| X | 1 | 1 | 1 | I       |
| X | 1 | 1 | X | J       |
| X | 1 | X | 1 | K       |
| X | 1 | X | X | L       |
| X | X | 1 | 1 | M       |
| X | X | 1 | X | N       |
| X | X | X | 1 | O       |
| X | X | X | X | P       |

---



---

# This manual is provided courtesy of **RV Tech Cheat Sheet**



**Professional resources for the whole RV industry — free.**

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.

---



---

**[rvtechcheatsheet.com/manuals](https://rvtechcheatsheet.com/manuals)**

**Find thousands more RV manuals, wiring diagrams and parts lists**

**RV techs:** share fixes, ask questions and learn from each other.

**Join our free Facebook group →**

---



---

Follow proper safety practices. If in doubt, consult a professional RV technician.