


Touchlite™

Intellitec's TouchLite™ is a sensor pad activated control for outdoor lighting. When wired into an existing 12 Volt outdoor porch light, it provides 30 seconds of light to allow the user to find the door key and unlock the door in a darkened area.

TouchLite™ wires in parallel with the existing outdoor light switch. It will in no way interfere with the normal operation of the switch. It easily installs by drilling a 3/8" diameter hole through the coach wall and mounting the control on the inside and the sensor pad on the outside.

The sensor touch-pad is of non-corrosive stainless steel, over molded with clear plastic to allow the color of the surface to which it is mounted to show through.

TouchLite™ provides just enough time to allow you to find your keys on that dark night in a secluded camp ground. Just touch and go!

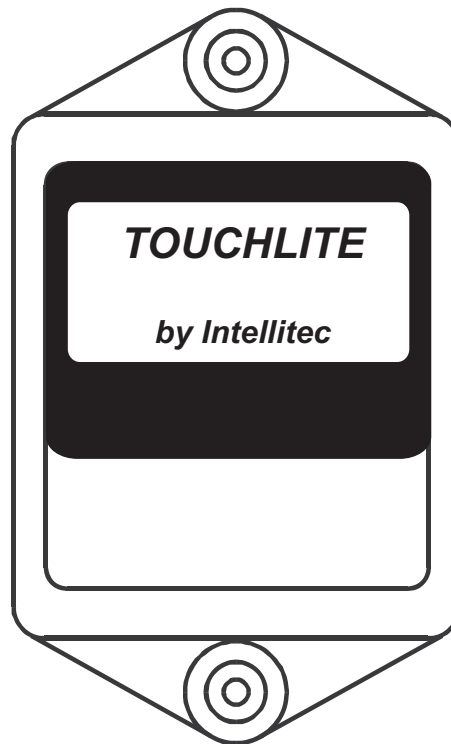

P/N 00-00098-000

 **Intellitec**
1485 Jacobs Rd.
Deland, FL 32724
386.738.7307


P/N 53-000098-001 Rev D 032119

Touchlite™

SPECIFICATIONS

Part Number:	00-00099-000
Operating Voltage	8 - 16 Volts DC
Current output	1.5 Amps Max
Lamp power	18 Watts Max
Time Delay	20 - 40 seconds
Quiescent current	0.001 Amp typical
Fits wall sizes	0.5 - 2.5 inches thick

WIRING DIAGRAM

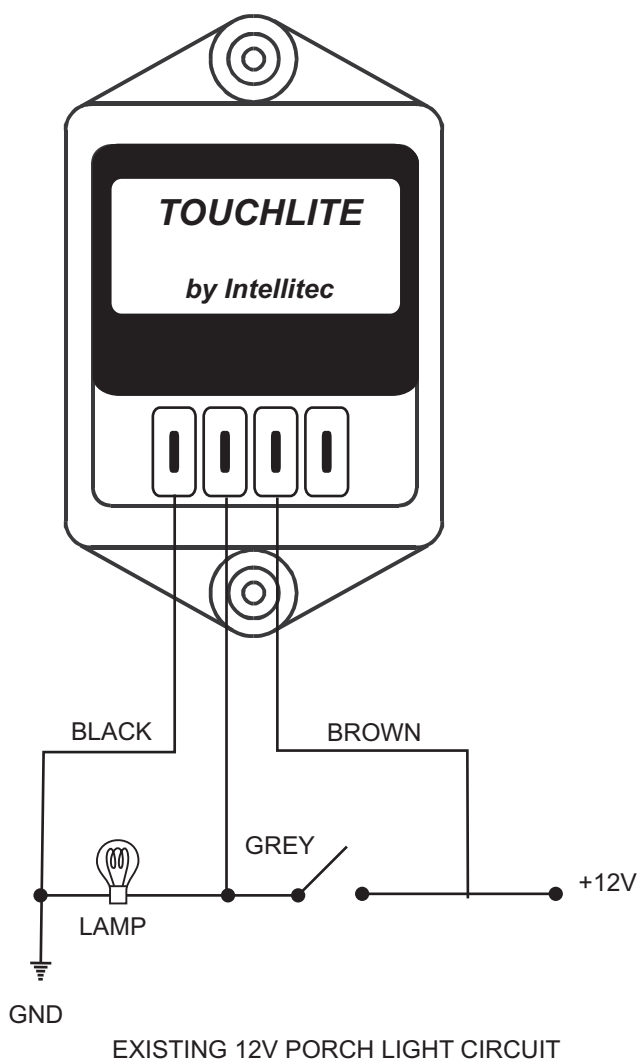

 **Intellitec**
1485 Jacobs Rd.
Deland, FL 32724
386.738.7307

P/N 53-000098-001 Rev D 032119



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.