

# iRV Technologies

## Operation Manual

AM/FM/CD/DVD/MP3/MP4

Digital 2.0 surround sound-Optical SPDIF Audio Input




IRV62

## Contents

### Safety Guidelines

|                               |    |
|-------------------------------|----|
| Important safety instructions |    |
| Safety compliance             | 1  |
| Warnings                      | 1  |
| iRV technologies              | 2  |
| iRV62 Features                | 4  |
| Radio Operation               | 7  |
| BT Link                       | 9  |
| DVD/CD/MP3/MP4 Operation      | 9  |
| Remote Control Guide          | 10 |
| APP OPERATION                 | 12 |
| System Setup                  | 13 |
| Language                      | 13 |
| AUX setup                     | 14 |
| Speaker setup                 | 14 |
| Wiring Diagram                | 15 |
| Troubleshooting               | 16 |
| iRV62 Specifications          | 17 |

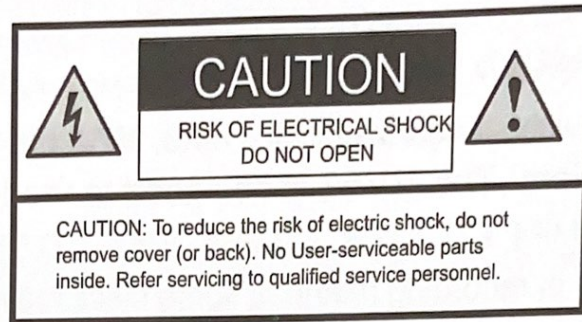

**WARNING** - To reduce the risk of electrical shock, do not remove cover (or open unit). **NO USER SERVICEABLE** parts are inside. Refer servicing to **QUALIFIED SERVICE PERSONNEL**.

The design and manufacture of this player takes personal safety into consideration. However, any improper operation may result in electric shock, fire, or other hazard.

**DO NOT** open the cabinet by yourself to prevent electric shock. Please contact a professional technician to perform any service needed. Please use only components recommended by factory when replacement is necessary.

Please turn unit off when not in use. Use a dry, soft cloth to clean face with the system turned off.

**PRECAUTION** - Moisture may cause the lens on loader in this unit to malfunction. To remedy the problem, turn unit on, eject disc and run 1-2 hours to vaporize moisture inside the unit. Do not repeatedly turn unit off and on. After turning unit off wait 10 seconds before turning on again. Do not use broken, scratched, or twisted discs in player. This could result in damage to the unit. Use only 5", 12cm discs in this unit.

## **iRV 62 Technologies**

### **CD/MP3/MP4/DVD Disc Player**

Compatible with standard size CD, MP3, MP4 and DVD discs (4.75" or 12cm). The iRV 62 is designed to read standard DVD, MP3, MP4, CD, CD-R, CD-RW, JPEG-CD Disc. Because of variations in recording methods some discs may not play on this unit. This unit will play region 1 DVD's (USA and Canada).

### **5V Charge**

This is NOT a USB port and CANNOT accept a flash drive for music playback. Only uses on 5V charging, also charges many devices like iPod

### **Built-In AM/FM Tuner**

18 preset FM stations and 12 AM stations available to select.

### **High Definition Input**

1 High Definition input and 1 High Definition output.  
High Definition output with ARC function.

### **BT**

This unit contains BT technology enabling secure, wireless connections between portable and fixed devices

This unit contains BT link also enables handheld control of streaming music from users wireless device play list.

This unit supplies quality high power audio and video outputs to three different zones. Zone 1 and 2 receive standard stereo audio.

This unit has 1 Video Input, 1 Video output, 1 Audio input to allow users to enjoy entertainment from other sources such as Satellite Radio, VCR's, Digital Cameras, Video Game for iPods and MP3 Players.

These sources must be connected through the inputs on the unit or through additional accessory wall plates.

#### Clock

Press this to see time. This unit has a built in clock that can display the time in any mode when the clock button is pressed. Press and hold the clock button the unit enters clock set mode.

#### Consumer Electronics Control


This unit has consumer electronics control features, functions will vary based on TV connected.

It allows user to use a remote control multiple support high-definition equipments, no need use other remote controls.

#### Near Field Communication

This unit has near field communication label and can complete a quick BT pairing.

## IRV62 FEATURES

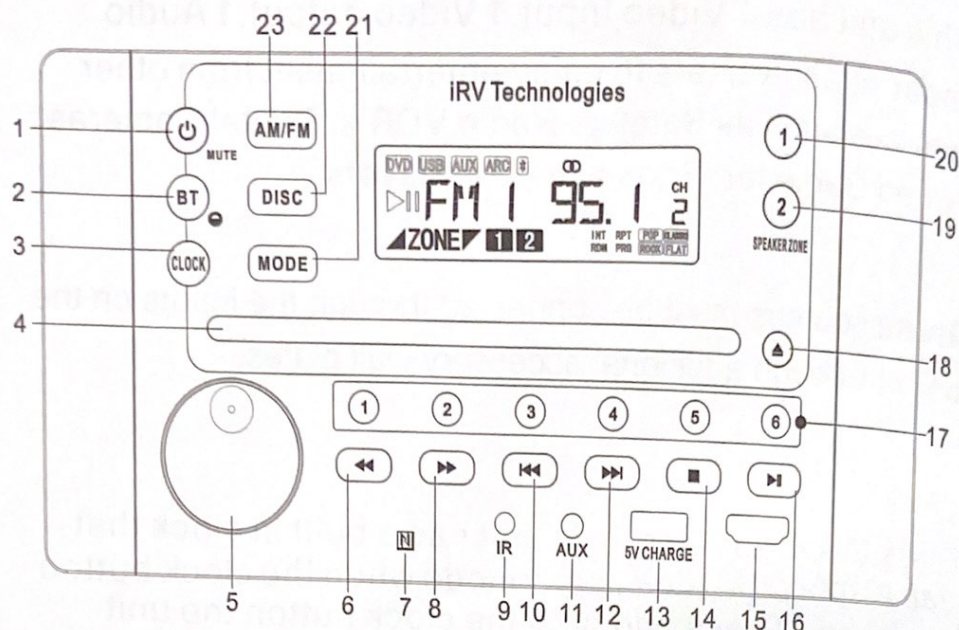

### 1 POWER

Turns the power on and off and make device mute.

Note: Push and hold the POWER button for 5 seconds to make the device on/off.

Quick Push can make the device mute.

### 2 BT/

Quick push this to enable BT connectivity. Push and Hold to adjust 3 levels brightness for LCD and button backlight.

### 3 CLOCK

Press this to see time. This unit has a built in clock that can display the time in any mode when the clock button is pressed. Press and hold the clock button the unit enters clock set mode.

### 4 CD/MP3/MP4/DVD Disc loading slot

Insert a disc to play. Compatible with standard size CD, MP3, Mp4 and DVD discs (4.75" or 12cm). The unit is designed to read standard CD, MP3, MP4, DVD, DVD+R, DVD-R Disc. Because of variations in recording methods some discs may not play on this unit. This unit will play region 1 DVD's (USA and Canada).


### 5 VOLUME

Increase or decrease the volume in all rooms where sound is being played, also can operate subwoofer, bass, treble and balance.

- 6/8 F. RWD buttons ◀▶
- Radio Mode: Press to auto scan and memorize band preset stations. Scan through all lower preset stations.
- Disc Mode: Select different levels of fast reverse.
- 7 Near Field Communication
- This unit has near field communication lable and can complete a quick BT pairing.
- 9 IR
- Infrared remote sensor.
- 10/12 PREV and NEXT buttons ◀◀ ▶▶
- Radio Mode: Press to select next frequency, higher or lower.
- DVD Mode: Moves menu selection.
- 11 AUDIO IN
- Analog audio input from Mp3 or iPod player, This is a 3.5mm input.
- 13 5V Charge
- This is NOT a USB port and CANNOT accept a flash drive for music playback. Only uses on 5V charging, also charges many devices like iPod.
- 14 STOP ■
- Press to stop playback of disc. Press Play to continue the playback.
- 15 High Definition Input
- 1 High Definition Input and 1 High Definition output. High Definition output with ARC function.
- 16 PLAY / PAUSE ▶||
- Press to play disc or pause playback of disc. During radio mode: (Auto-storage /Preset scan).
- 1) When press, the radio searches from the current frequency and checks the signal strength level until 8 station are found.
- And then the 8 stations frequency are preset to the corresponding preset memory numbered bank. When press and hold for more than 1second, The auto-storage operation is implemented in the each selected band. When the auto-storage operation is finished, the radio execute the Preset scan.
- 17 1~6 Number buttons
- [1],[2]....[6] number buttons are used to enter number, e.g. No. of track, DVD chapter No., time data, etc.


- 18 **EJECT ▲**  
Press to eject a Disc from your iRV62 built in player.
- 19/20 **SPEAKERS 1-2**  
Turns sound on or off in corresponding ZONE 1,2.
- 21 **MODE**  
Select between TV audio/FR-audio/F-HDMI IN/TV audio 2.
- 22 **DISC**  
Quick push this to enable DVD when there's a disc inside the unit.
- 23 **AM/FM**  
Allows you to select FM1, FM2, FM3, AM1, or AM2. Each band can be auto programmed with 6 station presets. 18 total preset stations for FM and 12 total preset stations for AM. (See FFWD or FRWD Radio Mode for auto scan features.)

## iRV 62 DISPLAY SCREEN

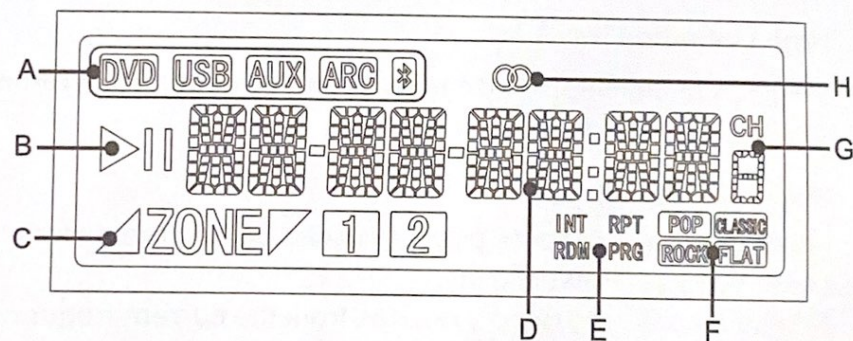

- A Status information
- B Play/pause
- C Zone speaker
- D Source, Track time, Frequency information Display
- E Play mode
- F EQ setting
- G Radio channels preset
- H Stereo indicator

# RADIO OPERATION

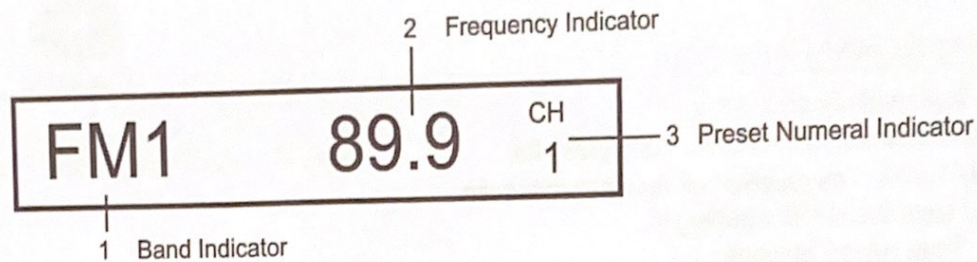


## POWER



Turns the power on and off.  
Make the device mute.

Push and hold for power "on and off"  
Quick push for power "mute"
 
## Radio Reception Mode



Press to access the radio, press to activate  
desired band: AM1, AM2, FM1, FM2, FM3.

Activate radio

Press for  
desired Band

## Manual Tuning



backward

forward

 
Select Band, Select single arrowed  
button to move the channels down or up.

Select Band

Channel Down

Channel Up

## Auto Search Tuning



PREVIOUS

NEXT

Push to auto search for an available station at  
a higher or lower frequency. When this function  
is selected the unit will stay at the selected  
station until another function is selected.

Select Band

Auto Search  
Down

Auto Search  
Up

## Manual Frequency Presets



backward

forward

 
The panel  
number keys

Select Band, Select desired frequency, Hold  
desired numeral for 3 seconds. Frequency is  
set. Repeat to change. Frequency can be  
preset for AM1, AM2, FM1, FM2, FM3.

Select Band  
AM1, AM2, FM1, Frequency  
FM2, FM3

Select Numeral

## Recall Frequency Presets



The panel  
number keys

Select Band AM1, AM2, FM1, FM2, FM3,  
then select desired numeral

Select Band  
AM1, AM2, FM1,  
FM2, FM3

Select Numeral

## Automatic Store / Preset Scan



Play/pause

### A. Automatic Scan & Store

While listening to the Radio, Long press the "▶||" button, The receiver will automatically scan and save the station listening to.

### B. Scan Saved Stations

Short press the "▶||" button once to perform the scanning functions.

## Auto Best Station Memory

 
AM / FM

AM / FM

While in FM1 if you press the NEXT button the radio will start scanning from low to high frequencies., or button the radio will start scanning from high to low Each strong station found will be stored in a preset button until all 18 FM presets are full. You can also do this with the AM band There are 12 presets available for the AM band.

Activate radio  
PREVIEW  
frequencies.

Press for  
desired Band  
FM1



PREVIOUS

Scan from  
high to low



NEXT

Scan from  
low to high

## Clock Setting the time

HOURS

CLOCK

VOLUME

Press and hold the CLOCK button for 3 seconds. Hour will flash. Use the SELECT VOLUME KNOB to set correct hour. Press VOLUME button move to minutes. Minutes will flash. Use the VOLUME KNOB to set correct minutes Press the CLOCK button to memorize

Press for  
3 seconds  
Hours will flash

Use the VOLUME  
KNOB to set  
correct hour

MINUTES

VOLUME

VOLUME

CLOCK

Press VOLUME  
for minutes.

Use the VOLUME  
KNOB to set  
correct minute

Press to  
memorize


## BT Link

BT

Connect iRV62 with a BT device

Turn on iRV62 power, enter BT Link in your cell. Search "iRV62" BT, then click connect. It's successful to connect iRV62 BT if iRV62 screen shows BT LINK

## DVD/CD/MP3/MP4 OPERATION

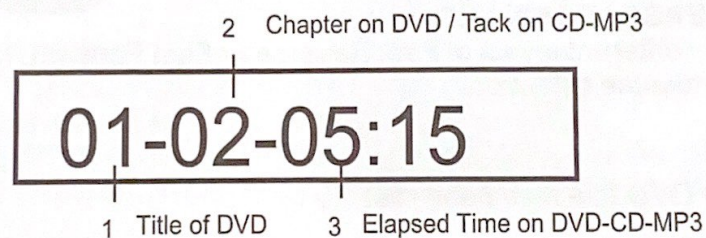

Fast Reverse / Fast Forward

2X, 4X, 8X, 20X To select a normal speed, push the PLAY button.



F RWD

Push the Fast Rewind button to rewind DVD



F FWD

Push the Fast Forward button to advance the DVD

Previous / Next

Select previous or next track.



PREVIOUS



NEXT

## REMOTE CONTROL Guide

### 1.Power

Turn the power on/off and make the device mute.

### 2.Eject

Push the button once, the disc will be ejected from the slot, press it again and the disc will be taken back into the slot.

### 3.0-9 NUMBERS

**Radio Mode:** You can select one of the 9 stored stations on each band by pressing any one of the number buttons(1-9).

**Disc Mode:** You can select any track directly by using the number buttons(0-10+). Example: If you want track number 25. Consecutively press the number 2, then 5 and track number 25 will begin to play.

### 4.FAST REVERSE / FORWARD

Press to select different levels of Fast Reverse or Fast Forward. Press Play to resume selection.

### 5.MENU

DISC only. for DVD title menu and root menu.

### 6.PLAY / PAUSE

Press PLAY/PAUSE button to suspend the playback of CD, MP3, MP4, VCD and DVD media. Press it again to return to normal playback mode.

### 7.SRC

Select between Radio/DVD/BT/TV audio/FR-audio/F-HDMI IN/TV audio 2.

### 8.NAVIGAION BUTTONS

Press the appropriate button to move around any menus that are selected on screen. Center button is the select / enter button.

### 9.OK


Use to finalize selection.

### 10.AM/FM

Allows you to select FM1, FM2, FM3, AM1 or AM2. Each band can be auto programmed with 6 station presets. 18 total preset stations for FM and 12 total preset stations for AM. (See FFWD or FRWD Radio Mode for auto scan features.)

### 11.ZONE 1,2

Turns sound on or off in the corresponding ZONE 1,2.

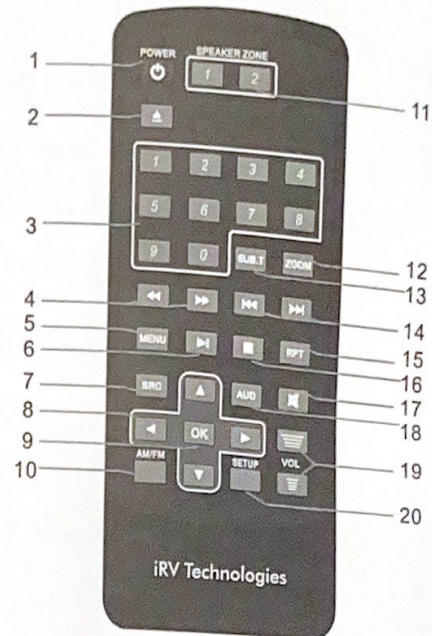

## REMOTE CONTROL Guide

### **12.ZOOM - DVD Only**

DVD, VCD: Press the ZOOM button once to enable 2X zoom mode. Pressing the ZOOM button repeatedly moves the zoom mode through 3X, 4X, 1/2X, 1/3X and 1/4X zoom levels. Press ZOOM again to exit the zoom mode.

### **13.SUBTITLE(SUB-T) - DVD Only**

Returns to previously selected tracks. Press to select language or to turn off subtitles. Press and hold for 3 seconds to return to previous chapter.

### **14.PREVIOUS / NEXT**

**Radio Mode:** Press to select higher or lower stations.

**Disc Mode:** Press to select previous or Next track or chapter. Pushing the Previous button, the unit will play the disc from the beginning of the previous track. Pushing the Next button, the unit will play the disc from the beginning of the next track.

### **15.REPEAT**

DVD Mode: Press REPEAT to repeat the current track being played. Press it twice to repeat playing all of the tracks.

CD, MP3, VCD Mode: Press REPEAT to repeat the current track being played. Press it twice to cancel the repeat function.

### **16.STOP**

DVD, VCD, CD: Press STOP to suspend playback mode, STOP will display on the TV Screen. Pressing STOP a second time will end all disc playback.

### **17.MUTE**

Press the MUTE button to turn off the sound in all ZONE 1, 2. Press it again to resume the previous sound levels.

### **18.AUDIO - DVD Only**

Adjusts the surround sound mode as well as selects the language. Must be set before play.

### **19.VOLUME**

Press the VOLUME (+ or -) button to increase or decrease the volume level respectively.

### **20.SETUP**

Press for DVD setup menu, Menu navigation screens will appear on Video Monitor.

## APP OPERATION



On Your iPhone or iPad:

- Click on 'App Store'
- Click 'Search' at the bottom of the screen
- In the search bar, type iRV



On Your Android Device:

- Click on 'Google Play'
- In the search bar, type iRV at the top of the screen

\*If using iPad, make sure to click the 'iPhone apps' option



Watch video



Get the App








Download on the  
App Store



GET IT ON  
Google Play






## SYSTEM SETUP

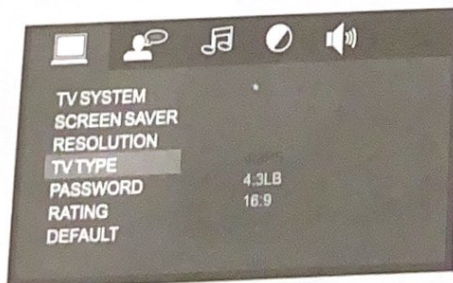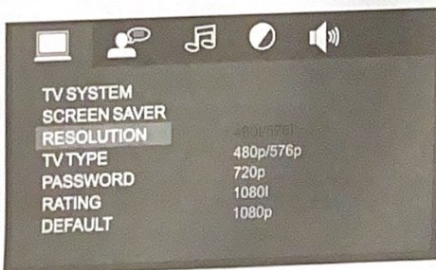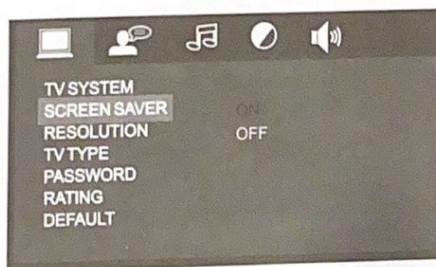
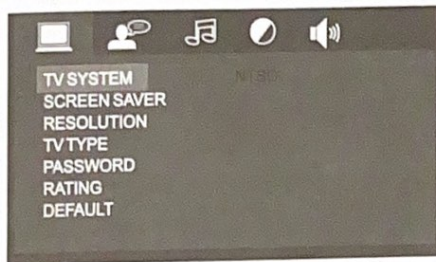
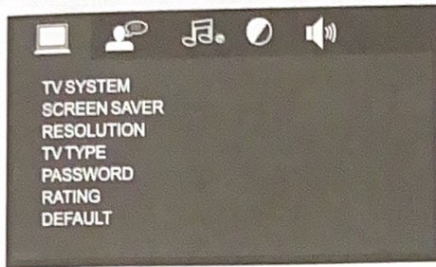


Press the "SETUP" button to activate the System Setup on screen display Video Monitor Only menu .



Use the NAVIGATION buttons to navigate the following OSD menu options.

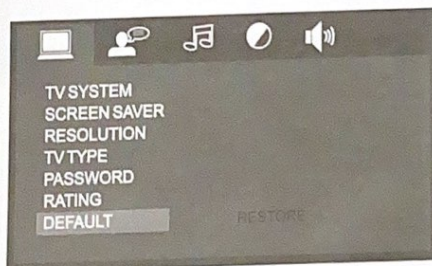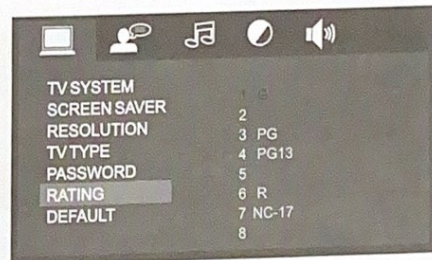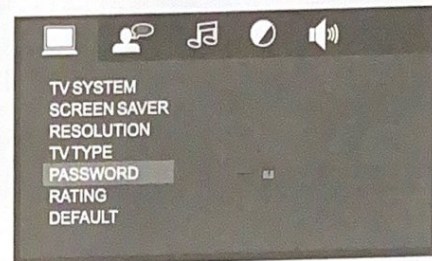


## LANGUAGE SETUP

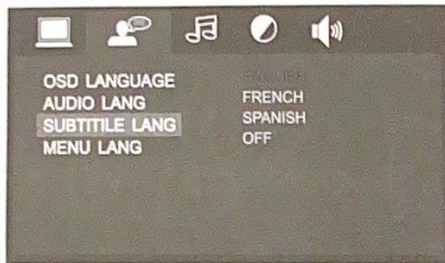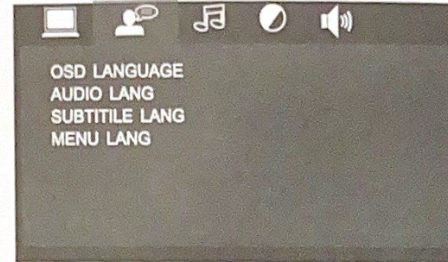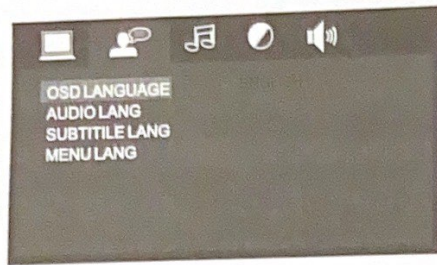


## AUDIO SETUP

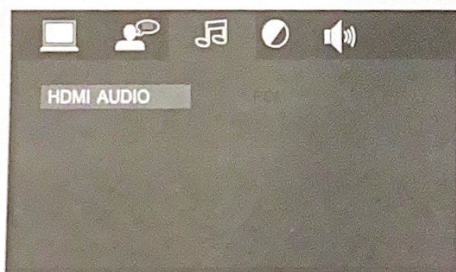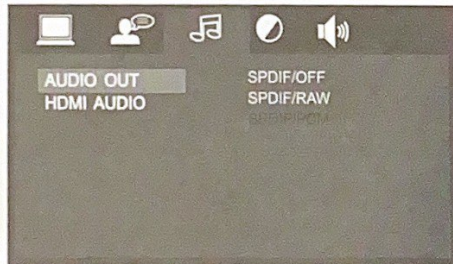

## SPEAKER SETUP

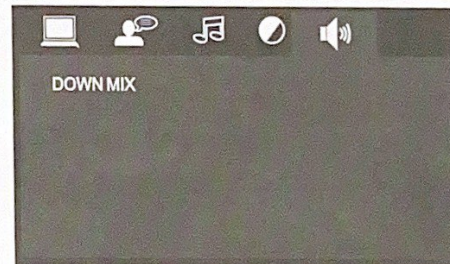

# WIRING DIAGRAM

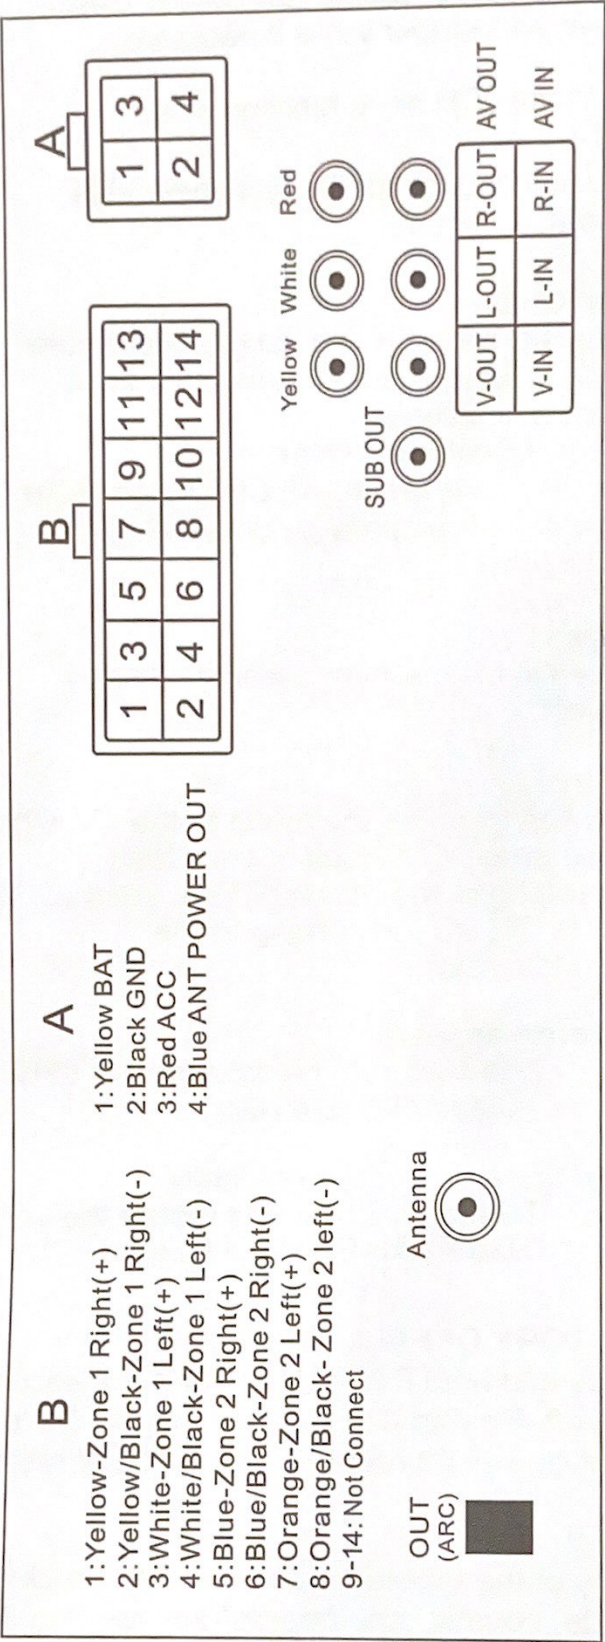

# TROUBLESHOOTING

## No Power

Check and make sure whether the fuse is blown, replace fuse with proper value if necessary.

Some errors occur in the LCD or no function when pressing the button.

Turn off the unit and restart the unit again. Use Factory Default Restart.

## Poor radio reception or static.

Antenna may not be the proper length. Make sure the antenna is fully extended. Antenna may be broken. Replace antenna.

The broadcast signal is too weak.

The antenna is poorly grounded. Check and make sure the antenna is properly grounded at its mounting location.

## Disc cannot be loaded

Disc is loaded in the machine. Clear the disc by pressing eject

## No Picture.

The Video line from the main unit to the TV is not connected properly. Check connections.

Improper setting of the TV SYSTEM. Set the TV SYSTEM to "NTSC", according to the connected television.

Disc error appears.

The disc may be damaged or dirty.  
Clean disc and retry.

When there is no color on video.

Turn off the unit and restart the unit again.  
Use Factory Default Restart.

## FACTORY DEFAULT RESTART

Press and hold POWER button for 5 seconds - Unit will shut off. Restart unit by pressing the ON button. Factory defaults will be reset with this type of restart.

## NOTE:

If any of the problems persist after check list has been made, consult your nearest service dealer.

Never attempt to disassemble your unit by yourself.

## iRV62 SPECIFICATIONS

|                                   |                                                  |
|-----------------------------------|--------------------------------------------------|
| Overall Dimensions                | 8-1/10"(W) X 4-2/8"(H) X 7"(D)                   |
| Mounting Dimensions               | 6-4/5"(W) X 4-1/16"(H) X 7-1/4"(D)               |
| Net Weight                        | 3.7lbs (1.7Kgs)                                  |
| Voltage                           | 12V DC Negative Ground (11.0V - 15.0V allowable) |
| Maximum Current Consumption       | 8A                                               |
| Total Continuous Power Output     | 50W                                              |
| Load Impedance                    | 4 $\Omega$ (4-8 $\Omega$ allowable)              |
| Total harmonic distortion         | Typical 0.02% Maximum 0.3%                       |
| DVD Deck Section, Discs Played    | DVD, MP3, MP4, CD, CD-R, CD-RW, JPEG-CD          |
| Video System                      | AUTO / PAL / NTSC                                |
| Video Section                     | 4:3 Letter Box and 4:3 Pan Scan, 16:9            |
| Video Output level                | 1.0Vp-p +/-0.2V 75ohms                           |
| AM Tuner Section, Frequency Range | 530 - 1710KHz (U.S.A.)                           |
| FM Tuner Section, Frequency Range | 87.5-107.9MHz (U.S.A.)                           |
| Bluetooth                         | Version 4.1, Class II                            |
| Advanced Audio Distribution       | A2DP, AVRCP                                      |

---



---

# This manual is provided courtesy of **RV Tech Cheat Sheet**



**Professional resources for the whole RV industry — free.**

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.

---



---

**[rvtechcheatsheet.com/manuals](https://rvtechcheatsheet.com/manuals)**

**Find thousands more RV manuals, wiring diagrams and parts lists**

**RV techs:** share fixes, ask questions and learn from each other.

**Join our free Facebook group →**

---



---

Follow proper safety practices. If in doubt, consult a professional RV technician.