




Changing Code on SuperSlide II PowerSlide RF Remote Transmitter

© 2003 Kwik-ee Products Co., Inc.
Kwik-ee #1422273 Rev. 1, 05/03

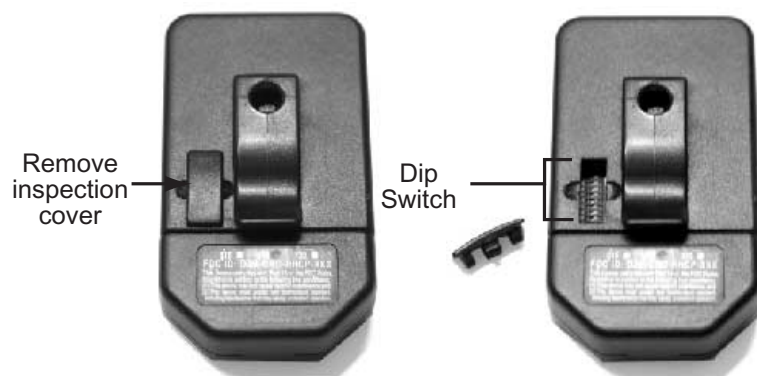

The power slide RF Remote operates on a frequency of 418 MHZ. Each remote may be individually set to operate on a different code setting. The remote comes factory preset to a specific code.

If you have purchased a second remote you will need to change the code in the remote you purchased to match the code settings of your primary remote.

To set a new remote to match the primary remote, remove the inspection cover on the back of the new remote. Adjust the dip switch in the new remote to match the code settings previously copied from the primary remote.

NOTE: If you are creating a new code you will need to reprogram the Power Slide. Refer to **Figure 5** on Page 3 of the SuperSlide II PowerSlide Assembly Instructions (manual P/N 142275.)

ON	ON	ON	ON	ON	ON	ON	ON	ON	ON
1	2	3	4	5	6	7	8	9	10

First remove the inspection cover of the primary remote by prying it up at the recessed spots. Write down the remote settings in the diagram provided here.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.