



Operation Guide

© 05/07 Kwik-ee #1422192 Rev. 0F



LEVEL
2 0 0 0
2 0 1 0
3 0 0 0
3 0 1 0

Best

Operation Guide

Winnebago Hydraulic Leveling Systems by Kwik-ee

Table of Content

	Page
Introduction	1
Safety Information	1
Operation	2
Control Panel	3
Manual Leveling	3
Automatic Leveling	3
Remote Operation	4
Stabilizing	4
Retracting Jacks	4
Setting Level Sensor	5
Care and Maintenance	5
Error Codes	6
Trouble Shooting Guide	6
Control Panel Jumper	7
Registration Reminder	8

Introduction

The Level Best leveling and stabilizing system is an electronically controlled/hydraulically operated unit that consists of a 12 volt DC powered motor/pump/manifold assembly with fluid reservoir, hydraulic hoses, four hydraulically operated jacks, a control unit with switch panel, and optional level sensor unit and pressure sensor. It is designed to meet the varying requirements of vehicles ranging from class "C" motorhomes to the large class "A" motorhome.

If, after thoroughly reading this manual, you still have questions in regard to the operation and maintenance of the Level Best system, please contact the Kwik-ee Service Department at 1-800-736-9961.

WARNINGS



Do not use the Level Best system as a lift for changing tires or working under the vehicle.

Never check for hydraulic fluid leaks using your hands and/or any other body part. The leaking fluid is under pressure and is capable of cutting and penetrating your skin resulting in severe injury.

When extending the rear stabilizers, do not lift the wheels beyond ground contact. This overrides the braking effect of both the transmission park and parking brake. Without this braking, it is possible for the vehicle to roll unexpectedly forward (or backward) off the jacks. This could cause severe injury or even death.

Holding a control switch in the "extend" or "retract" position for a time period longer than necessary to fully extend or retract the hydraulic cylinders, can cause overheating and damage to the pump motor as well as the electrical components.

Do not use the leveler as an emergency brake, They are not designed for any type of vehicle braking purpose.

Do not use the levelers on icy or slick surfaces on which the foot pads may slip.



IN THE EVENT OF ACCIDENTAL EXTENSION

1. Bring the vehicle to a safe and complete stop as soon as possible.
2. Turn the leveling systems power switch on and press the all up switch.
3. Visually inspect the vehicle undercarriage for any problems.



230 Davidson Avenue
Cottage Grove, OR 97424-9545
(541) 942-3888 www.kwik-ee.com

NOTE: To prevent improper operation of the leveling system, which could result in damage to the levelers and/or the vehicle itself, read the operating instructions carefully before using the leveling jacks.

Operation

The Level Best system performs the dual function of leveling the vehicle and, once a level plane has been achieved, stabilizing the vehicle. When leveling the vehicle, it may not be necessary to use all of the leveling jacks however, to stabilize the vehicle, all jacks should be extended to contact the ground.

SITE SELECTION

1. When selecting a site for parking the vehicle, choose a spot that is as flat as possible - this will minimize the extent of leveling.
2. Check that the area under the vehicle is free from any obstacles that might interfere with the operation of the levelers. Check the ground surface to assure the leveler feet have a flat solid surface for contact. When parking on grass, soft dirt and/or uneven terrain, it is advisable to extend the surface area of the leveler feet by using pads. These pads can be from 3/4" plywood, cut into 12" squares.

NOTE: In occasional adverse driving conditions, it is possible for mud, ice and other debris to accumulate around the leveler units. This debris may interfere with the operation and should be cleaned off prior to using the system.

CAUTION: Do not compensate for uneven terrain by using pads that are thicker than 3". Pads that are thicker than the leveler's vertical ground clearance can prevent breaking contact with the ground when retracting. This can result in damage to both the levelers and the vehicle.


LEVEL BEST CONTROL PANEL LAYOUT

The control panel consists of switches and light emitting diode indicators (Figure 1).

The switches include main power ON/OFF, all jacks retract (ALL UP), a diamond shaped switch for bi-lateral leveling (BI-LEVEL), and four jack indicator lights (LEFT FRONT, RIGHT FRONT, LEFT REAR, RIGHT REAR). The position of the jack indicator lights correspond to the position of the jack legs on your motor home, with the front of the vehicle indicated by FRONT and the rear of the vehicle indicated by REAR.

The AUTO MODE switch only appears on motor homes equipped with fully-automatic leveling.

Figure 1: Fully-automatic touchpad control panel shown.

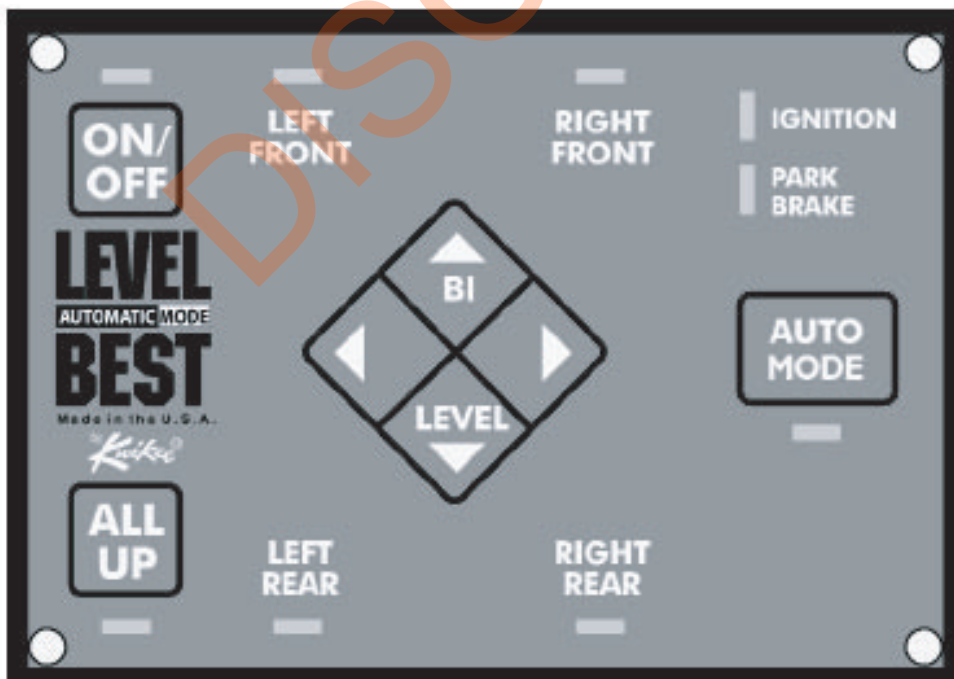


COACHES EQUIPPED WITH AIR SUSPENSION & THE AIR DUMP FEATURE:

When operating in the manual mode, the first Bi-Level button that is pressed will dump the air from the air bag system. It is recommended that you initially press the Bi-Level button and then wait 25 seconds before leveling the coach. This will keep the coach lower to the ground and provide a more stable position.

For coaches equipped with the Auto Mode feature, there will be a 25 second delay before the jacks begin to deploy on air suspension coaches, while the air dumps from the vehicle suspension.

NOTE: For Manual, Automatic and Remote Leveling the vehicles engine must be running or the key in the accessory position, the transmission in park and the parking brake set. Securely block the wheels using wheel chocks.

Locate the "ON/OFF" button on the upper left of the control panel. Momentarily depress this switch to activate the leveling system. The LED will light up and be a steady green, which indicates that the system is ready. If the Park Brake LED lights up and is flashing, it is an indication that the parking brake is not completely engaged.

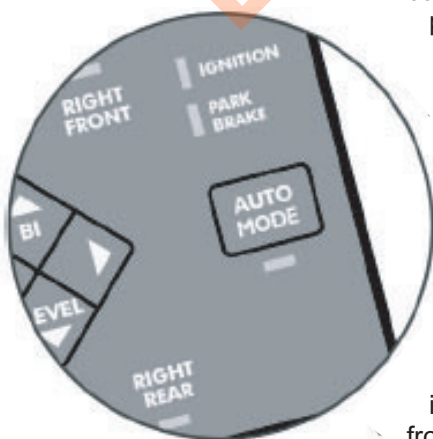

Control Panel Functions

The ON/OFF switch, located in the upper left hand corner, controls the supply of power for all panel functions, activation of this switch is indicated by its green LED.

The ALL UP (leg retract) switch is located in the lower left hand corner of the control panel. Activation of this switch causes all legs to retract to the travel position. When the retract sequence is completed, the ALL UP LED will turn green and the dash indicator light will go out to indicate that it is now safe to move the motorhome.

The diamond shaped BI-LEVEL switch, located in the center of the panel, activates the extension of the leveling jacks in pairs. Use of this switch greatly simplifies the leveling process and significantly reduces the amount of stress created by the leveling process on the motorhome. Operation of this switch illuminates the yellow LED jack indicator lights that correspond to the jacks that are being activated.

The control has an automatic shut-off feature. Following the last operation, the control will automatically shut off in 60 seconds.

Manual Leveling

Observing the precautions set forth on the previous pages of this manual, you are now ready to begin leveling your motorhome. With the vehicle engine running or the key in the accessory position, place the transmission in park and set the parking brake. Securely block the wheels using wheel chocks.

Locate the "ON/OFF" button on the upper left of the control panel. Momentarily depress this switch to activate the leveling system. The LED will light up and be a steady green, which indicates that the system is ready. If the Park Brake LED lights up and is flashing, it is an indication that the parking brake is not completely engaged.

For vehicles equipped with air suspension, at this stage, you may dump the air from the suspension by momentarily pressing on of the diamond shaped Bi-Level keys. This will allow the air to escape from the air suspension and lower the coach. Before proceeding to manually level the coach, wait 25 seconds to allow the system to fully deflate.

Reference your leveling tool and determine which corner of the motorhome is the lowest. Now using one of the "BI-LEVEL" switches representing the sides of the motorhome, (use the switch that corresponds to the low end of the motorhome) depress and hold the switch to raise the side of the motorhome until level. Now find and depress the "BI-LEVEL" switch that represents the low front or rear of the motorhome and hold it until the front and rear of the motorhome are level. Your motorhome should now be in a level plane.

Automatic Leveling

SEMI-AUTOMATIC FUNCTION When an AUTO MODE sensor is connected to a manual control, the jack indicator lights act as an indicator of the level condition of the coach. A light that is 'on' indicates the high corner of the coach. Push the BI-LEVEL pair button corresponding to the end of the coach you would like to raise. When the light comes 'on', stop the action of that button. In this way the jack indicator lights act as a bubble-level, indicating the level condition of the coach.

FULLY-AUTOMATIC FUNCTION Coaches equipped with AUTO MODE can be operated the same as manual or semi-automatic versions. The fully automatic unit functions the same until the AUTO MODE switch is pressed. Pushing the AUTO MODE switch causes the system to extend a pair of jack legs to the ground. Next the other pair of legs is extended to the ground and the system begins the auto level sequence. During the auto level sequence the system will run one to three of the jacks depending on the level condition of the coach. On completion, the system will check the level condition of the coach and either re-run the sequence or display a green LED light under the AUTO MODE button to indicate that the sequence is complete. Typical coach level capability is 0.3 degrees from side to side and front to rear.

NOTE: For Remote Leveling the vehicles engine must be running or the key in the accessory position, the transmission in park and the parking brake set. Securely block the wheels using wheel chocks.

If the Park Brake LED lights up and is flashing at the main operators panel, it is an indication that the parking brake is not completely engaged.

CAUTION: Overextending the levelers during stabilizing will cause the vehicle to become unlevel and result in a loss of stability. If a leveler has been overextended, press the 'ALL UP' button and release. When the vehicle lowers to the desired position, press the ON/OFF button. Do not attempt to use the other levelers to raise the vehicle to a higher level plane.

NOTE: To prevent the possibility of damaging the levelers and/or vehicle, it is good common sense to confirm the retracted position by visual inspection.

Remote Operation

The control may be turned on to start operation from inside using the on/off button or outside by pushing the rocker switch to the desired mode of operation. Once turned on from inside, the LED at the remote switch location will illuminate solid. If selected from outside the unit, operation will begin immediately.

AUTO MODE: Depress the rocker switch momentarily to the Auto Mode position. The LED will start flashing slow, indicating operation and the system will begin the leveling process to completion.

Once the operation is complete, the LED at the rocker switch will flash quickly for 2 seconds, then stay illuminated until the control unit times out.

ALL UP: Depress the rocker switch momentarily to the All Up position. The LED will start flashing slow, indicating operation and the system will begin the retraction process to completion.

Once the operation is complete, the LED at the rocker switch will flash quickly for 2 seconds, then stay illuminated until the control unit times out.

STOPPING OPERATION IN MID CYCLE: To stop operation in the middle of a cycle, depress the remote rocker switch to either position to stop the function or press on/off at the operators control panel in the coach.

RESTARTING ALL UP AFTER MID-CYCLE STOP: To restart a cycle that had started and then was stopped by the operator, depress the rocker switch momentarily to the All Up position to start retracting the jacks again.

RESTARTING AUTO MODE AFTER MID-CYCLE STOP: To restart the Auto Mode process, depress the rocker switch momentarily to the ALL UP position to retract the jacks fully. Once completed depress the rocker switch to the Auto Mode position. *(The operator may go directly to the Auto Mode, skipping the retract cycle, however actual leveling results may vary depending on the stage of the Auto Mode cycle when stopped. No damage will result from this. If the results are unsatisfactory, retract the jacks fully and start the cycle over.)*

Stabilizing

To stabilize the vehicle once it has been leveled, any unused leveler must be extended into firm contact with the ground. Accomplish this by using the "BI-LEVEL" switch on the front or rear corresponding with the jack that is not down.

Retracting the Levelers

1. Start the chassis engine or turn the key to the accessory position and turn the control panel power switch on. If any levelers are extended, the "ALL UP" LED will light up and flash, and the dash warning light will illuminate. The buzzer will sound only if the IGN switch is in IGN position (not ACC).
2. To retract all levelers simultaneously, press the "ALL UP" switch.
3. When all leveler legs retract to the travel position, the red "ALL UP" LED will turn green, the dash warning light will go out, and the pump will shut off. You can now turn off the power.

NOTE: During periods of vehicle inactivity and/or storage, the leveling system should be activated and cycled through the leveling/retracting procedures on a monthly basis to keep the levelers in good operating condition.

Setting Level Sensor (if so equipped)

Turn the coach ignition to the accessory position. Make sure the level control is not turned on. With the coach in a level attitude press and hold the ALL UP, BI-LEVEL FRONT and BI-LEVEL REAR buttons simultaneously. You should hear an audible beep. Turn the control 'on' and all four indicator lights should now be lit indicating the level sensor is showing the coach to be level. If all four LEDs are not illuminated, repeat last 2 steps.

(NOTE: Coach must be level first.)


Care and Maintenance

The Level Best hydraulic leveling system should be routinely checked as part of a regular vehicle maintenance program. Kwikkee recommends checking the system twice a year: in the spring prior to the heavy travel season and in the winter, prior to storage. The following checklist has been provided as a guideline for maintenance.

1. Be sure the leveling jacks are in the retracted position. Remove the breather cap on the reservoir and check the fluid level in the reservoir. The fluid level should be approximately 1" below the top of the reservoir. This standard provides an adequate amount of fluid for the levelers to operate efficiently.

If the fluid is below this level, add a sufficient amount to bring the level up to the operating standard. When filling the reservoir, use transmission fluid only. We recommend Dexron III. Do not mix fluids.

2. Check wire connections at motor and valve manifold; should be tight and secure.
3. Check the valve manifold for any evidence of hydraulic fluid leakage. Replace any seals as needed.
4. Examine the hydraulic hoses for damage and/or leakage. Replace and resecure as needed.
5. Check hydraulic cylinders and leg assemblies for damage and/or leakage. Replace and/or repair as needed. Verify that all mounting bolts have been tightened to 80ft/lbs.

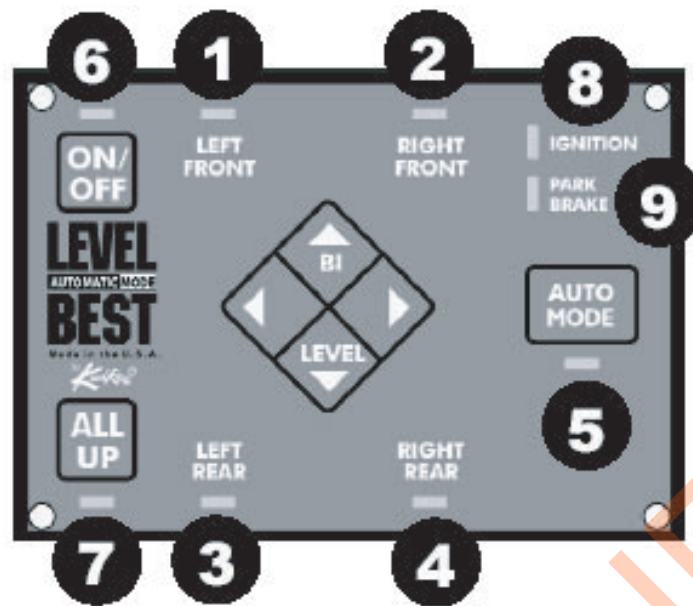

Standard Operating Codes

- LED 7 green.**
 - Jacks retracted fully.
- LED 7 red. Audible beep for approximately 8 seconds.**
 - Jacks deployed.
- LED 6 green.**
 - Unit turned 'on'.
- LED 6 flashes.**
 - Park brake not set.
- LED 5 green and audible beep.**
 - Auto level sequence completed satisfactorily.
- LED 8 green.**
 - IGN on run only.
- LED 9 green.**
 - Park Brake set.

Auto level Error Codes


- Alternating LEDs 1 and 2 'on', then 3 and 4 'on' etc.**
 - Coach tilted too far front to back to level.
- Alternating LEDs 1 and 3 'on', then 2 and 4 'on' etc.**
 - Coach tilted too far side to side level.
- LED 5 flashes red.**
 - Jacks are out of stroke.
- LED 5 flashes green/red.**
 - Lost communication with Auto Level Sensor.
- LED 9 flashes.**
 - Park Brake not set.

Troubleshooting

This list represents a cross section of some possible problems and the corresponding solutions. After reviewing the manual, if you still have problems or questions, please contact the Kwik Service Department at 1-800-736-9961.

1. Panel does not function (buttons and lights do not work/system does not respond.)
 - Ignition needs to be on with engine running or in accessory position.
 - Parking brake must be applied.
2. Red indicator light will not go out when legs are retracted.
 - Reed switch(es) not grounded or reed switch is defective.
3. The action of one cylinder will not operate in one direction (i.e., it will go down, but not up, or vice versa).
 - Hydraulic hoses and/or wiring connections are crossed
 - Valve not operating.
4. Jacks won't extend after they had been working previously.
 - Directional valve is not shifting positions - possibly due to foreign object obstructing the valve itself, or the solenoid is not working properly.
5. Pump continues to run after switch is released.
 - Pump motor solenoid is stuck - tap solenoid to unstick it or replace the solenoid.

Figure 2: Disconnect the wire harness from the back of the control panel.

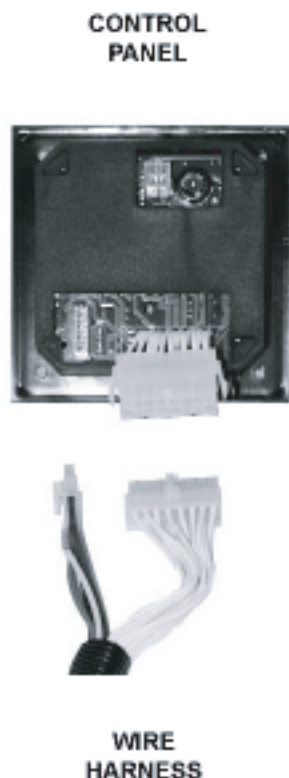

Note: The emergency control panel jumper can be located on the main wire harness, tie wrapped approximately 12 inches behind the touch pad.


Control Panel Jumper Instructions

To be used in the event of a control failure.

1. Remove the control panel from the bezel and disconnect the wire harness. (See Figure 2.)
2. Make sure the area around and below the motorhome is clear of all obstructions and that no personnel are under the vehicle.
3. Plug the large connector of the jumper assembly into the wire harness (Figure 3.)
4. Plug the 4-way connector into the wire harness. **CAUTION: Pump will start immediately and the jacks will begin to retract.** (See Figure 3.)
5. After jacks have been fully retracted, immediately disconnect the 4-way connector on the jumper assembly from the wire harness to shut off the pump (Figure 3.) **Failure to immediately remove the 4-way connector can cause over-heating of the pump motor and permanent damage to the system.**
6. Remove the large connector of the jumper assembly from the wire harness.
7. Have jack system serviced at a qualified service center prior to using the jack system.

If after using your manual retract harness your jacks have not retracted fully, contact your local Winnebago dealer or call Kwikkee Service Department at 1-800-736-9961.

Figure 3: Attach the Jumper Assembly to the Wire Harness.

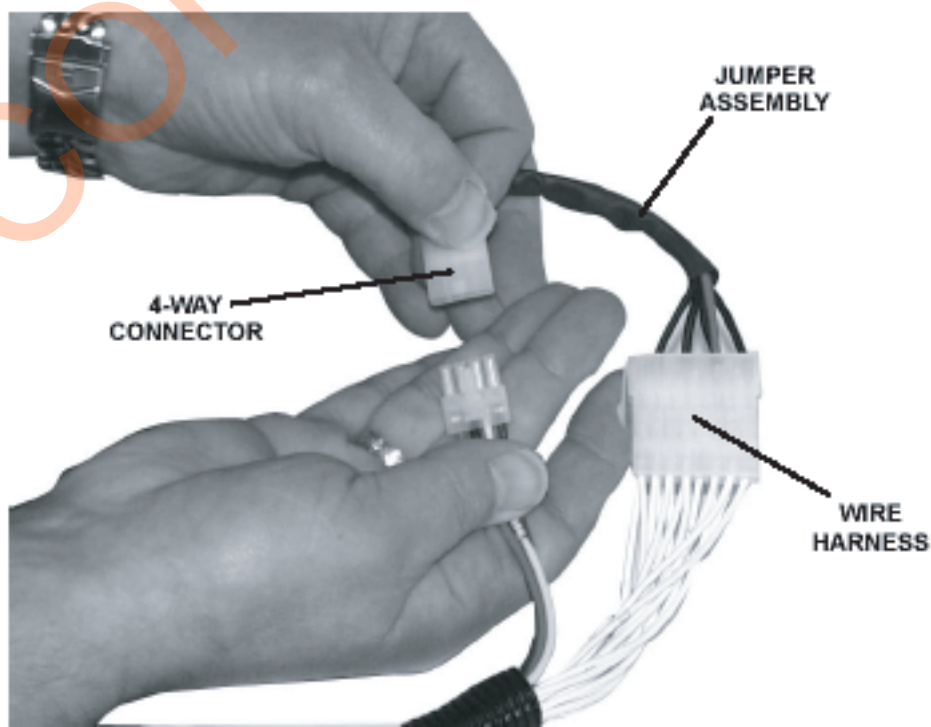

NOTE: Immediately disconnect the 4-way connector after the jacks are fully retracted. Failure to immediately remove the 4-way connector can cause over-heating of the pump motor and permanent damage to the system.

I M P O R T A N T

*Please take a minute to fill in the enclosed **Level Best Warranty Registration**.*

Send the completed registration form to:

**Kwikee Products
230 Davidson Ave.
Cottage Grove, OR 97424**



230 Davidson Avenue
Cottage Grove, OR 97424-9545
(541) 942-3888 www.kwikee.com



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.