



Operation Guide SuperSlide II PowerSlide

© 2/07 Kwikkee #3010000926 Rev. 0A



SuperSlide II PowerSlide Operation Guide

Contents

Introduction	1
Safety Precautions	1
Extending Your Tray	2
Stowing Your tray	2
Program Remote	2
Troubleshooting	3
Manual Retract	3

Introduction

This coach is equipped with a SuperSlide II PowerSlide mechanism from Kwikkee products. PowerSlide utilizes a quad motor system to move the cargo tray between the stowed drivers and passenger side of the coach.

The PowerSlide is made of an inner tray which rolls on a set of outer guide rails. The tray is designed to move 60" out in both directions of travel. Power to move the tray is provided by engaging urethane covered drive rolls with the channel mounted on the side of the tray. The drive rolls are tensioned, to allow for wear in the urethane and maintain good contact. To prevent movement during coach travel, a center lock mechanism is employed to lock the tray into its stowed position.

Operating Safety Precautions



CAUTION
Make sure the area is clear of all persons or obstructions before operating


CAUTION
READ ALL
OPERATING INSTRUCTIONS
FIRST BEFORE USING YOUR
POWERSLIDE CARGO TRAY.

Prior to extending or retracting the cargo tray, take a moment to ensure the following:

1. Open the luggage compartment doors to make sure that there are no obstacles that could interfere with the tray's movements, either in or out to either side.
2. Make sure that there are no obstacles on the outside of the coach that would interfere with tray movement or be damaged due to tray movement.
3. Check to ensure that stored gear has not shifted and that no obstructions exist between the inside of the compartment and the stowed gear.



Note: To stop the tray, release the rocker switch or momentarily press any button on the remote control panel.

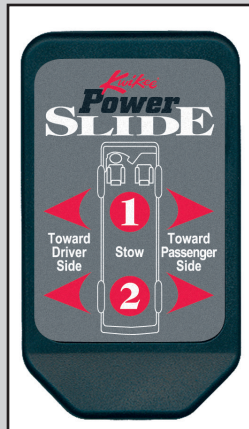

Extending Your Cargo Tray



CAUTION

See operating safety precautions before proceeding.

1. To extend the tray from the stowed center position, use one of the following two options.
 - Push and hold the rocker switch provided by the coach manufacturer in the desired direction.
 - Momentarily press the arrow on the remote control in the desired direction.
2. The tray will continue to travel to the full extension point or until either the rocker is released or any button on the remote control is pressed again.
3. To extend the tray from one side to the other, the tray will need to be stowed first by either pressing "Stow" or the direction of travel arrow on the remote control. If the rocker switch is used, after the tray is centered, the rocker must be released before the tray can be further extended.

Stowing Your Cargo Tray




CAUTION

See operating safety precautions before proceeding.

1. To stow the cargo tray, press the stow button on the remote control or the arrow in the desired direction required to stow the tray. The slide will stow automatically.
2. If using the rocker switch to retract the cargo tray, press and hold the switch. The cargo tray will momentarily pause just before centering. Continue to hold the rocker switch down until all action stops.

Programming Your Remote

To program the power module to the RF remote transmitter, insert the eraser end of a pencil through the hole in the top of the ABS cover on the power slide, as shown in figure 1. The hole is located on the passenger top side of cover.

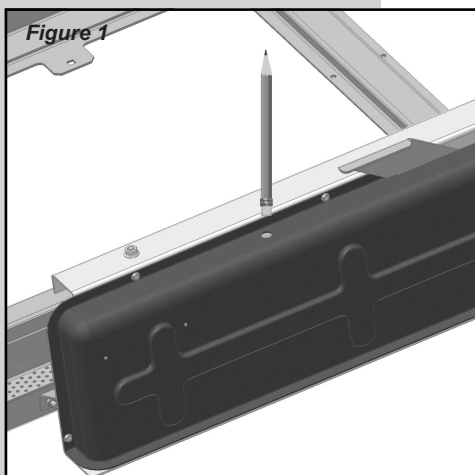

With the eraser end of the pencil, press the switch on the top of the control. When pressed, a red LED light will start to flash. The LED can be seen through the hole in the cover. Once flashing, select which set of buttons you would like to have correspond to this slide. Press any button on the remote that corresponds to Slide 1 or Slide 2. this will program the slide to that remote setting.

Troubleshooting

1. Unit fails to extend or retract using remote control.
 - Low battery.
 - Out of range, move closer to bay.
 - Potential radio interference.
2. My tray extended when my neighbor runs his tray.
 - Change your remote code (see section on setting code).
3. The unit pauses before centering then goes forward and stops.
 - This is normal, it is allowing time for the center latch to move.
4. Unit is not running correctly after working before.
 - May be caused by dead battery. Position tray in center, then reboot system by cycling power to tray.

Manually Retracting Your Cargo Tray



CAUTION


Release lever is spring loaded. Use caution when releasing to prevent injury.

In the event the cargo tray will not function, a manual release lever may be actuated to retract the tray for service.

The lever must be rotated toward the driverside of the coach about 90°. This will allow you to move the tray in for travel.

Once the tray is centered, return the release lever to its normal position to lock the tray in place.

The manual release is meant as a temporary override and service should be scheduled as soon as possible.

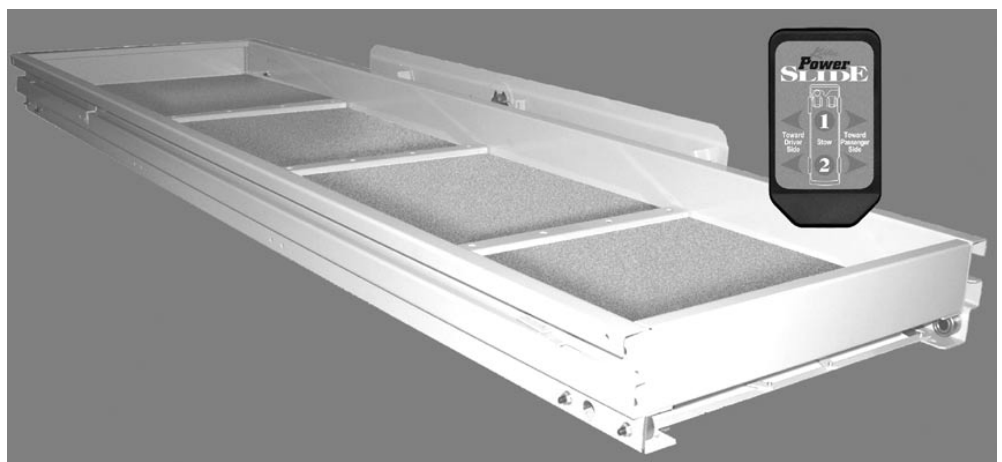



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.