

FIRST ANGLE PROJECTION

REMOVE ALL BURRS AND SHARP EDGES

ISSUE	REVISION	MOD No.	DATE
F	SEE MOD NOTE	10503	18-Jan-07
E	SEE MOD NOTE	10480	11-Jan-07
D	SEE MOD NOTE	10392	27-Nov-06
C	SEE MOD NOTE	10377	21-Nov-06
B	SEE MOD NOTE	10232	31-Aug-06

BASIC DIMENSIONS OF GALVANISED DELTA ANCHOR



A	B	C	D	E	F	G	ØH	I	J	K (kg)
217	514	230	8	210	387	4	8	116	71	1,5
4 kg	±4	±10	-0/+1,7	±4	±8	±0,4	±0,4	±2,3	±1,4	
254	593	265	10	243	450	4	10	148	81	2,7
6 kg	±5	±12	-0/+1,7	±5	±9	±0,4	±0,4	±3,0	±1,6	
293	695	310	12,5	282	526	5	10	172	95	4,0
10 kg	±6	±14	-0/+1,7	±6	±10	±0,4	±0,4	±3,4	±1,9	
16 kg	339	812	12,5	328	614	5	12	205	114	6,1
	±7	±16	-0/+1,7	±6	±12	±0,4	±0,4	±4,0	±2,2	
20 kg	370	877	16	357	663	6	12	225	123	8,0
	±7	±16	-0/+1,9	±7	±13	±0,4	±0,4	±4,5	±2,5	
25 kg	397	945	16	387	713	6	12	245	135	9,9
	±8	±19	-0/+1,9	±8	±14	±0,4	±0,4	±4,9	±2,7	
32 kg	425	1023	20	425	775	8	16	254	142	10,8
	±8	±20	-0/+1,9	±8	±15	±0,4	±0,5	±5,0	±2,8	
40 kg	461	1099	20	435	833	8	16	265	154	13,7
	±9	±22	-0/+1,9	±9	±16	±0,4	±0,5	±5,3	±3,1	
50 kg	486	1175	20	479	890	8	16	282	158	18,2
	±10	±24	-0/+1,9	±10	±18	±0,4	±0,5	±5,6	±3,2	
63 kg	537	1270	22	508	963	8	25	290	171	24,6
	±11	±25	-0/+1,9	±10	±19	±0,4	±0,5	±5,8	±3,4	

BASIC DIMENSIONS OF ST/ST DELTA ANCHOR

A	B	C	D	E	F	G	ØH	I	J	K (kg)
254	593	265	10	243	450	4	10	148	89	1,6
6 kg	±5	±12	±0,43	±5	±9	±0,5	±0,4	±3,0	±1,8	
10 kg	293	695	12,5	282	526	5	10	172	104	2,8
	±6	±14	-0/+1,5	±6	±11	±0,5	±0,4	±3,4	±2,1	
16 kg	339	812	12,5	328	614	5	12	205	114	6,1
	±7	±16	-0/+1,5	±7	±12	±0,5	±0,4	±4,0	±2,3	
20 kg	370	877	16	357	663	6	12	225	122	8,0
	±7	±18	-0/+1,5	±7	±13	±0,5	±0,4	±4,5	±2,4	
25 kg	397	945	16	387	713	6	12	245	121	9,9
	±8	±19	-0/+1,5	±8	±14	±0,5	±0,4	±4,9	±2,4	
32 kg	432	1028	20	407	774	8	16	250	143	10,8
	±8	±20	-0/+1,5	±8	±15	±0,5	±0,5	±5,0	±2,8	
40 kg	461	1099	20	435	833	8	16	265	164	13,7
	±9	±22	-0/+1,5	±9	±17	±0,5	±0,5	±5,3	±3,3	
50 kg	486	1175	20	479	890	8	16	282	167	18,2
	±10	±24	-0/+1,5	±10	±18	±0,5	±0,5	±5,6	±3,3	
63 kg	537	1270	22	508	963	8	25	290	185	24,6
	±11	±25	-0/+1,5	±10	±19	±0,5	±0,5	±5,8	±3,7	

NOTE:

FOR GALVANISED ANCHORS - STEEL BALLAST IS WELDED DIRECTLY TO WINGS.
FOR ST/ST ANCHORS - LEAD BALLAST IS HELD INSIDE WELDED CHAMBER.

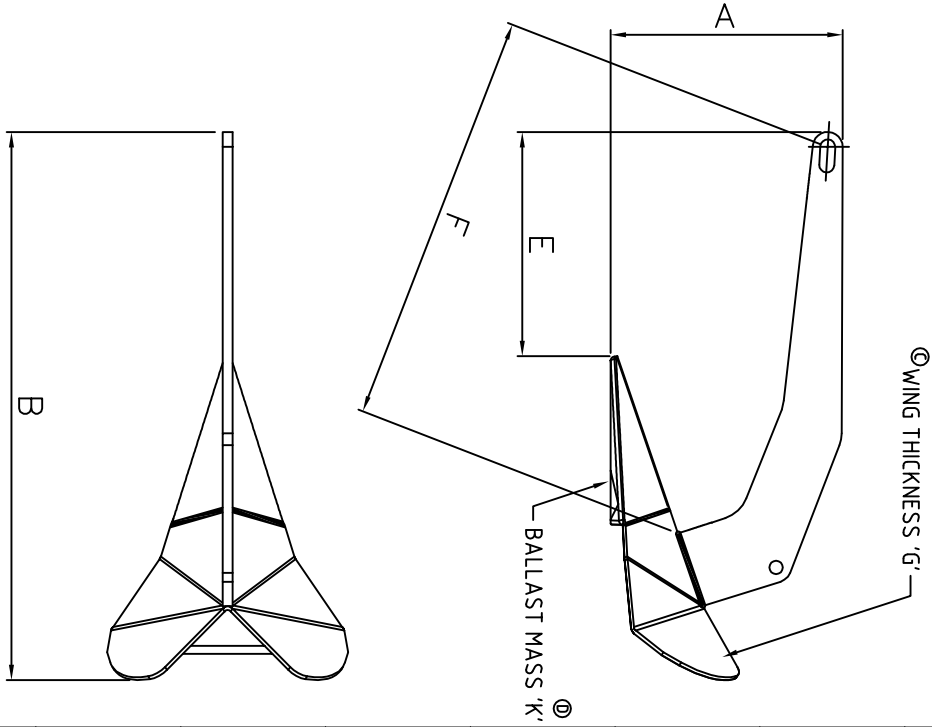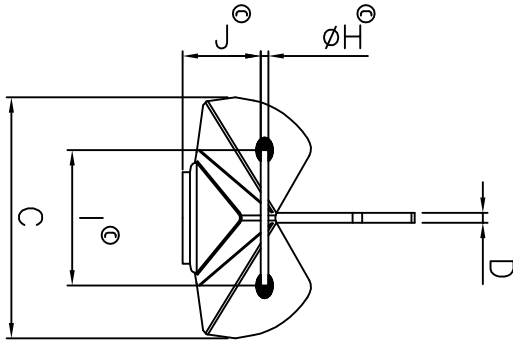

PART No.		60000431	
ORIGINAL SIZE A2		REFERENCE SCALE IN MM	
10 20 30 40 50			
Unauthorized use, manufacture or reproduction In whole or in part is prohibited			
A		B	
C		D	
E		F	
G		H	
I		J	
K		L	
M		N	
O		P	
Q		R	
S		T	
U		V	
W		X	
Y		Z	
AA		AB	
AC		AD	
AE		AF	
AG		AH	
AI		AJ	
AK		AL	
AM		AN	
AO		AP	
AQ		AR	
AS		AT	
AU		AV	
AW		AX	
AY		AZ	
BA		BB	
BC		BD	
BE		BF	
BG		BH	
BI		BJ	
BK		BL	
BM		BN	
BO		BP	
BQ		BR	
BS		BT	
BU		BV	
BW		BX	
BY		BZ	
CA		CB	
CC		CD	
CE		CF	
CG		CH	
CI		CJ	
CK		CL	
CM		CN	
CO		CP	
CQ		CR	
CS		CT	
CU		CV	
CW		CX	
CY		CZ	
DA		DB	
DC		DD	
DE		DF	
DG		DH	
DI		DJ	
DK		DL	
DM		DN	
DO		DP	
DQ		DR	
DS		DT	
DU		DV	
DW		DX	
DY		DZ	
EA		EB	
EC		ED	
EE		EF	
EG		EH	
EI		EJ	
EK		EL	
EM		EN	
EO		EP	
EQ		ER	
ES		ET	
EU		EV	
EW		EX	
EY		EZ	
FA		FB	
FC		FD	
FE		FF	
FG		FH	
FI		FJ	
FK		FL	
FM		FN	
FO		FP	
FQ		FR	
FS		FT	
FU		FV	
FW		FX	
FY		FZ	
GA		GB	
GC		GD	
GE		GF	
GG		GH	
GI		GJ	
GK		GL	
GM		GN	
GO		GP	
GQ		GR	
GS		GT	
GU		GV	
GW		GX	
GY		GZ	
HA		HB	
HC		HD	
HE		HF	
HG		HH	
HI		HJ	
HK		HL	
HM		HN	
HO		HP	
HQ		HR	
HS		HT	
HU		HV	
HW		HX	
HY		HZ	
IA		IB	
IC		ID	
IE		IF	
IG		IH	
II		IJ	
IK		IL	
IM		IN	
IO		IP	
IQ		IR	
IS		IT	
IU		IV	
IW		IX	
IY		IZ	
JA		JB	
JC		JD	
JE		JF	
JG		JH	
JI		JJ	
JK		JL	
JM		JN	
JO		JP	
JQ		JR	
JS		JT	
JU		JV	
JW		JX	
JY		JZ	
KA		KB	
KC		KD	
KE		KF	
KG		KH	
KI		KJ	
KK		KL	
KM		KN	
KO		KP	
KQ		KR	
KS		KT	
KU		KV	
KW		KX	
KY		KZ	
LA		LB	
LC		LD	
LE		LF	
LG		LH	
LI		LJ	
LK		LL	
LM		LN	
LO		LP	
LQ		LR	
LS		LT	
LU		LV	
LW		LX	
LY		LZ	
MA		MB	
MC		MD	
ME		MF	
MG		MH	
MI		MJ	
MK		ML	
MM		MN	
MO		MP	
MQ		MR	
MS		MT	
MU		MV	
MW		MX	
MY		MZ	
NA		NB	
NC		ND	
NE		NF	
NG		NH	
NI		NJ	
NK		NL	
NM		NN	
NO		NP	
NQ		NR	
NS		NT	
NU		NV	
NW		NX	
NY		NZ	
OA		OB	
OC		OD	
OE		OF	
OG		OH	
OI		OJ	
OK		OL	
OM		ON	
OO		OP	
OQ		OR	
OS		OT	
OU		OV	
OW		OX	
OY		OZ	
PA		PB	
PC		PD	
PE		PF	
PG		PH	
PI		PJ	
PK		PL	
PM		PN	
PO		PP	
PQ		PR	
PS		PT	
PU		PV	
PW		PX	
PY		PZ	
QA		QB	
QC		QD	
QE		QF	
QG		QH	
QI		QJ	
QK		QL	
QM		QN	
QO		QP	
QQ		QR	
QS		QT	
QU		QV	
QW		QX	
QY		QZ	
RA		RB	
RC		RD	
RE		RF	
RG		RH	
RI		RJ	
RK		RL	
RM		RN	
RO		RP	
RQ		RR	
RS		RT	
RU		RV	
RW		RX	
RY		RZ	
SA		SB	
SC		SD	
SE		SF	
SG		SH	
SI		SJ	
SK		SL	
SM		SN	
SO		SP	
SQ		SR	
SS		ST	
SU		SV	
SW		SX	
SY		SZ	
TA		TB	
TC		TD	
TE		TF	
TG		TH	
TI		TJ	
TK		TL	
TM		TN	
TO		TP	
TQ		TR	
TS		TT	
TU		TV	
TW		TX	
TY		TZ	
UA		UB	
UC		UD	
UE		UF	
UG		UH	
UI		UJ	
UK		UL	
UM		UN	
UO		UP	
UQ		UR	
US		UT	
UU		UV	
UW		UX	
UY		UZ	
VA		VB	
VC		VD	
VE		VF	
VG		VH	
VI		VJ	
VK		VL	
VM		VN	
VO		VP	
VQ		VR	
VS		VT	
VU		VV	
VW		VX	
VY		VZ	
WA		WB	
WC		WD	
WE		WF	
WG		WH	
WI		WJ	
WK		WL	
WM		WN	
WO		WP	
WQ		WR	
WS		WT	
WU		WV	
WW		WX	
WY		WZ	
XA		XB	
XC		XD	
XE		XF	
XG		XH	
XI		XJ	
XK		XL	
XM		XN	
XO		XP	
XQ		XR	
XS		XT	
XU		XV	
XW		XX	
XY		XZ	
YA		YB	
YC		YD	
YE		YF	
YG		YH	
YI		YJ	
YK		YL	
YM		YN	
YO		YP	
YQ		YR	
YS		YT	
YU		YV	
YW		YX	
YY		YZ	
ZA		ZB	
ZC		ZD	
ZE		ZF	
ZG		ZH	
ZI		ZJ	
ZK		ZL	
ZM		ZN	
ZO		ZP	



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.