

CHAIN COUNTER WIRING DIAGRAM SELECTION CHART

LEWMAR®

Contactor / Control Box	Sprint 1000	Sprint 1500	Sprint 3000A	A/man Power	Pacific V4000	Pacific V6000	V2, 3 & 5 / Concept1	V4 / Concept3
12V - 0052531	A	-	-	-	-	-	-	-
12V - 0052507	-	A	A	-	-	-	-	-
24V - 0052508	A	A	A	-	-	-	-	-
12V - 0052509	B	B	B	-	-	-	-	-
24V - 0052510	B	B	B	-	-	-	-	-
12V - 68000318	-	-	-	C	-	-	C	-
24V - 68000319	-	-	-	C	-	-	C	-
12V - 68000129	-	-	-	D	-	-	D	-
24V - 68000130	-	-	-	D	-	-	D	-
12V - 0052529	-	-	-	-	E	-	-	-
24V - 0052530	-	-	-	-	E	E	-	-
12V - 18000200	-	-	-	-	-	-	-	F
24V - 18000237	-	-	-	-	-	-	-	F
12V - 68000320	-	-	-	-	-	-	-	G
24V - 68000321	-	-	-	-	-	-	-	G

Pre 2004 & Custom Build Models

Can be used with all Lewmar custom windlasses, contact the sales office for a specific wiring diagram.

Sprint 900, Atlantic, Atlantic A, Atlantic C, AP700, AP1000 & AP1200 : Use Diagrams A* or B


 
Atlantic B & Concept / Ocean2 : Use Diagrams C or D - Sprint 3000 : Use Diagrams C or E

*Contactor 0052531 is NOT suitable for these products.

ELECTRIC
REMOTE
CONTROL
68000524



ELECTRIC
DECK SWITCH
69000016 - Up
69000017 - Down

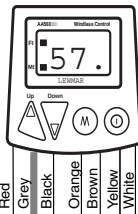

AA560

GUARDED
ROCKER
SWITCH
68000593

Refer to sensor splice
document for reed switch
connection details



Brown
Blue
Green

Blue

Black

Blue

Up

Common

Down

Red

Grey

Black

Orange

Brown

Yellow

White

Grey Screened

Grey Sensor

Resettable
Breaker/
Switch 3A




CIRCUIT
BREAKER/ISOLATOR

DUAL DIRECTION
CONTACTOR
12V - 0052507
24V - 0052508
12V - 0052531

WINDLASS
MOTOR

BATTERY

Diagram (A)

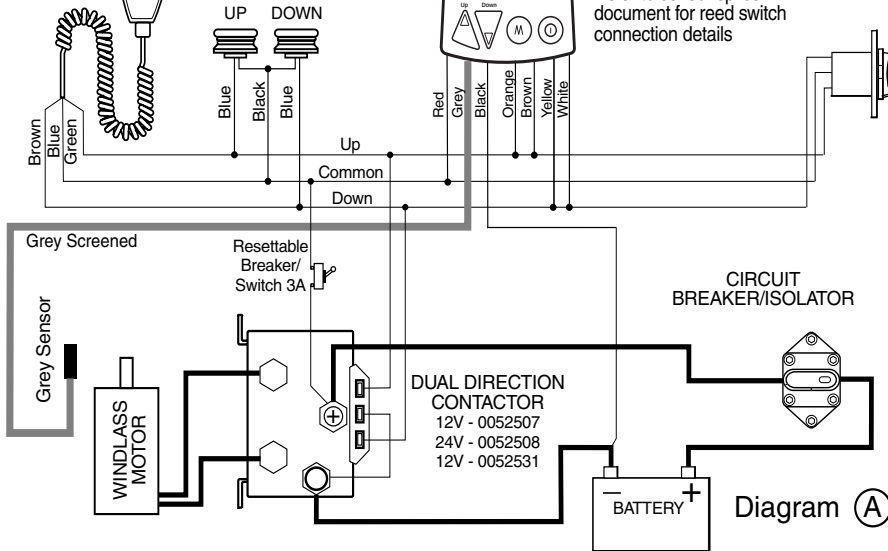


ELECTRIC
REMOTE
CONTROL
68000524

ELECTRIC
DECK SWITCH
69000016 - Up
69000017 - Down

AA560


GUARDED
ROCKER
SWITCH
68000593

Refer to sensor splice
document for reed switch
connection details

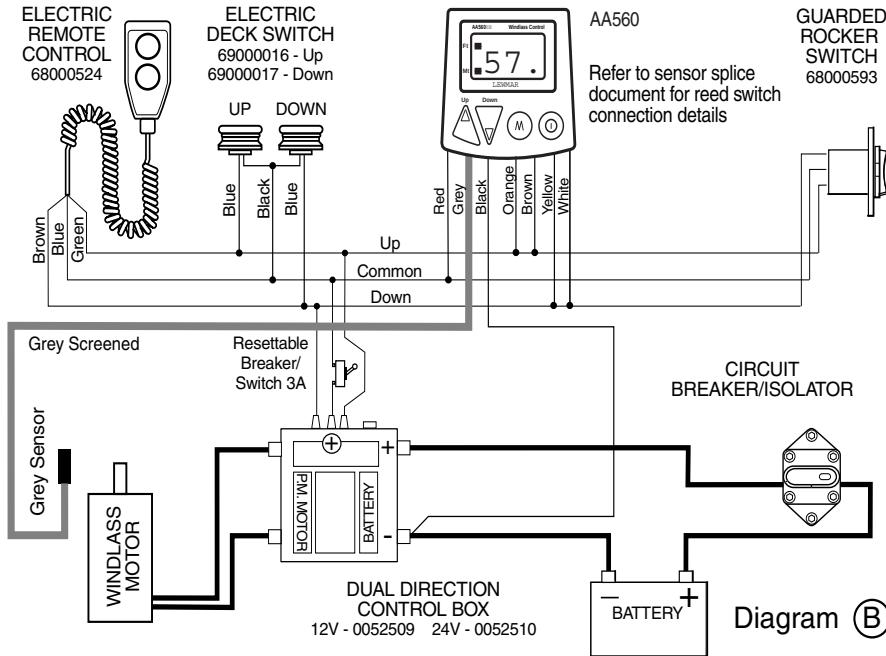

UP DOWN

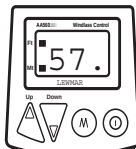

Refer to sensor splice document for reed switch connection details

GUARDED
ROCKER
SWITCH
68000593


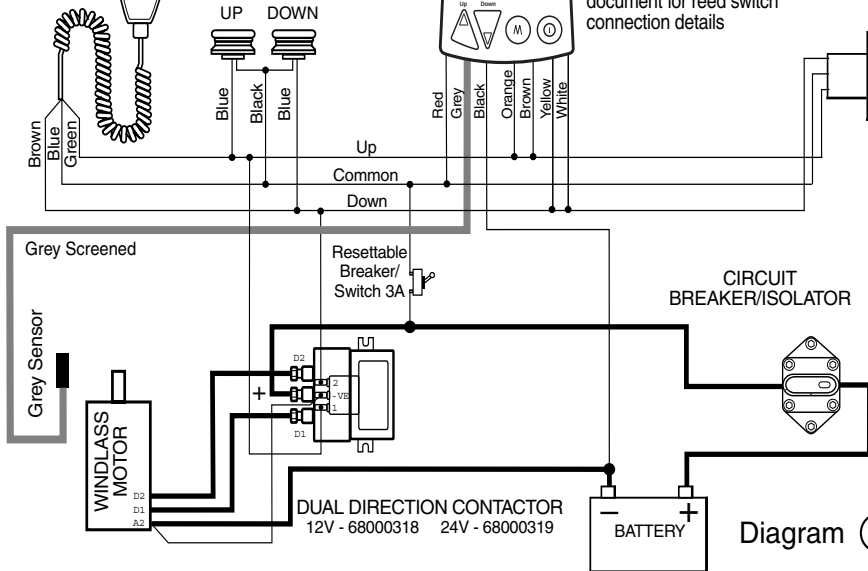


Diagram ©

UP DOWN

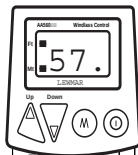

Refer to sensor splice document for reed switch connection details

GUARDED
ROCKER
SWITCH
68000593


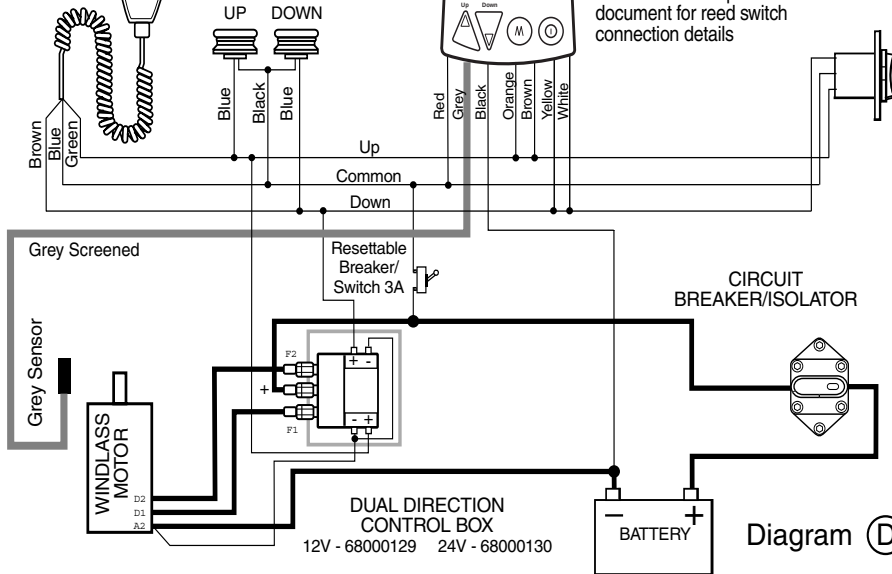


Diagram (D)

ELECTRIC
REMOTE
CONTROL
68000524




ELECTRIC
DECK SWITCH
69000016 - Up
69000017 - Down

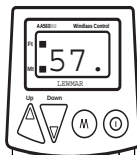

AA560

Refer to sensor splice
document for reed switch
connection details


GUARDED
ROCKER
SWITCH
68000593

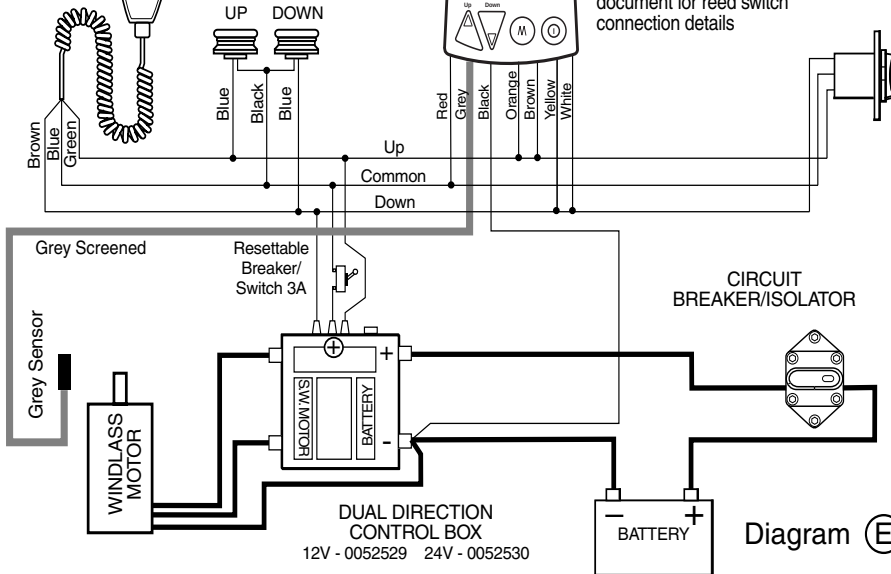

ELECTRIC
REMOTE
CONTROL
68000524




ELECTRIC
DECK SWITCH
69000016 - Up
69000017 - Down

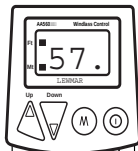

AA560

Refer to sensor splice
document for reed switch
connection details


GUARDED
ROCKER
SWITCH
68000593

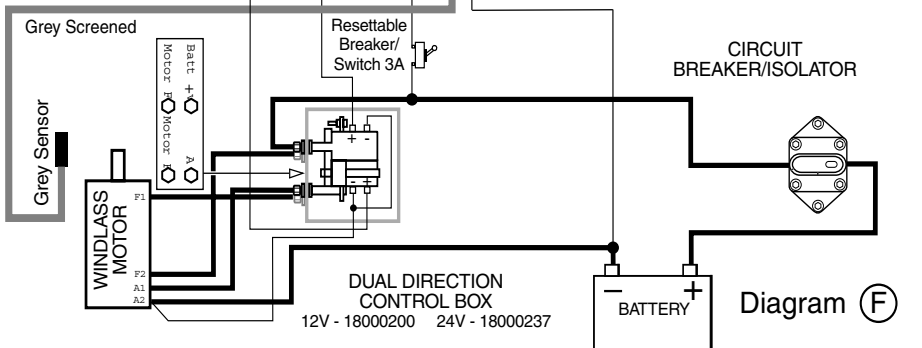

ELECTRIC
REMOTE
CONTROL
68000524




ELECTRIC
DECK SWITCH
69000016 - Up
69000017 - Down

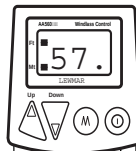

AA560

GUARDED
ROCKER
SWITCH
68000593

Refer to sensor splice
document for reed switch
connection details

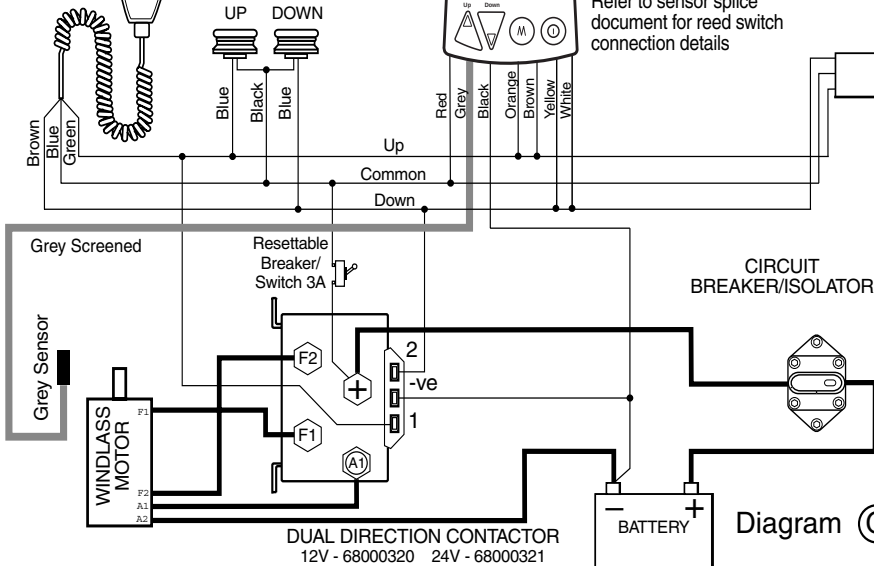



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.