


ROLLER SHADE

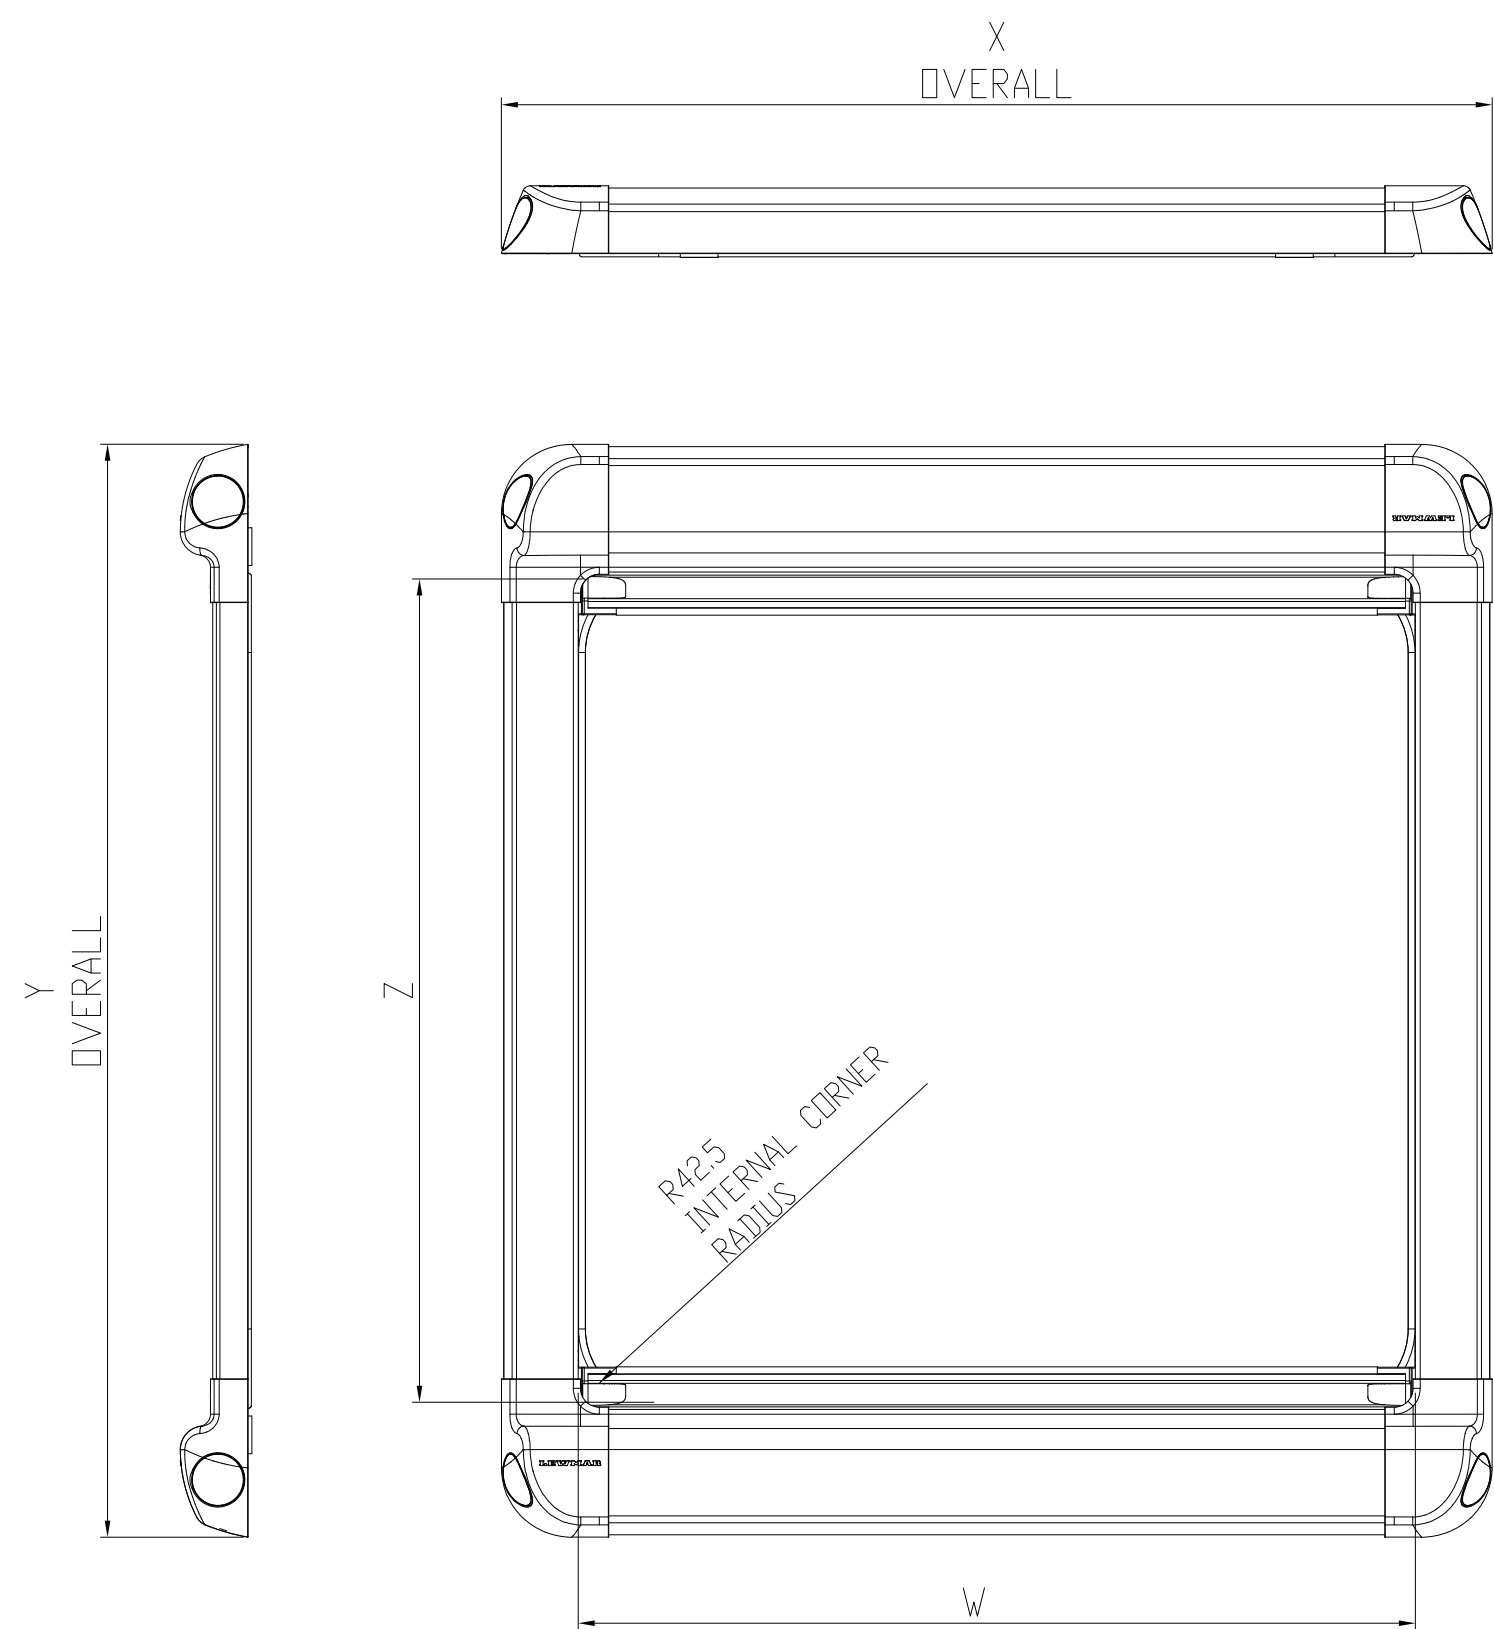

TOP LEVEL NO.	SIZE	W	X	Y	Z
367710100	10	262	344	398	262
367720100	20	349	431	340	204
367730100	30	459	541	465	329
367740100	40	423	505	559	423
367744100	44	444	526	580	444
367750100	50	509	591	515	379
367754100	54	509	591	530	394
367760100	60	509	591	645	509
367770100	70	629	711	765	629
367778100	78	721	803	907	771



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.