

WINDOWS

Purpose

This document outlines the field repair procedure to reseal 8600 series window vinyl seals that have ripped or stretched at the corners.

Safety

Read all instructions and safety labels before beginning any field repairs.

⚠ WARNING

All windows should be fully closed prior to towing or moving motorized RVs to prevent product damage

⚠ CAUTION

Always wear safety work gloves when handling a blade. Other safety equipment to consider would be eye protection depending on the nature of the procedure.


Resources Required

- Utility knife
- Black exterior sealant

Procedure

1. Using a utility knife, cut the vinyl seal at the affected corner(s) at a 45° angle (Fig. 1A).
2. Push the bottom and side of the seal into the gap between the glass and the frame (Fig. 1B).
3. Apply a bead of black exterior sealant in the corner of the frame to seal the window (Fig. 1C).

Fig. 1

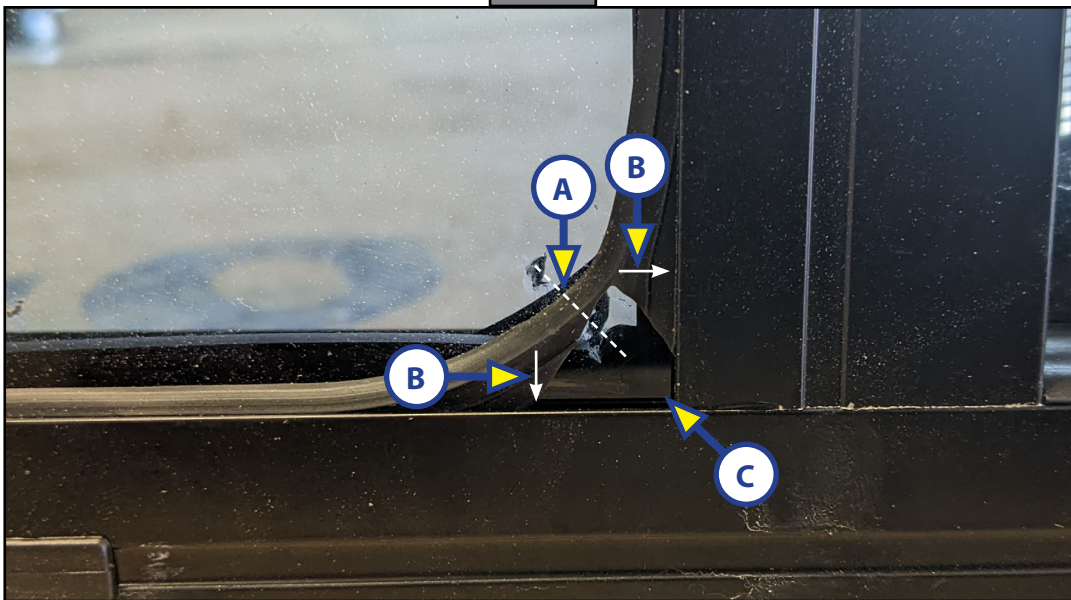



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.