




HAPPIJAC®

A Division of Lippert Components, Inc.

ADJUSTABLE TIMER INSTALLATION INSTRUCTIONS

After attaching motor to slide mechanism and setting the spacing between the drive rails:

1. Insert the Hex Connecting Shaft (with E-clip) into the motor with the short end toward the motor.
2. Slide the end of Timing Shaft over the hex shaft in the drive channel on the opposite side from the motor. Seat it completely.
3. Slide the motor end of the Adjustable Timer over the Hex Connecting Shaft and extend the Adjustable Timer until it seats against the E-clip which is seated against the motor. Recheck that the non-motor end has remained seated against the drive channel.
4. Install self drilling screws in the pilot holes provided to lock the shaft.

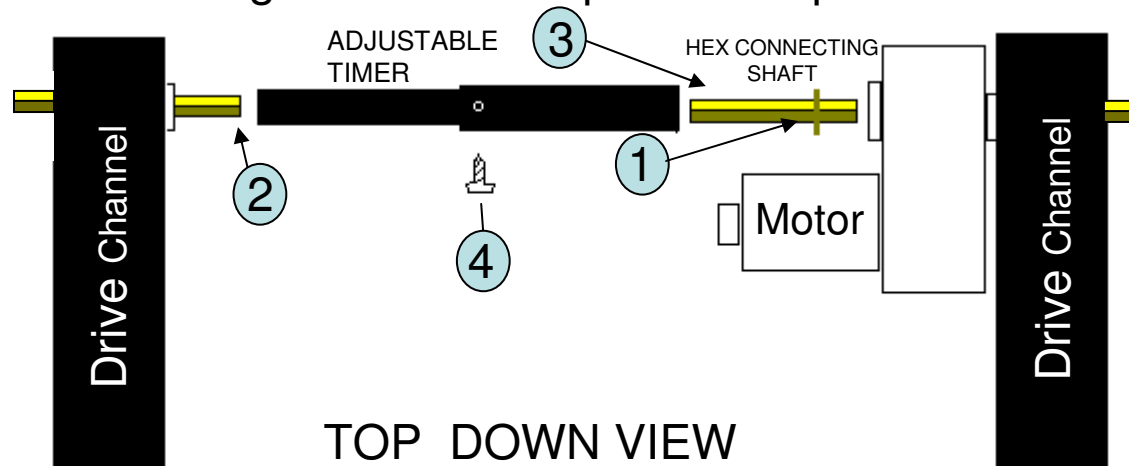



This manual is provided courtesy of RV Tech Cheat Sheet



Professional resources for the whole RV industry — *free.*

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

[Join our free Facebook group →](#)



Follow proper safety practices. If in doubt, consult a professional RV technician.