




T.I.P. Troubleshooting Information on Power Gear

ADJUSTING “IN” AND “OUT” STOPS ON LOW PROFILE SLIDE-OUT SYSTEM

Each rail of the slide-out system has individual “IN” and “OUT” stops. These stops can easily be adjusted using the procedure shown below.

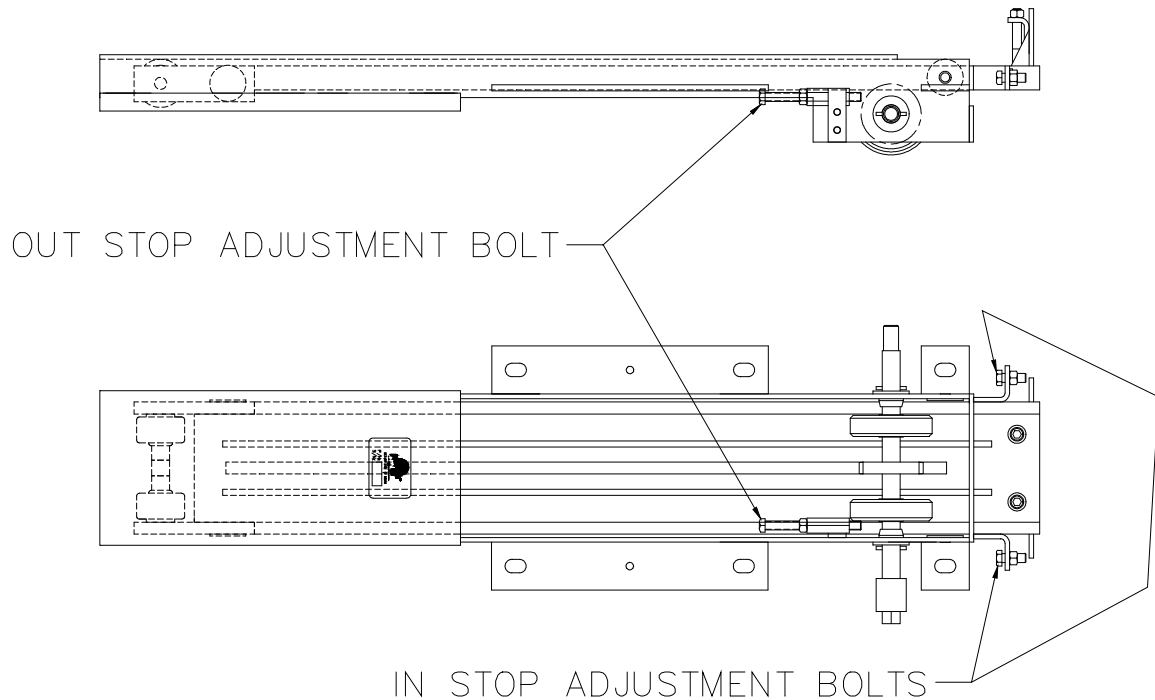

For the “OUT” stop.

1. Extend the room out to the desired position.
2. Loosen the jam nut (9/16”) on the adjustable stop bolt.
3. Screw the adjustable stop bolt out until it contacts the inner rail.
4. Tighten the jam nut to secure the bolt in the proper position.
5. Test the stop location by running the room. Repeat steps 1 – 4 to re-adjust.

For the “IN” stop.

1. Check the seal of the room prior to adjusting the stops.
2. Using a 9/16” wrench or ratchet adjust the “IN” stop bolts (there are 2) in or out to the desired location (note the locking nut does not require a jam nut).
3. Test the seal. If more adjustment is needed repeat steps 1 – 2.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.