



LIPPERT
COMPONENTS®

Formerly  Atwood Mobile Products

MPD 80458


BEVEL GEAR

USE ON ATWOOD P/N 8---- ONLY

Effective 11/21/07

Use only on Atwood Jacks

For a complete manual for Jack Screws, Fixed Mount Jacks and A-Frame Jacks consult instruction MPD 87840.

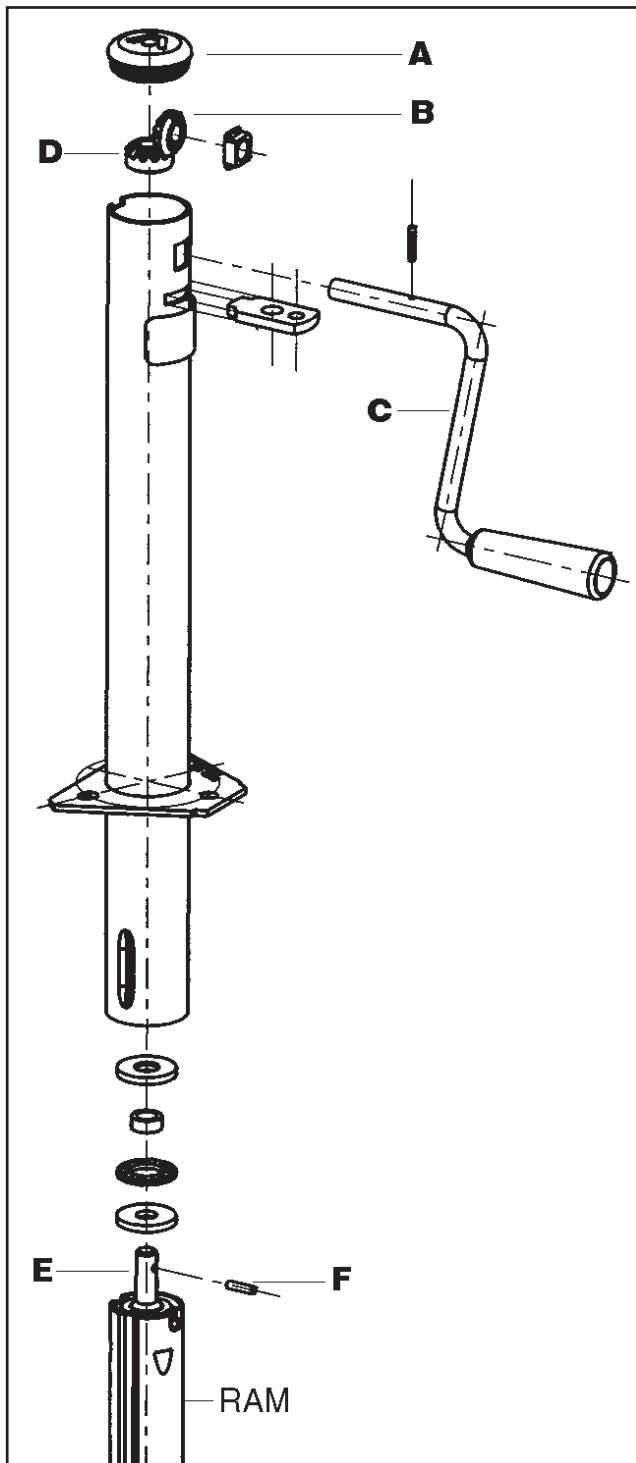

WARNING

PERSONAL INJURY/PRODUCT DAMAGE

- If jack is worn or damaged, or if it is not possible to operate the jack freely, jack must be replaced.
- Do not exceed rated capacities of jack.
- Remove any load on jack before repair operation.

REMOVAL PROCEDURE-

1. Remove jack from trailer and then remove the plastic cover-A.
2. Rotate vertical gear-B so that pin is vertical
3. Drive groove pin out of vertical gear using 5/32" punch. Slide handle shaft-C out and remove vertical gear-B.
4. Horizontal gear-D can now be removed from screw shaft-E.
5. Slide cross pin-F out of hole in screw shaft-E.
6. Remove ram and screw from housing.

INSTALLATION PROCEDURE-

1. Insert ram and screw into housing.
2. Thoroughly lubricate gears with high pressure grease.
3. Replace cross pin-F and horizontal gear-D.
4. Replace handle-C through housing and through vertical gear-B.
5. Install groove pin using punch.
6. Snap cap-A into place.



This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.