


ELECTRONICS


The blue light between the arrows should flash (Fig. 1A) when pushing the light button (Fig. 1B & 2B) and either arrow button (Fig. 1C & 2C). If the blue light does not flash (Fig. 2D) the battery may have failed. Follow instructions below to change battery.

Fig. 1 (Good Battery)

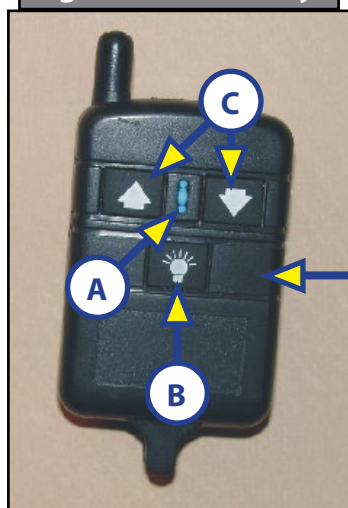

Remote Key Fob
Part #179839

Fig. 2 (Failed Battery)

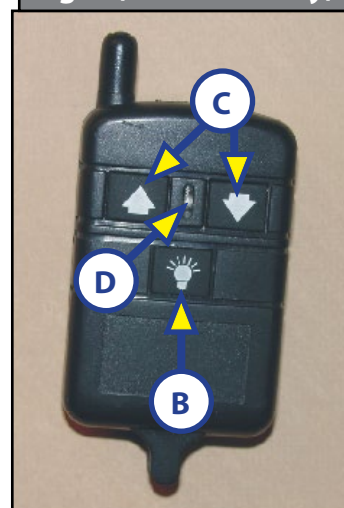

On the back of the fob:

1. Using a Phillips Head screwdriver, remove the screw from the bottom of the fob (Fig. 3E).
2. Separate the back cover (Fig. 3F) of the fob from the fob body (Fig. 4G).
3. Remove old battery (Fig. 4H) and replace with new.
4. Replace back cover and Phillips Head screw.
5. Push arrow buttons (Fig. 1C & 2C) to test blue light.

Fig. 3


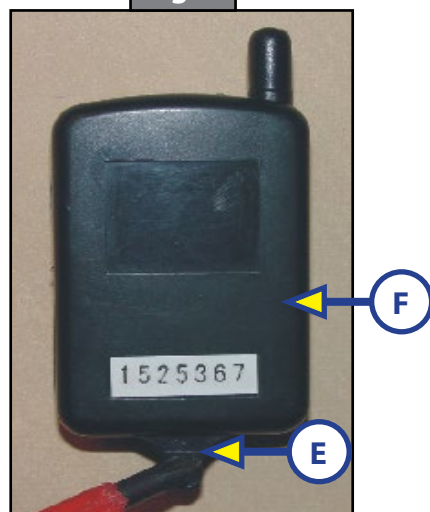


Fig. 4



As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at (574) 537-8900 or by email at customerservice@lci1.com. Self-help tips, technical documents, product videos and a training class schedule are available at www.lci1.com or by downloading the MyLCI app.

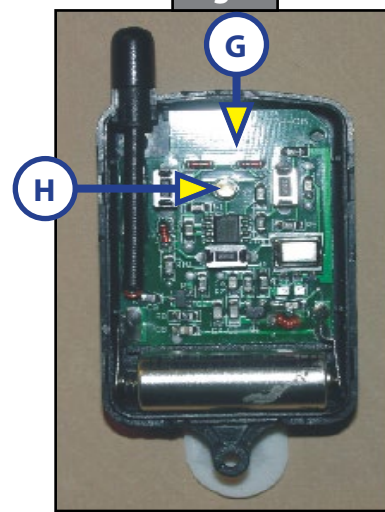

This manual is provided courtesy of **RV Tech Cheat Sheet**



Professional resources for the whole RV industry — free.

We put manuals, wiring diagrams and hard-won tech knowledge in every technician's hands, so repairs get done right the first time, techs work faster, and RV owners everywhere get better service.



rvtechcheatsheet.com/manuals

Find thousands more RV manuals, wiring diagrams and parts lists

RV techs: share fixes, ask questions and learn from each other.

Join our free Facebook group →



Follow proper safety practices. If in doubt, consult a professional RV technician.